TC-26F

McCORMICK

PARTS CATALOG

FARMALL TRACTORS

A and B

INTERNATIONAL HARVESTER COMPANY
180 North Michigan Avenue Chicago 1, Illinois, U.S.A.

TC-26F
PARTS CATALOG

FARMALL
A AND B
TRACTORS

The black tabs shown on the right-hand side of this page line up with the corresponding tabs in the catalog. Tabs are quickly located by bending the catalog.

GROUP INDEX

CARBURETED ENGINE

ELECTRICAL SYSTEM

CHASSIS

ATTACHMENTS

DETAILS OF ASSEMBLY

NUMERICAL INDEX

PARTS CATALOG

REVISION NO. 1

This is a complete parts catalog including Revision No. 1.

Add the following part numbers to the Numerical Index.

Part No.	Page No.
30 718 DXA	82
351 955 R1	82
53 795 V	82

TC-26F

Farmall®
A and B
Tractors

Issued 7-'55.

PRINTED IN UNITED STATES OF AMERICA

The Importance of ADEQUATE PARTS and SERVICE

The wise purchaser of a new machine gives consideration to the following factors:

1. *Original quality*
2. *Availability of service parts*
3. *Availability of adequate service facilities*

In many cases the machine becomes the only means of performing certain tasks that must be done in a limited period of time. Wear and even breakage of parts are to be expected due to operating conditions. However, the user can still be assured of getting his work done on time if service parts and adequate service facilities are available.

Foresighted International Harvester dealers make every effort to provide good service and maintain a completely adequate stock of service parts.

INSTRUCTIONS FOR ORDERING PARTS

(a) All parts orders should be sent to the parts depot. Give complete address, state the county and railroad station (when shipping point is different than post office), also whether shipment is to go by parcel post, express, truck, or freight.

(b) When ordering parts, give the IH part number, including suffix or prefix letters. To facilitate identification of these parts, "Serial Numbers" assigned to machines, if any, should be furnished.

(c) Parts should be ordered on the standard parts order blank. The parts should be arranged in sequence by part numbers to facilitate service on orders at the parts depot.

(d) Claims for shortage or error in the handling of an order for parts must be made within 30 days following receipt of shipment.

All illustrations and descriptive matter in this publication apply to International Harvester products sold under the International, McCormick, or McCormick-International trade name.

We reserve the right to make changes or add improvements in the design or construction of parts at any time without incurring the obligation to install such changes on products previously delivered.

INTRODUCTION

This catalog contains a complete list of parts for Farmalls-A, -AV, -B, and -BN tractors. All of these tractors have 4-cylinder, 3 x 4-inch, carbureted engines. (Either gasoline, kerosene or distillate gasoline.)

This catalog supersedes TC-26-E, which should be destroyed.

The parts in this catalog are grouped according to their location in the tractor. Each group is preceded by an "exploded view" which clearly illustrates each part in its correct relation to the other parts in the illustration.

Following is a brief summary of the simplified system used in compiling this catalog. It is to your benefit to study this summary carefully:

(1) Parts Numbers. In cases where the part number suffix letters have been advanced, the new part will replace the old unless otherwise indicated. For example: Cylinder head gasket 43 353 DD will work for 43 353 DB or DC.

(2) Illustrations. The "exploded views" of each unit shows the individual parts clearly and in their proper relationship to each other. This method of illustrating makes it easy to locate parts, whether they are ordered by description or by part number. Reference numbers only are shown in each illustration. Parts in the illustrations without reference numbers are the same as corresponding parts with reference numbers. These numbers correspond to those in the reference number column in the list of parts which follows each "exploded view."

(3) Method of Listing. The parts list is divided into groups corresponding to units in the tractor. Parts are listed in order by reference number of illustration, followed by a full description, serial number, and quantity required per tractor. All parts for which no serial number is shown are used in the first tractor having serial No. 501 and are still current.

(4) Partial Assemblies and Complete Assemblies. You will find that some of the numbers are followed by the letters "X" or "Y." The suffix letter "X" indicates an assembly of parts which may be either a partial or a complete assembly. The suffix letter "Y," in nearly all cases, indicates a complete assembly. For example: 9052 DXA *cylinder head with studs and valve guides* is a partial assembly, whereas 9052 DYA represents the foregoing *with valves and springs added,* and is a complete assembly.

You will also find some numbers are followed by the suffix R11 (one, one) through R89 (eight, nine) and R91 (nine, one) through R99 (nine, nine). The suffix R11 indicates an assembly of parts which may be either a partial or a complete assembly (comparable to the above system using "X"). The suffix R91, in nearly all cases, indicates a complete assembly (comparable to the above system using "Y").

The "assemblies" are shown at the back of the catalog under the heading "Details of Assembly." They are listed in numerical order, together with a list of the parts comprising each assembly, except assemblies made up of less than four parts. The latter are fully covered by description in the "Unit Lists" section.

Items consisting of two or more components not serviced separately are so supplied because disassembly of the components is considered impractical.

In cases where the individual parts of an assembly are not available for service those parts are marked with the symbol §. In some instances, such individual parts are shown in the "Unit Lists" with a notation giving the part number which is to be used when ordering. For example: "6 088 DR valve guide (order 356 583 R11).

(5) Index. On page 5 you will find an alphabetical index which is divided into four classifications: Engine, Electrical System, Chassis, and Attachments. This index should be used to locate unit lists and illustrations. A numerical index at the back of the catalog contains a complete list of parts, showing the page numbers where each part is listed and described.

(6) Standard Parts. The so-called hardware items—such as bolts, screws, nuts, etc.—are in most cases indented and listed under the respective individual parts with which they are used. They should be ordered by part number or by description and size, as they are not component parts of the pieces they attach.

(7) Serial Numbers and Letters. The engine serial numbers and letters for these tractors are stamped on a pad on the upper right side of the engine crankcase. The chassis (or tractor) serial numbers and letters are stamped on a name plate on the left seat support bracket.

On tractors 501 to 201 000 the engine and chassis serial numbers correspond; however, starting with 201 001 no attempt is made at the factory to have the engine and chassis serial numbers correspond.

Following is a list of the letters which precede serial numbers for these tractors:

FAA for Farmall-A tractors.
FAAV for Farmall-AV tractors.
FAB for Farmall-B tractors.
FABN for Farmall-BN tractors.
(See Note below).

Note: The serial numbers for Farmall-BN tractors between 39 715 and 48 350 had prefix letters FAA, and in addition they were stamped with an "X-7" suffix. However, starting with 48 350 the suffix "X-7" was eliminated and the prefix letters were changed to "FABN."

Customers should supply engine and tractor chassis serial numbers—including all prefix and suffix letters—when ordering parts.

(8) Prices. Parts prices will be found in the CH-219 tractor and engine price list, which is issued separately and includes both current and obsolete parts.

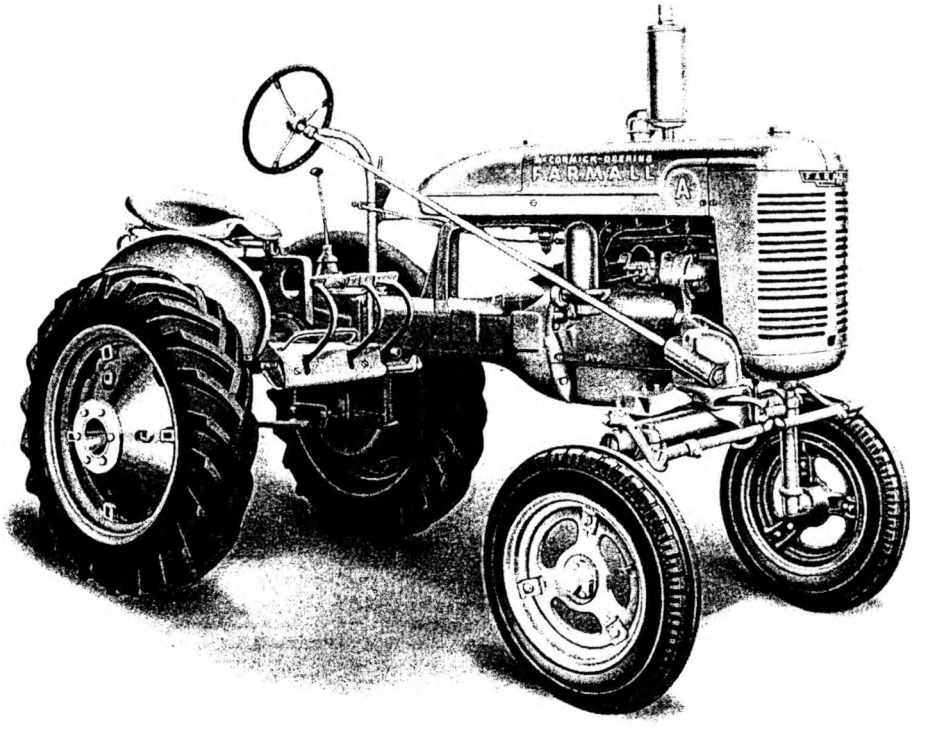

Right side view of the Farmall-A tractor. The adjustable front axle shown is a special feature.

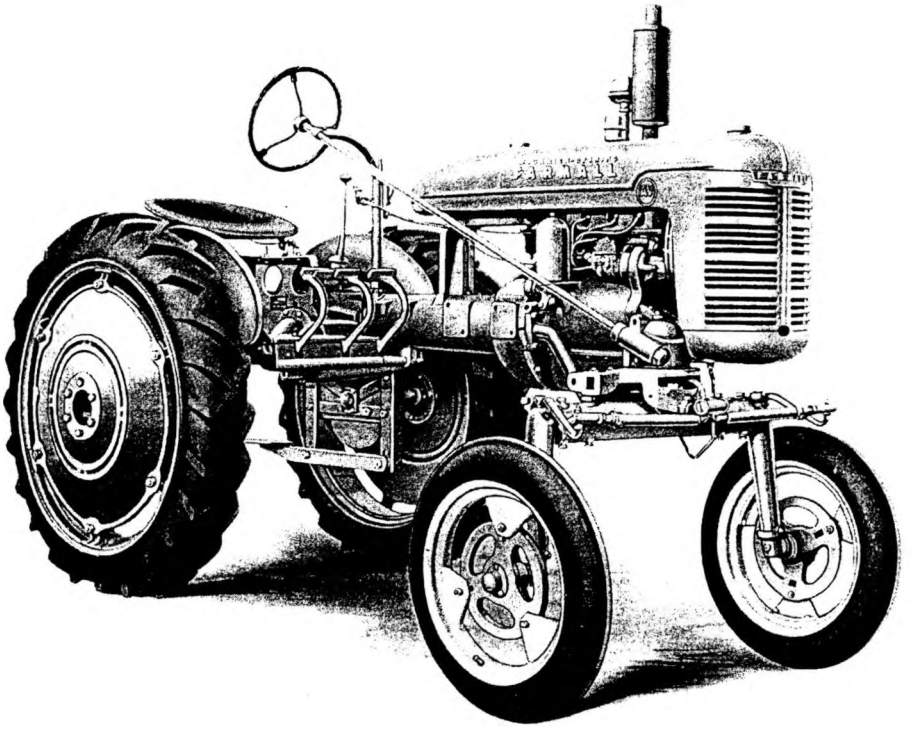

Right side view of the Farmall-AV high-clearance tractor. The muffler attachment shown is a special feature.

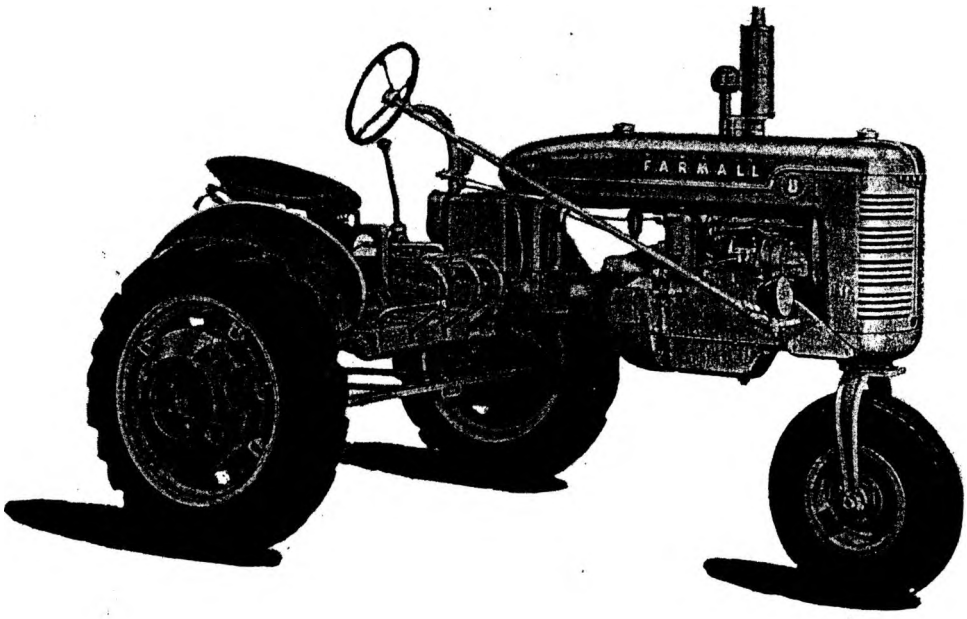

Right side of the Farmall-B tractor. The rear wheel weights, muffler, and electric lighting equipment shown are special features.

INDEX TO UNITS

Description	List Page	Illust. Page
ENGINE		
Camshaft and related parts	13	12
Carburetor—Marvel-Schebler	27	26
—Zenith	29	29
Connecting rods	15	15
Crankcase	13	12
Crankcase oil pan	20	20
Crankshaft and related parts	15	15
Cylinder head	9	8
Cylinder sleeves	15	15
Decals—package	131	
Exhaust pipe	25	24
Fan	22	22
Front cover	13	12
Gaskets—package assorted	130	
Governor and connections	32	32
Lubricating oil filter	35	35
Lubricating oil pump	20	20
Manifold	25	24
Oil pressure gauge	13	12
Overhaul and improvement packages	132	
Pistons and pins	15	15
Service engines	7	
Starting crank	15	15
Valves and valve levers	9	8
ELECTRICAL SYSTEM		
Battery ignition distributor	40	40
Battery ignition switch	42	42
Battery ignition unit	39	39
Generator and connections (Bosch)	49	49
(Delco-Remy)	50	50
Headlights or rear light	51, 52	51, 52
Lighting (Bosch)	58	
Lighting and Starting (Delco-Remy)	64	
Lighting switch	54	54
Magneto—International, Type H-4	45	44
Magneto ignition switch and cable	43	43
Spark plugs and cables	38	38
Wiring diagrams	57, 63	56, 62
CHASSIS		
Air cleaner	75	75
Clutch	81, 82	80, 82
Clutch housing, controls and connections	83	83
Decals—package assorted	131	
Differential	90	90
Drawbar	122, 125	122, 124
Fender	119	119
Final drive	93	92
Foot brakes	118	118
Front axle	104	102, 103
Front wheels	109	108
Fuel strainer and shut-off valves	78	76
Fuel tank and connections	77	76
Gaskets—package assorted	130	
Gasoline tank and connections	77	76
Governor controls	79	79
Grille	73	72
Hand lubricators	128, 129	128, 129
Hood	73	72
Overhaul and improvement packages	133	
Platform	120	120
Radiator and grille	73	72
Rear wheels	115	114
Seat	120	120
Steering knuckle	104	102, 103
Steering mechanism	97	96
Tools and toolbox	127	127
Transmission	87	86
Transmission case and differential	90	90
Transmission gear shifter mechanism	87	86
ATTACHMENTS—Special		
Adjustable front axle	107	102, 103
Adjustable front wheel	113	108
Air pipe extension	139	138
Belt pulley	153, 156, 163, 167	152, 162, 166
Drawbar pintle hook	173	173
Fan and generator pulley hub	23	22
Flywheel ring gear	19	
Front axle (Heavy Duty)	107	
Front wheels	113	108
Front wheel weights	174	174
Heat indicator	136	136
Kerosene-Distillate burning attachment	11	
Muffler	142	142
Pneumatic "Lift-All"	143, 145, 147, 149	144, 145, 146, 148
Pneumatic tire pump—Enginair	150	150
—Schrader	151	151
Power take-off	153, 159, 163, 171	152, 158, 162, 170
Precleaner	140	140
Prescreener	141	141
Radiator shutter and controls	136	136
Rear wheels and rims	117	114
Rear wheel weights	175, 176	175, 176
Spark arrester	142	142
Swinging drawbar	91, 93	90, 93
Wheel weights—front	174	174
—rear	175, 176	175, 176

DETAILS OF ASSEMBLY ..... page 180

NUMERICAL INDEX ..... page 208

MEMORANDA

SERVICE ENGINES

354 076 R92 Gasoline Burning Engine
354 079 R92 Kerosene Burning Engine
354 082 R92 Distillate Burning Engine

These are standard production engines, complete, with fan bracket, flywheel, and manifold. The following units are not included and should be ordered separately if required.

Carburetor
Fan Assembly
Magneto
Spark Plug Cable Assembly

NOTE: When service engines are required using special equipment, such as high altitude pistons, order the standard engine part number and the attachment required.

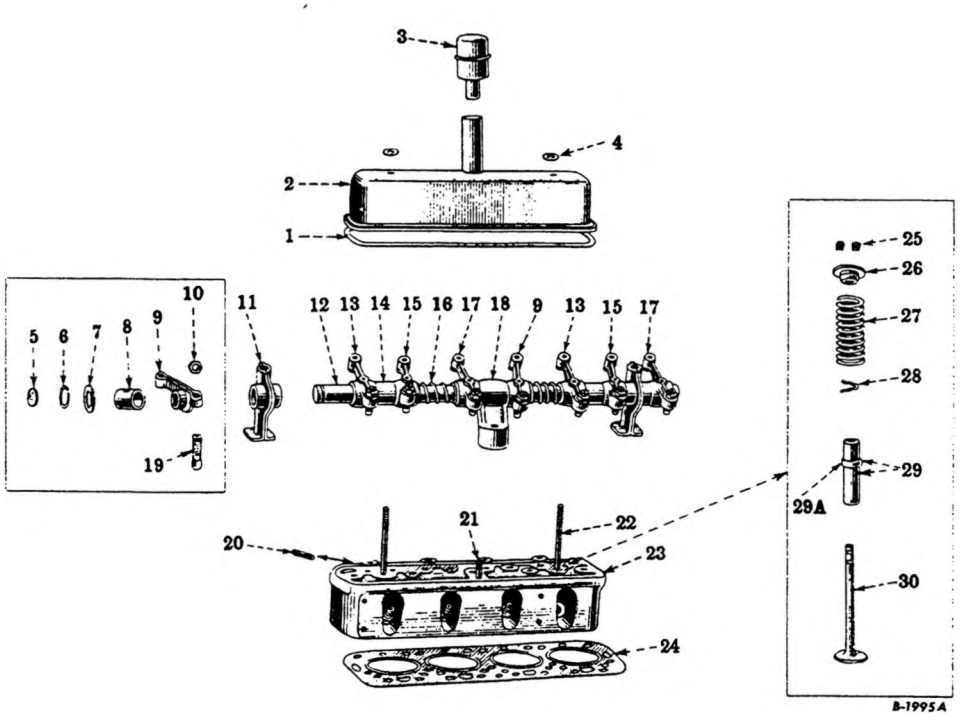

CYLINDER HEAD, VALVE COVER, VALVES AND VALVE LEVERS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CYLINDER HEAD, VALVE COVER, VALVES AND VALVE LEVERS		
43378 DB	1	Valve Cover Gasket		1
43379 DAXA	2	Valve Cover		1
49049 DX	3	Cylinder Head Breather		1
62886 D	4	Valve Stud Nut Washer (Optional with 357374 R11)		2
357374 R1	4	Valve Stud Nut Washer (Optional with 62886 D)		2
172528	5	Expansion Plug, 9/16"		2
43375 D	6	Valve Lever Shaft Snap Ring		2
43374 D	7	Valve Lever Shaft Spring Washer		2
24564 DA	8	Valve Lever Bushing (Used with 43363 DBX, 43364 DBX, 43365 DBX, 43366 DBX, 43363 DBY, 43364 DBY, 43365 DBY, 43366 DBY, 63195 DAX, 63195 DAY, 63196 DAX, 63196 DAY, 63197 DAX, 63197 DAY, 63198 DAX and 63198 DAY)		2
43365 DBX	9	Exhaust Valve Lever, L.H., with Bushing, 24564 DA (Optional with 357289 R91)		2
43365 DBY	9	Exhaust Valve Lever, L.H., 43365 DBX, with Screw, 16067 DA and Nut, 38763 H (Optional with 357291 R91)		2
357289 R91	9	Intake or Exhaust Valve Lever (Optional with 43365 DBX)		2
357291 R91	9	Intake or Exhaust Valve Lever, L.H., 357289 R91, with Screw, 16067 DA and Nut, 38763 H (Optional with 43365 DBY)		2
38763 H	10	Valve Lever Adjusting Screw Nut		8
42099 DA	11	Valve Lever Shaft Bracket, End		2
352521 R11	12	Valve Lever Shaft, Complete (Will Work for 43362 DAX)		1
172528		Expansion Plug, 9/16" Type 2		2
43364 DBX	13	Intake Valve Lever, R.H., with Bushing, 24564 DA (Optional with 357290 R91)		2
43364 DBY	13	Intake Valve Lever, R.H., 43364 DBX, with Screw 16067 DA and Nut, 38763 H (Optional with 357292 R91)		2
357290 R91	13	Intake or Exhaust Valve Lever (Optional with 43364 DBX)		2
357292 R91	13	Intake or Exhaust Valve Lever, R.H., 357290 R91 with Screw, 16067 DA and Nut, 38763 H (Optional with 43364 DBY)		2
43373 D	14	Valve Lever Spacer		2
43363 DBX	15	Intake Valve Lever, L.H., with Bushing, 24564 DA (Optional with 357289 R91)		2
43363 DBY	15	Intake Valve Lever, L.H., 43363 DBX, with Screw, 16067 DA and Nut, 38763 H (Optional with 357291 R91)		2
357289 R91	15	Intake or Exhaust Valve Lever (Optional with 43363 DBX)		2
357291 R91	15	Intake or Exhaust Valve Lever, L.H., 357289 R91 with Screw, 16067 DA and Nut, 38763 H (Optional with 43363 DBY		2

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CYLINDER HEAD, VALVE COVER, VALVES AND VALVE LEVERS—Continued		
24541 D	16	Valve Lever Spring		2
43366 DBX	17	Exhaust Valve Lever, R.H. w Th Bushing, 24564 DA		
		(Optional with 357290 R9)		2
43366 DBY	17	Exhaust Valve Lever, R.H. 43366 DBX, with Screw, 16067 DA		
		and Nut, 36763 H (Optional with 357292 R91)		2
357290 R91	17	Intake or Exhaust Valve Lever (Optional with 43366 DBX)		2
357292 R91	17	Intake or Exhaust Valve Lever, R.H. 357290 R91 with Screw,		
		16067 DA and Nut, 36763 H (Optional with 43366 DBY)		2
6029 DA	18	Valve Lever Shaft Bracket, Center		1
16067 DA	19	Valve Lever Adjusting Screw		8
45223 DA	20	Cylinder Head to Manifold Stud		6
24537 DA	21	Valve Lever Shaft Oiler Stud		1
220066		Hex Nut, 3/8" N.C.		1
45574 D	22	Valve Cover Stud		2
103026		Hex Nut, 3/8" N.F.		4
103321		Lockwasher, 3/8"		2
6716 DAX	23	Cylinder Head with Studs and Valve Guides, Complete ("A" and "B")		
		(Order 57481 DB)	501 to 22375	1
9052 DXA	23	Cylinder Head, Complete with Studs and Valve Guides		
		(Will Work for 6716 DBX)	22376 Up	1
9052 DYA	23	Cylinder Head, 9052 DXA, Complete with Valves and Springs		
		(Will Work for 6716 DBY)	22376 Up	1
57481 DB	23	Cylinder Head, Complete, 9052 DXA with Two Front Fuel Tank		
		Support Spacer, 24523 D and Bracket, 350621R1 ("A" and "B")		
		(Will Work for 6716 DAX)	501 to 22375	1
57482 DB	23	Cylinder Head, Complete, 9052 DYA with Two Spacers, 62493 D		
		and Bracket, 350621 R1 ("A" and "B") (Will Work for 6716 DAY)	501 to 22375	1
43353 DD	24	Cylinder Head Gasket		1
42026 D	25	Valve Spring Collar Key		16
42040 D	26	Valve Spring Upper Seat (Will Work for 47278 D)		8
24544 DA	27	Valve Spring		8
42098 D	28	Valve Stem Retainer		8

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CYLINDER HEAD, VALVE COVER, VALVES AND VALVE LEVERS—Continued		
6088 DR	29	Valve Guide (Order 356583 R11)		8
356583 R11	29	Valve Guide, 356583 R1 and Seat, 356588 R1)		
		(Will Work for 6088 DR)		8
356583 R1	29A	Valve Guide (Used with Valve Spring Lower Seat, 356588 R1)		8
42024 D	30	Intake Valve		4
42025 DA	30	Exhaust Valve		4
50619 DA		Kerosene or Distillate Burning Attachment (Special)		
		(Not "B" or "BN")	501 to 41329	1
		("B" and "BN" only)	501 to 40192	1
58275 DC		Kerosene or Distillate Burning Attachment (Special)		
		(Heat Indicator, 53619 DC must also be installed unless		
		tractor is already so equipped) (Not "B" or "BN")	41330 Up	1
		("B" and "BN" only)	40193 Up	1
356588 R1		Valve Spring Lower Seat		8

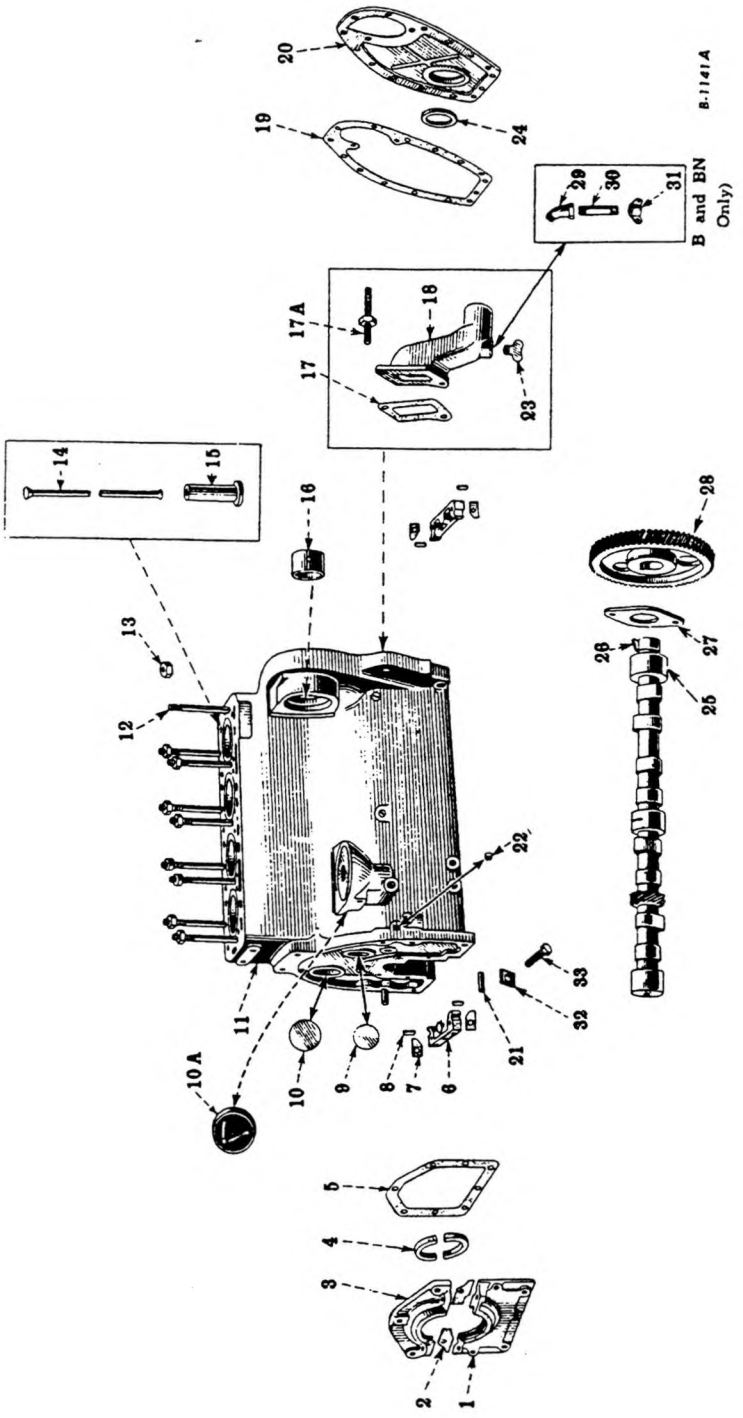

CRANKCASE, FRONT COVER, CAMSHAFT AND RELATED PARTS

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKCASE, FRONT COVER, CAMSHAFT AND RELATED PARTS		
6102 D	1	Crankshaft Rear Oil Seal Retainer, Lower		1
179817		Cap Screw, 5/16 x 7/8" N.C. Hex Head		5
179795		Cap Screw, 1/4 x 3/4" N.C. Hex Head		2
103320		Lockwasher, 5/16"		5
103319		Lockwasher, 1/4"		2
43447 D	2	Crankshaft Rear Oil Seal Retainer Gasket, Center		2
6101 D	3	Crankshaft Rear Oil Seal Retainer, Upper		1
179817		Cap Screw, 5/16 x 7/8" N.C. Hex Head		3
103320		Lockwasher, 5/16"		3
24425 D	4	Crankshaft Rear Oil Seal Felt		2
43448 D	5	Crankshaft Rear Oil Seal Retainer Gasket		1
6100 D	6	Crankshaft Oil Seal Retainer Plate, Front and Rear		2
43446 D	7	Crankshaft Oil Seal Retainer Plate Gasket		4
43445 D	8	Crankshaft Oil Seal Retainer Plate Felt Plugs		4
172576	9	Camshaft Rear Bearing Expansion Plug, 1-5/8" (Same as 13001 D)		1
172592	10	Crankcase Water Jacket Expansion Plug, 2" (Same as 23139 V)		1
43987 DB	10A	Oil Pressure Gauge		1
57468 DE	11	Crankcase, 354895 R92, with Set of Four Cylinder Sleeves and Pistons, 356315 R91, and Bracket, 350621 R1 ("A" and "B" Only) (Gasoline and Distillate) (Will Work for 6342 DX, DAX, DBX, DCX and DDX) (See NOTE)	501 to 22319	1
356725 R93	11	Crankcase, 354895 R92 with Set of Four Cylinder Sleeves and Pistons, 359036 R91, and Bracket, 350621 R1 ("A" and "B" Only) (Kerosene) (Will Work for 6342 DDX and 57468 DD) (See NOTE)	501 to 22319	1
352719 R94	11	Crankcase with Cylinder Sleeves and Pistons, Complete (Gasoline and Distillate) (Will Work for 6342 DEX, DGX and DHX) (See NOTE)	22320 Up	1
359035 R91	11	Crankcase with Cylinder Sleeves and Pistons, Complete (Kerosene) (Will Work for 6342 DHX and 352719 R93) (See NOTE)	22320 Up	1
34433 D	12	Cylinder Head Stud		9
4097 DA	13	Cylinder Head Stud Nut		9
357548 R1	14	Valve Push Rod (Optional with 47386 D)		8
47386 D	14	Valve Push Rod (Optional with 357548 R1)		8
47384 D	15	Valve Tappet (Optional with 356979 R1)		8
356979 R1	15	Valve Tappet (Optional with 47384 D)		8
43439 DBR	16	Magneto and Governor Pinion Bushing		1
46871 D	17	Water Inlet Elbow Gasket		1
49279 D	17A	Generator Brace Stud	58779 Up	1
		Special for Starting and Lighting	501 to 58778	
103321		Lockwasher, 3/8"		1
		NOTE - When Ordering a Service Crankcase for Tractors Operating in High Altitude, Specify 5000 or 8000 Ft. Altitude Pistons.		

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKCASE, FRONT COVER, CAMSHAFT AND RELATED PARTS—Continued		
351962 R11	16	Water Inlet Elbow with One Plug, 103868		
		and Two Plugs, 103873 (Will Work for 6764 DAX and 6501 DA)		1
46179 D	19	Crankcase Front Cover Gasket		1
46122 DXA	20	Crankcase Front Cover with Oil Seal, 45177 D		1
179814		Cap Screw, 5/16 x 5/8" N.C. Hex Head		12
103320		Lockwasher, 5/16"		12
103340		Washer, 11/32" I.D. x 11/16" O.D. x 16 Ga.		12
357232 R1	21	Clutch Housing Dowel Pin (Will Work for 15945 D)		2
50410 DA	22	Crankcase Oil Header Plug, 1/8"		3
45314 DC	23	Water Drain Plug		1
49177 D	24	Crankshaft Front Oil Seal (Will Work for 43442 D)		1
353609 R1	25	Camshaft (Will Work for 9315 D and 43251 DA)		1
127559	26	Camshaft Gear Key (Woodruff No. 91, 1/4 x 3/4) (Same as 13711 D)		1
43249 D	27	Camshaft Thrust Plate		1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
6779 DA	28	Camshaft Gear (66 Teeth)		1
3/8"	29	Street Elbow Pipe ("B" and "BN")		1
52964 D	30	Radiator Drain Pipe ("B" and "BN")		1
13047 DA	31	Radiator Drain Pipe Cap ("B" and "BN")		1
30633 D	32	Crankshaft Bearing Cap Bolt Lock		6
24430 D	33	Crankshaft Bearing Cap Bolt (Used with Crankcase, § 354898 R1)		6
357937 R1	33	Crankshaft Bearing Cap Bolt (Used with Crankcase, § 354848 R2)		6
12456 R1		Pipe Plug, 1/4" Countersunk (Crankcase Oil Header)		2
251066 R1		Crankcase Front Cover Stud		1
114493		Hex Nut, 5/16" N.F.		1
103320		Lockwasher, 5/16"		1
103340		Washer, 11/32" I.D. x 11/16" O.D. x No. 16 Ga.		1
251067 R1		Hydraulic Pump Pad Cover		1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
350708 R1		Hydraulic Pump Pad Cover Gasket		1
103866		Pipe Plug, 1/4" Square Head (Oil Drain Plug for Filter)		1
103868		Pipe Plug, 1/2" Square Head (Water Inlet Elbow)		1
103873		Pipe Plug, 3/8" Countersunk Head (Water Inlet Elbow)		2
		§ - Not Supplied Separately		

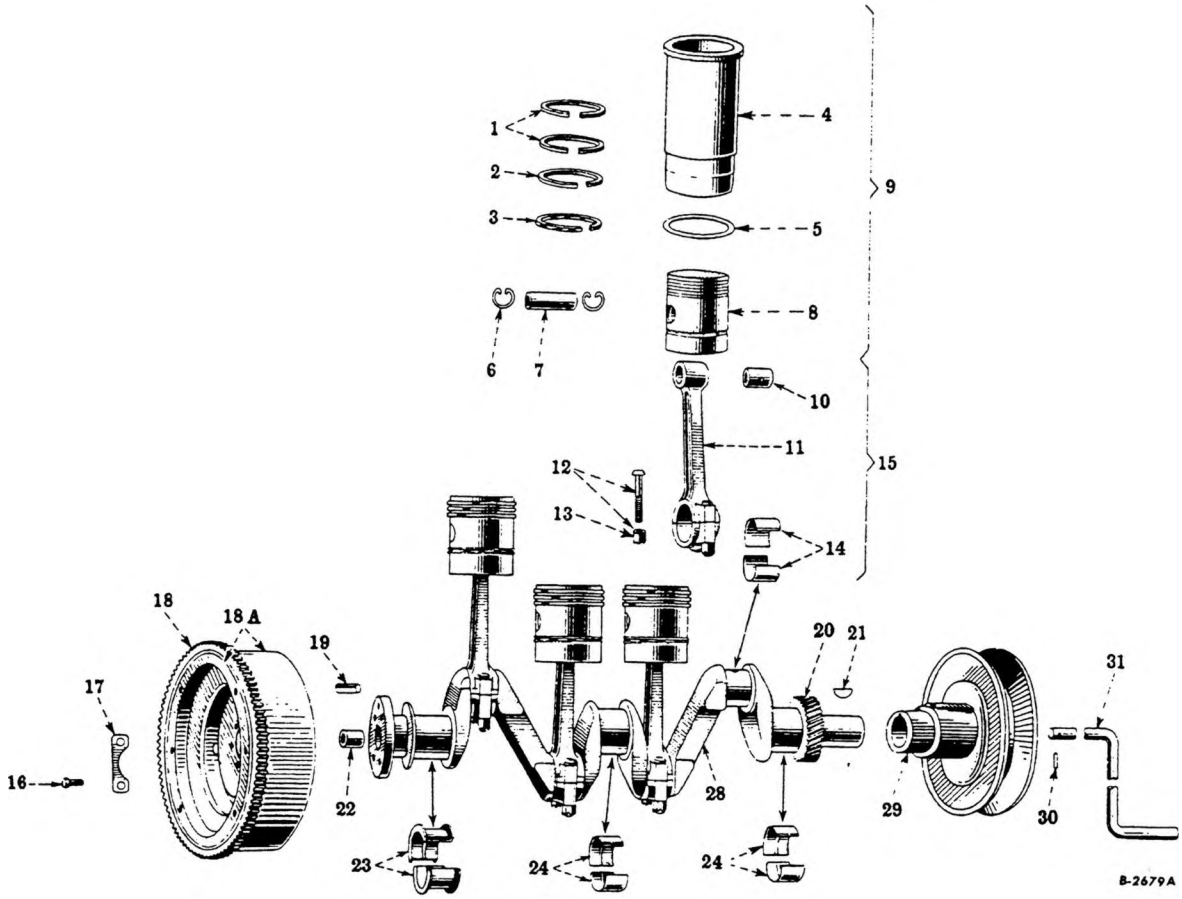

CRANKSHAFT AND RELATED PARTS. CONNECTING RODS, PISTONS, CYLINDER SLEEVES AND STARTING CRANK

24416 DA	1	Piston Ring, 1/8" (Plain-Compression) (Top or First and Second Groove)	8
35493 D	2	Piston Ring, 1/8" (Taper-Compression) (Third Groove)	4
32030 DA	3	Piston Ring, 3/16" (Oil Regulating) (Fourth Groove)	
		(Kerosene 8000 ft. Altitude - Special)	4
43276 DA	3	Piston Ring, 1/4" (Oil Regulating) (Gasoline) (Fourth Groove)	4
6075 D	4	Cylinder Sleeve (Order Cylinder Sleeve with Piston for Standard or High Altitude) (For Crankcase § 251069 R1)	4
356317 R1	4	Cylinder Sleeve (Order Cylinder Sleeve with Piston) (Gasoline, Kerosene or Distillate 5000 or 8000 Ft. Altitude - Special) (For Crankcase § 354898 R2)	4
24434 D	5	Cylinder Sleeve Packing Ring (For Crankcase § 251069 R1)	4
354881 R1	5	Cylinder Sleeve Packing Ring (Gasoline, Kerosene or Distillate 5000 or 8000 Ft. Altitude - Special) (For Crankcase § 354898 R2)	4
		§ - Not Supplied Separately	

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKSHAFT AND RELATED PARTS. CONNECTING RODS, PISTONS, CYLINDER SLEEVES AND STARTING CRANK—Continued		
35651 H	6	Piston Pin Retainer Ring		8
24414 DB	7	Piston Pin (Standard) (Optional with 365043 R1)		4
365043 R1	7	Piston Pin (Standard) (Optional with 24414 DB)		4
53159 D	7	Piston Pin (.005" Oversize) (Optional with 365061 R1)		4
365061 R1	7	Piston Pin (.005" Oversize) (Optional with 53159 D)		4
	8	Piston (Gasoline, Kerosene or Distillate) (Order Cylinder Sleeve with Piston and Rings for Standard or High Altitude)		4
43286 DA	9	Set of Four Cylinder Sleeves with Pistons, 43287 DA (Gasoline) (Used with Crankcase, § 251069 R1)		1
43287 DA	9	Cylinder Sleeve with Piston, Complete (Gasoline) (Used with Crankcase, § 251069 R1)		4
356315 R91	9	Set of Four Cylinder Sleeves with Pistons, 356316 R91 (Gasoline or Distillate) (Used with Crankcase, § 354898 R2)		1
356316 R91	9	Cylinder Sleeve with Piston, Complete (Gasoline or Distillate) (Used with Crankcase, § 354898 R2)		4
51188 D	9	Set of Four Cylinder Sleeves with Pistons, 51362 D (Gasoline 8000 Ft. Altitude - Special) (Used with Crankcase, § 251069 R1)		1
51189 D	9	Set of Four Cylinder Sleeves with Pistons, 51361 D (Gasoline 5000 Ft. Altitude - Special) (Used with Crankcase, § 251069 R1)		1
356637 R91	9	Set of Four Cylinder Sleeves with Pistons, 356642 R91 (Gasoline 5000 Ft. Altitude - Special) (Used with Crankcase, § 354898 R2)		1
356649 R91	9	Set of Four Cylinder Sleeves with Pistons, 356654 R91 (Gasoline 8000 Ft. Altitude - Special) (Used with Crankcase, § 354898 R2)		1
51361 D	9	Cylinder Sleeve with Piston, Complete (Gasoline 5000 Ft. Altitude - Special) (Used with Crankcase, § 251069 R1)		4
51362 D	9	Cylinder Sleeve with Piston, Complete (Gasoline 8000 Ft. Altitude - Special) (Used with Crankcase, § 251069 R1)		4
356642 R91	9	Cylinder Sleeve with Piston, Complete (Gasoline 5000 Ft. Altitude - Special) (Used with Crankcase, § 354898 R2)		4
356654 R91	9	Cylinder Sleeve with Piston, Complete (Gasoline 8000 Ft. Altitude - Special) (Used with Crankcase, § 354898 R2)		4

§ - Not Supplied Separately

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKSHAFT AND RELATED PARTS, CONNECTING RODS, PISTONS, CYLINDER SLEEVES AND STARTING CRANK—Continued		
51777 DA	9	Cylinder Sleeve with Piston, Complete (Kerosene or		
		Distillate) (Used with Crankcase, § 251069 R1)		4
51778 DA	9	Set of Four Cylinder Sleeves with Pistons, 51777 DA		
		(Kerosene or Distillate) (Used with Crankcase,		
		§ 251069 R1)		1
359036 R91	9	Set of Four Cylinder Sleeves with Pistons, 359037 R91		
		(Kerosene) (Used with Crankcase, § 354898 R1)		1
359037 R91	9	Cylinder Sleeve with Piston, Complete (Kerosene)		
		(Used with Crankcase, § 354898 R1)		4
53077 D	9	Set of Four Cylinder Sleeves with Pistons, 54282 D		
		(Kerosene 5000 Ft. Altitude - Special) (Used with		
		Crankcase, § 251069 R1)		1
53078 D	9	Set of Four Cylinder Sleeves with Pistons, 54281 D		
		(Kerosene 8000 Ft. Altitude - Special) (Used with		
		Crankcase, § 251069 R1)		1
356641 R91	9	Set of Four Cylinder Sleeves with Pistons, 356647 R91		
		(Kerosene 5000 Ft. Altitude - Special) (Used with		
		Crankcase, § 354898 R2)		1
356653 R91	9	Set of Four Cylinder Sleeves with Pistons, 356656 R91		
		(Kerosene 8000 Ft. Altitude - Special) (Used with		
		Crankcase, § 354898 R2)		1
54281 D	9	Cylinder Sleeve with Piston, Complete (Kerosene		
		8000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 251069 R1)		4
54282 D	9	Cylinder Sleeve with Piston, Complete (Kerosene		
		5000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 251069 R1)		4
356647 R91	9	Cylinder Sleeve with Piston, Complete (Kerosene		
		5000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 354898 R2)		4
356656 R91	9	Cylinder Sleeve with Piston, Complete (Kerosene		
		8000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 354898 R2)		4
356643 R91	9	Cylinder Sleeve with Piston, Complete (Distillate		
		5000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 354898 R2)		4
356639 R91	9	Set of Four Cylinder Sleeves with Pistons, 356643 R91		
		(Distillate 5000 Ft. Altitude - Special) (Used with		
		Crankcase, § 354898 R2)		1
356655 R91	9	Cylinder Sleeve with Piston, Complete (Distillate		
		8000 Ft. Altitude - Special) (Used with Crankcase,		
		§ 354898 R2)		4
356651 R91	9	Set of Four Cylinder Sleeves with Pistons, 356655 R91		
		(Distillate 8000 Ft. Altitude - Special) (Used with		
		Crankcase, § 354898 R2)		1

§ - Not Supplied Separately

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKSHAFT AND RELATED PARTS, CONNECTING RODS, PISTONS, CYLINDER SLEEVES AND STARTING CRANK—Continued		
24415 D	10	Piston Pin Bushing	501 to 103614	4
64508 D	10	Piston Pin Bushing	103615 up	4
30926 DFX	11	Connecting Rod with Two Bolts, 24412 DX and Bushing, 64508 D		4
24412 DX	12	Connecting Rod Bolt with Nut, 24413 D and Cotter Pin, 108629		8
24413 D	13	Connecting Rod Bolt Nut		8
356304 R11	14	Connecting Rod Bearing (2 Halves) (Will Work for 35578 DBX)		4
356305 R11	14	Connecting Rod Bearing (2 Halves) (.030" Undersize) (Will Work for 35584 DBX)		4
356306 R11	14	Connecting Rod Bearing (2 Halves) (.002" Undersize)		4
356307 R11	14	Connecting Rod Bearing (2 Halves) (.032" Undersize)		4
30926 DFY	15	Connecting Rod, 30926 DFX with Bearing, 356304 R11		4
29951 D	16	Flywheel Bolt		4
46349 D	17	Flywheel Bolt Lock		2
55755 DB	18	Flywheel Ring Gear, 90 Teeth		1
351217 R12	18A	Flywheel with Ring Gear, 55755 DB (Will Work for 6402 DDX and 6402 DB)		1
24550 D	19	Flywheel Dowel Pin		1
46870 DA	20	Crankshaft Pinion (33 Teeth) (Used with Standard Crankshaft)		1
70182 D	20	Crankshaft Pinion (33 Teeth) (Used with .030" Crankshafts)		1
10430 V	21	Crankshaft Pinion and Fan Drive Pulley Key (Woodruff No. 18, 1/4 x 1-1/8")	501 to 146039	1
127559	21	Crankshaft Pinion and Fan Drive Pulley Key (Woodruff No. 91, 1/4 x 3/4")	146040 up	2
43291 D	22	Clutch Pilot Bushing		1
50839 DA	23	Crankshaft Bearing, Rear (2 Halves) (Standard) (Will Work for 35580-1/3 DB)		1
50861 DB	23	Crankshaft Bearing, Rear (2 Halves) (.030" Undersize) (Will Work for 35536-1/3 DC)		1
355274 R11	23	Crankshaft Bearing, Rear (2 Halves) (.002" Undersize)		1
355291 R11	23	Crankshaft Bearing, Rear (2 Halves) (.032" Undersize)		1
50860 DB	24	Crankshaft Bearing, Front and Center (2 Halves) (Standard) (Will Work for 35579-1/3 DB)		2
50862 DB	24	Crankshaft Bearing, Front and Center (2 Halves) (.030" Undersize) (Will Work for 35585-1/3 DB)		2
355275 R11	24	Crankshaft Bearing, Front and Center (2 Halves) (.002" Undersize)		2
355292 R11	24	Crankshaft Bearing, Front and Center (2 Halves) (.032" Undersize)		2
251587 R92	28	Crankshaft, Complete (Standard) (Will Work for 46402 DBX)	501 to 146039	1
356311 R91	28	Crankshaft with Bearings, Complete (Standard) (Will Work for 46402 DCX and 353744 R91)	146040 up	1
46411 DDX	28	Crankshaft with Pin, Complete (.030" Undersize)	501 to 165803	1
46411 DEX	28	Crankshaft, Complete (.030" Undersize) (Order 352747 R92)	165804 up	1
352747 R92	28	Crankshaft and Bearing Field Package (.030" Undersize) (Will Work for 46411 DEX)	165804 up	1

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKSHAFT AND RELATED PARTS, CONNECTING RODS, PISTONS, CYLINDER SLEEVES AND STARTING CRANK—Continued		
251589 R91	29	Fan Drive Pulley, Complete (Used with Standard		
		Crankshafts) (Will Work for 6502 DX)	501 to 146039	1
6502 DA	29	Fan Drive Pulley (Used with Standard and .030" Undersize		
		Crankshaft)	146040 up	1
9855 DAX	29	Fan Drive Pulley with Screw, 139797 and Nut, 218438		
		(Used with .030" Undersize Crankshafts)	501 to 146039	1
15204 D	30	Starting Crank Pin		1
47691 DBX	31	Starting Crank with Pin, 15204 D (Not "B" or "BN")		1
53385 DBX	31	Starting Crank with Pin, 15204 D ("B" and "BN" only)		1
56618 DA		Flywheel Ring Gear Attachment		
		(Electric Starting - Special)	501 to 54386	1
69791 D		Piston Ring Replacement Kit (Gasoline) (Optional with		
		70356 D and 357677 R91) (Perfect Circle)		1
357677 R91		Piston Ring Replacement Kit (Gasoline) (Perfect Circle)		
		(Consists of Four Chrome Plated Top Compression Rings,		
		Four Plain Compression Rings, and Four Chrome Plated		
		Oil Rings) (Optional with 69791 D and 70356 D)		1
69792 D		Piston Ring Replacement Kit (Kerosene or Distillate)		
		(Kerosene 5000 Ft. and 8000 Ft. Altitude) (Optional with		
		70357 DA and 357676 R91) (Wilkening)		1
70356 D		Piston Ring Replacement Kit (Gasoline) (Optional with		
		69791 D and 357677 R91) (Wilkening)		1
70357 DA		Piston Ring Replacement Kit (Kerosene or Distillate)		
		(Kerosene 5000 Ft. and 8000 Ft. Altitude) (Optional with		
		69792 D and 357676 R91) (Perfect Circle)		1
357676 R91		Piston Ring Replacement Kit (Kerosene or Distillate)		
		(Kerosene 5000 Ft. and 8000 Ft. Altitude) (Perfect		
		Circle) (Consists of Four Chrome Plated Top Compression		
		Rings, Four Plain Compression Rings and Four Chrome		
		Plated Oil Rings) (Optional with 69792 D and 70357 DA)		1
108629		Cotter Pin, 3/32 x 7/8"		1
139797		Set Screw, 3/8 x 7/8" N.C. Headless (Cup Point)		1
218438		Hex Jam Nut, 3/8" N.C.		1

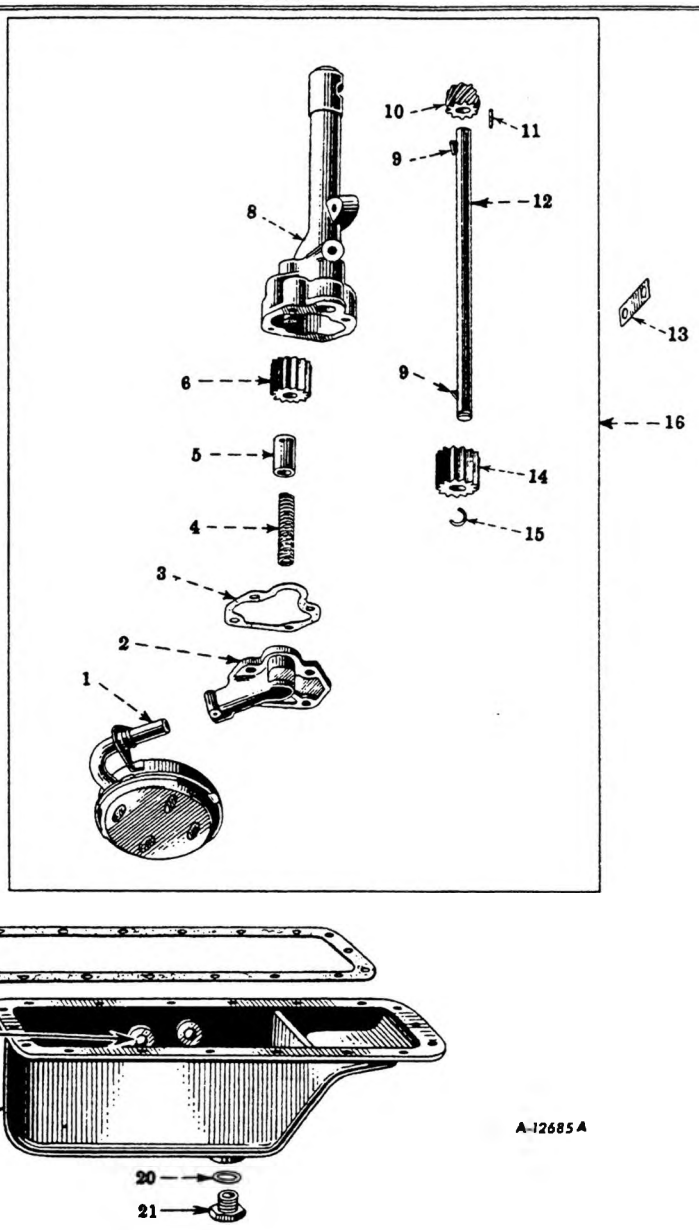

CRANKCASE OIL PAN AND LUBRICATING OIL PUMP

56108 D	1	Lubricating Oil Pump Screen (Floto) (will work for 31589 D)	1
103386		Cotter Pin, 1/8 x 1-1/4"	1
6098 D	2	Lubricating Oil Pump Cover	1
179816		Cap Screw, 5/16 x 3/4" N.C. Hex Head	4
103320		Lockwasher, 5/16"	4
43415 D	3	Lubricating Oil Pump Body Cover Gasket	X
43414 D	4	Lubricating Oil Pressure Spring	1
			X - As Required

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CRANKCASE OIL PAN AND LUBRICATING OIL PUMP—Continued		
357648 R1	5	Lubricating Oil Pressure Valve (Will Work for 61261 V)		1
35631 H	6	Lubricating Oil Pump Idler Gear		1
352036 R91	8	Lubricating Oil Pump Body, Complete (Will Work for 6096 DY)		1
6096 DX	8	Lubricating Oil Pump Body with Idler Shaft and Plug, 103865		1
179845		Cap Screw, 3/8 x 1-3/4" N.C. Hex Head		2
7699 TM	9	Lubricating Oil Pump Body Gear Key (Woodruff No. 5, 1/8 x 5/8")		1
7699 TM	9	Lubricating Oil Pump Spiral Gear Key (Woodruff No. 5, 1/8 x 5/8")		1
352057 R1	10	Lubricating Oil Pump Spiral Gear (Will Work for 61112 DS and 103228 H)		1
G 1123	11	Lubricating Oil Pump Spiral Gear Pin		1
43412 DR	12	Lubricating Oil Pump Drive Shaft		1
46629 D	13	Lubricating Oil Pump Screw Lock		1
358615 R1	14	Lubricating Oil Pump Body Gear (Will Work for 35630 H)		1
27999 H	15	Lubricating Oil Pump Body Gear Retainer		1
352085 R92	16	Lubricating Oil Pump, Complete (Will Work for 43416 D)		1
43458 D	17	Oil Pan Gasket		1
1998 TA	18	Oil Gauge Valve		2
43457 DBXB	19	Oil Pan with Plug, 103869 (Order 355735 R91)		1
43457 DCX	19	Oil Pan		1
179817		Cap Screw, 5/16 x 7/8" N.C. Hex Head		14
179822		Cap Screw, 5/16 x 1-1/2" N.C. Hex Head		4
103320		Lockwasher, 5/16"		18
3405 H	20	Crankcase Oil Pan Drain Plug Gasket (Used with Oil Pan, 43457 DCX)		1
41300 HA	21	Crankcase Oil Drain Plug (Used with Oil Pan, 43457 DCX)		1
35647 H		Lubricating Oil Pump Idler Shaft (Order 6096 DX)		1
355735 R91		Crankcase Oil Pan, 43457 DCX, with Plug, 41300 HA and Gasket, 3405 H (Will Work for 43457 DBXB)		1
103865		Pipe Plug, 1/8" Square Head (In Lubricating Oil Pump Body)		1
103869		Pipe Plug, 3/4" Square Head (Crankcase Oil Pan Drain Plug) (Used with Oil Pan, 43457 DBXB)		1

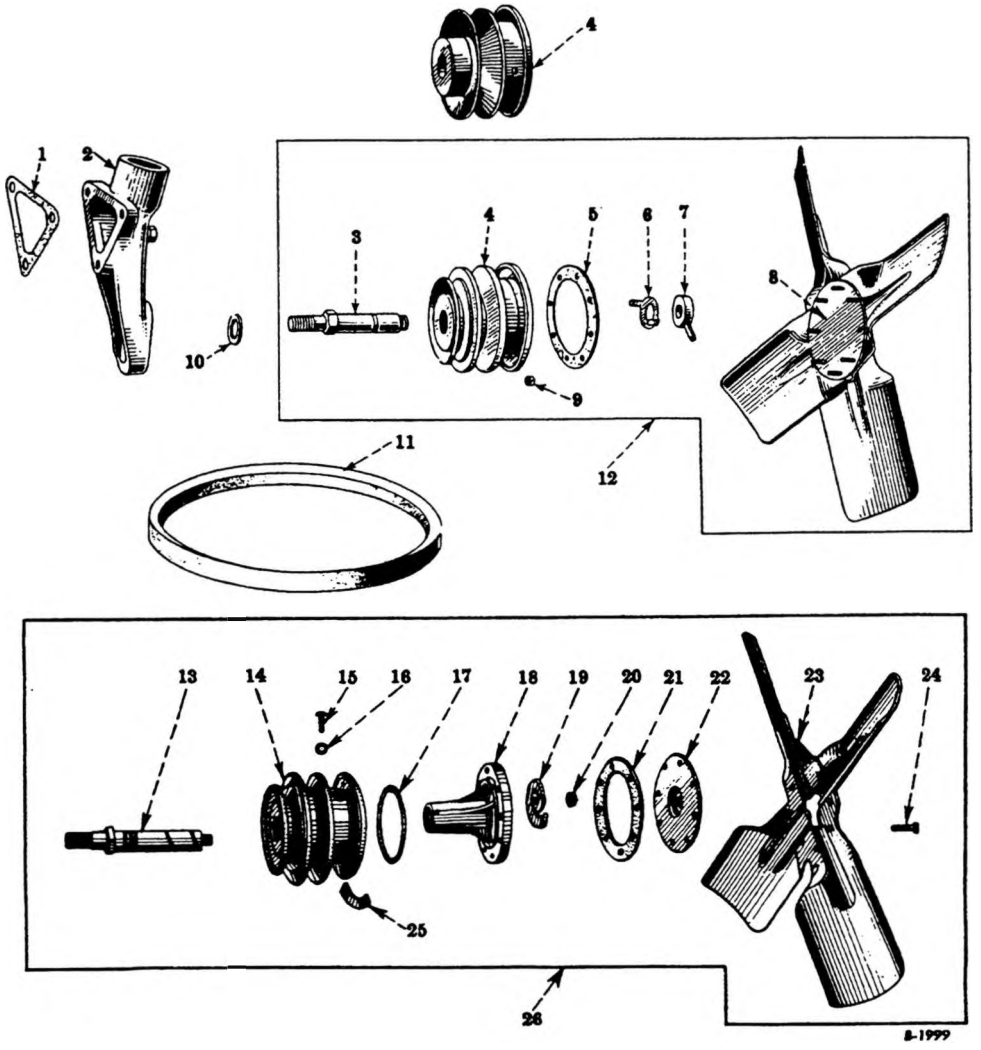

FAN (Service Products Corporation)

43294 D	1	Fan Bracket Gasket		1	
6432 DA	2	Fan Bracket and Water Outlet		1	
179848		Cap Screw, 3/8 x 2-1/4" N.C. Hex Head		1	
179840		Cap Screw, 3/8 x 1-1/8" N.C. Hex Head		2	
10332		Lockwasher, 3/8"		3	
25957 DA	3	Fan Spindle		1	
24630 D	4	Fan Hub (Single Flange)	501 to 54386	1	
28318 D	4	Fan Hub (Double Flange)	54387 Up	1	
		Special	501 to 54386	1	
11154 VA	5	Fan Hub Gasket		1	
12470 VA	6	Bronze Thrust Washer		1	

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FAN (Service Products Corporation)—Continued		
62786 VX	7	THRUST NUT WITH OIL TUBE		1
32984 DA	8	FAN		1
32606 H	9	SPECIAL OIL RETAINING PLUG		1
43293 D	10	FAN SHAFT WASHER		1
46869 D	11	FAN BELT		1
24529 DB	12	FAN, COMPLETE WITH SINGLE FLANGE HUB, 24630 D		
		(ORDER 70136 D)	501 TO 54386	1
114498		HEX JAM NUT, 5/8" N.F.		1
106497		LOCKWASHER, NO. 10		8
100660		SCREW, NO. 10 - 32 x 1/2" FILLISTER HEAD		8
103101		SQUARE NUT, NO. 10 - 32		8
28821 DA	12	FAN, COMPLETE WITH DOUBLE FLANGE HUB, 28318 D		
		(ORDER 70136 D)	54387 UP	1
		SPECIAL	501 TO 54386	1
114498		HEX JAM NUT, 5/8" N.F.		1
28318 DX		DOUBLE GROOVE FAN AND GENERATOR PULLEY HUB ATTACHMENT (SPECIAL)		
		(INCLUDES HUB, 28318 D AND GASKET, 11154 VA)	501 TO 54386	1

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			FAN (Schwitzer-Cummins Company)		
	13	B115145	FAN SPINDLE (ORDER 251647 R91)		1
114498			HEX JAM NUT, 5/8" N.F.		1
	14	B115144	FAN HUB (ORDER 251645 R91)		1
70206 D	15	C112183	OIL RETAINING SCREW		1
70208 D	16	C112834	OIL RETAINING SCREW GASKET		1
70207 D	17	C112696	FAN HUB GASKET		1
	18	B112037	FAN BEARING (ORDER 251647 R91)		1
	19	C8561	OIL IMPELLER (ORDER 251647 R91)		1
70209 D	20	CJ14033	LOCK NUT		1
70200 D	21	C3560	FAN BEARING GASKET		1
70204 D	22	C19642	FAN BEARING CAP		1
70212 D	23	B115150	FAN		1
70202 D	24	C9089	CAP SCREW		8
106498			LOCKWASHER, NO. 12		8
70203 D	25	C11943	DOUBLE NUT		4
70136 D	26	A115143	FAN AND HUB, COMPLETE (WILL WORK FOR		
			28821 DA AND 24529 DB)	54387 UP	1
251645 R91		B118304	FAN HUB AND PLUG, COMPLETE		1
251647 R91		C118306	SPINDLE AND BEARING, COMPLETE		1

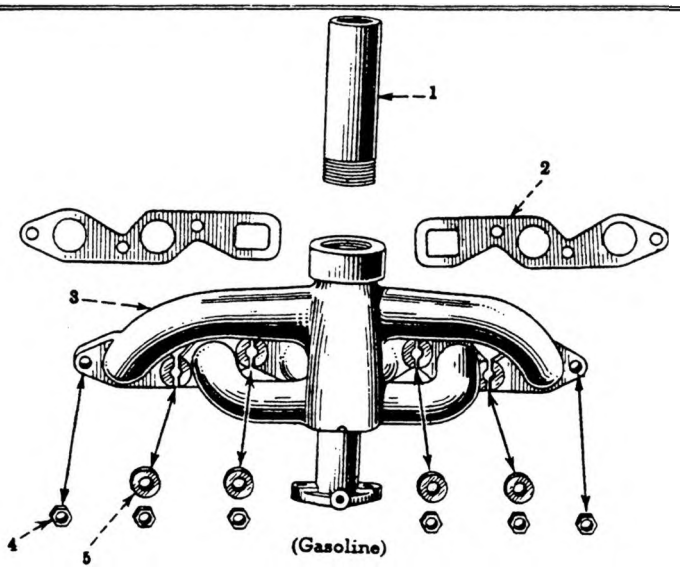

(Gasoline)

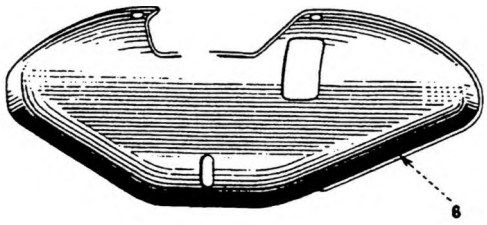

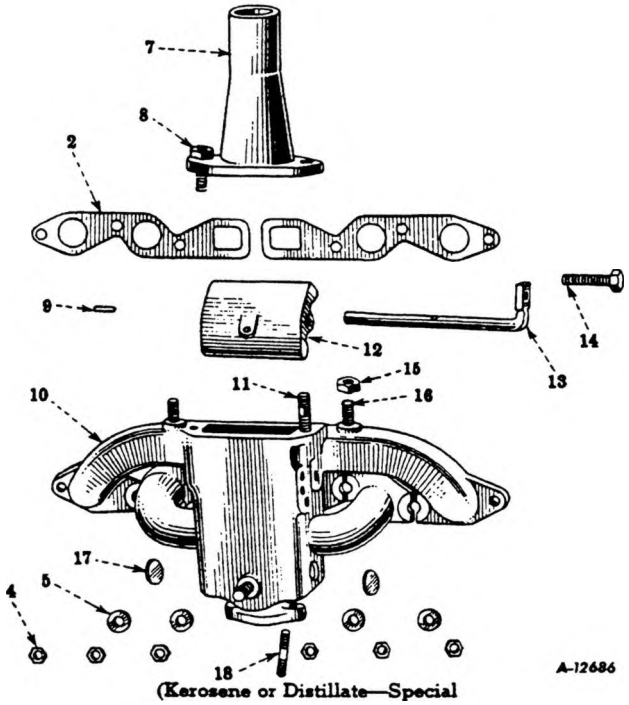

(Kerosene or Distillate—Special

MANIFOLD AND EXHAUST PIPE

ENGINE

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		MANIFOLD AND EXHAUST PIPE		
47701 DB	1	Exhaust Pipe (Gasoline)		1
352014 R1	2	Exhaust and Intake Manifold Gasket (Will Work for 48696 D)		2
251175 R11	3	Exhaust and Intake Manifold with Plug, 103865		
		(Will Work for 6717 DCX)		1
93082 H	4	Manifold to Cylinder Head Stud Nut (Will Work for 37684 H)		6
24523 D	5	Manifold to Cylinder Head Stud Nut Washer		4
48892 DB	6	Manifold Heat Shield (Kerosene or Distillate)		
		(Not Bosch Electric Lighting)		1
6743 DA	7	Exhaust Pipe (Kerosene or Distillate)		1
220067	8	Follows Reference No. 11		
19963 D	8	Exhaust Pipe Stud Nut (Kerosene or Distillate)		
		(Order Hex Nut, 220067)		2
142494	9	Manifold Heat Valve Pin (Groov Pin, 5/32 x 7/8", Type 1)	47281 Up	
		(Kerosene or Distillate) (Same as 57389 D)		1
6744 DDX	10	Exhaust and Intake Manifold, Complete (Kerosene or Distillate)		
		(Will Work for 6744 DCX)	47281 Up	1
6744 DDY	10	Exhaust and Intake Manifold, Complete (Kerosene or Distillate)		
		(Will Work for 6744 DAX and DBX)	501 to 47280	1
351655 R11	10	Exhaust and Intake Manifold, Complete		
		(Kerosene or Distillate) (For Service Engines, 354079 R92		
		and 354082 R92)		1
46202 D	11	Exhaust Pipe Stud (Kerosene or Distillate)		
		(Will Work for G 3243)		2
220067		Hex Nut, 7/16" N.C. (Will Work for 19963 D)		2
G 3243	11	Exhaust Pipe Stud (Kerosene or Distillate)		
		(Optional with 46202 D)		2
6866 D	12	Manifold Heat Valve (Kerosene or Distillate)		
		(Order 6866 DAX)	501 to 47280	1
6866 DA	12	Manifold Heat Valve (Kerosene or Distillate)	47281 Up	1
6866 DAX	13	Manifold Heat Valve Shaft Package (Kerosene or Distillate)		
		(Field Change)	501 to 47280	1
52521 D	13	Manifold Heat Valve Shaft (Kerosene or Distillate)		
		(Order 6866 DAX)	501 to 47280	1
52521 DA	13	Manifold Heat Valve Shaft (Kerosene or Distillate)	47281 Up	1
102953		Set Screw, 3/8 x 1-1/2" Square Head Conical Point	78041 Up	1
218438		Hex Jam Nut, 3/8" N.C.		1
21526 D	14	Manifold Heat Valve Shaft Screw (Kerosene or Distillate)		
		(Order 102953)	501 to 78040	1
93082 H	15	Manifold Heat Shield Stud Nut (Kerosene or Distillate)		3
103341		Washer, 13/32 x 13/16" x No. 16 ga.		3
46102 D	16	Manifold Heat Shield Stud (Kerosene or Distillate)		3
172540	17	Exhaust and Intake Manifold Expansion Plug, 7/8"		
		(Kerosene or Distillate) (Same as 13090 D)		2
G 8603	18	Carburetor Stud (Kerosene or Distillate)		2
45097 D		Manifold Heat Valve Shaft Groov Pin		
		(Kerosene or Distillate)	501 to 47280	1
48674 DA		Manifold Heat Valve Shaft Collar (Kerosene or Distillate)		
		(Order 6866 DAX)	501 to 47280	1
103865		Pipe Plug, 1/8" Square Head (In Manifold)		1
107317		Groov Pin, 3/16 x 1/2" (Type 1) (In Manifold)		2

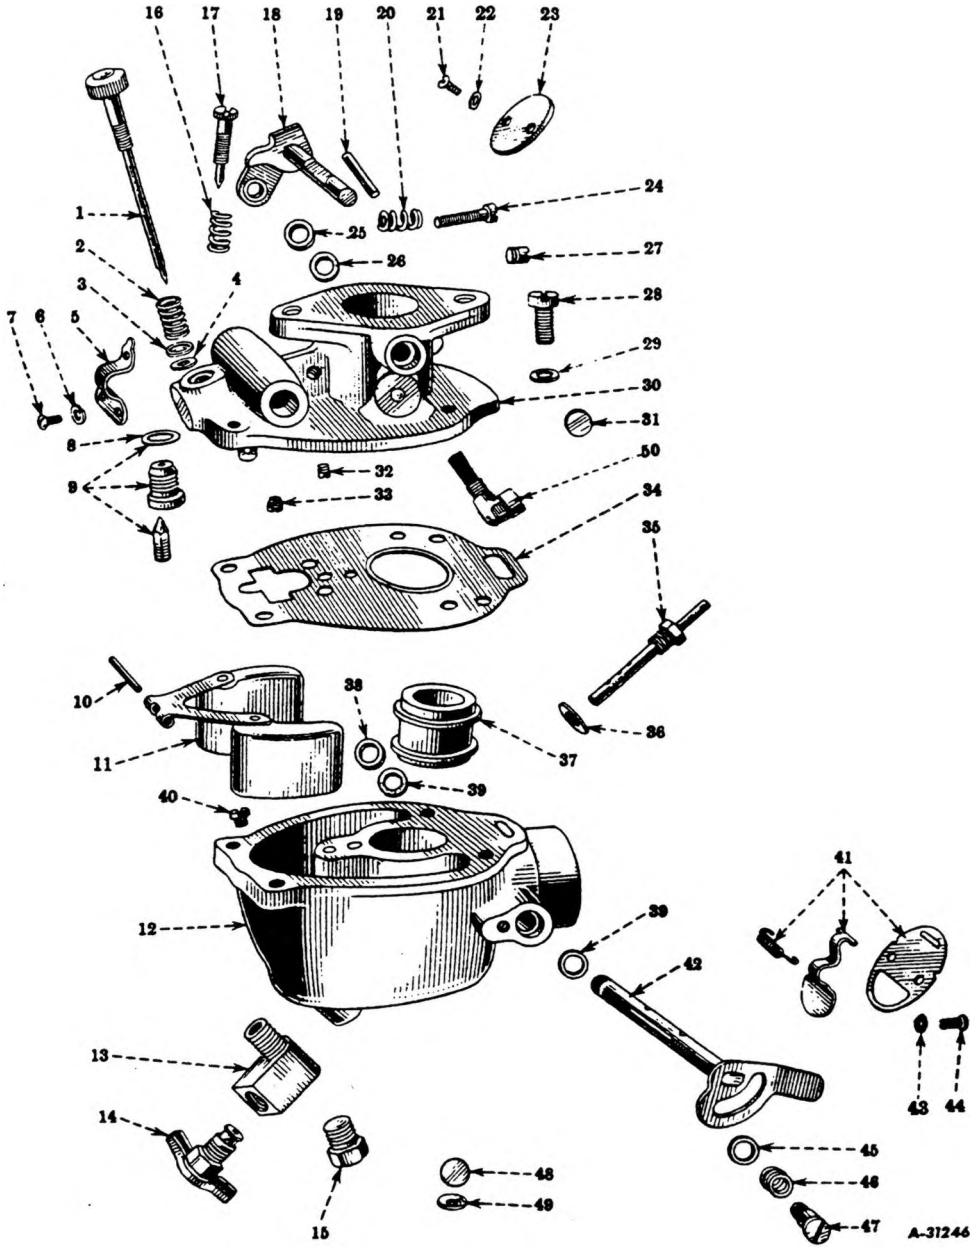

CARBURETOR, Marvel-Schebler

ENGINE

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			CARBURETOR, Marvel-Schebler		
69 401 D		10-2657	CARBURETOR, COMPLETE (MODEL TSX-157) (GASOLINE)		
			(OPTIONAL WITH ZENITH CARBURETOR, 52499 DB)		1
179 817			CAP SCREW, 5/16 x 7/8" N.C., HEX HEAD		2
103 320			LOCKWASHER, 5/16"		2
69 402 D		10-2656	CARBURETOR, COMPLETE (MODEL TSX-156) (KEROSENE OR		
			DISTILLATE - SPECIAL) (OPTIONAL WITH ZENITH		
			CARBURETOR, 48616 DC)		1
220 065			HEX NUT, 5/16" N.C.		2
103 320			LOCKWASHER, 5/16"		2
69 967 D	1	43-554	MAIN JET ADJUSTMENT (KEROSENE OR DISTILLATE)		1
69 965 D	2	24-489	MAIN JET ADJUSTMENT SPRING (KEROSENE OR DISTILLATE)		1
69 971 D	3	78-299	MAIN JET ADJUSTMENT WASHER (KEROSENE OR DISTILLATE)		1
69 963 D	4	16-451	MAIN JET ADJUSTMENT GASKET (KEROSENE OR DISTILLATE)		1
69 966 D	5	24-501	MAIN JET ADJUSTMENT RATCHET (KEROSENE OR DISTILLATE)		1
69 936 D	6	78-322	MAIN JET ADJUSTMENT RATCHET SCREW LOCKWASHER		
			(KEROSENE OR DISTILLATE)		2
69 945 D	7	15-8	MAIN JET ADJUSTMENT RATCHET SCREW		
			(KEROSENE OR DISTILLATE)		2
69 950 D	8	16-4	FUEL VALVE WASHER		1
69 956 D	9	233-536	FUEL VALVE, COMPLETE (MATCHED)		1
69 920 D	10	32-27	FLOAT AXLE		1
69 919 D	11	30-600	FLOAT		1
69 921 D	12	10-2676	FUEL BOWL, COMPLETE (GASOLINE)		
			(INCLUDES REFERENCE NOS. 38, 39, 48 AND 49)		1
69 933 D	12	10-2700	FUEL BOWL, COMPLETE (KEROSENE OR DISTILLATE)		
			(INCLUDES REFERENCE NOS. 38, 39, 48 AND 49)		1
69 970 D	13	69-24	DRAIN COCK ELBOW (KEROSENE OR DISTILLATE)		1
69 972 D	14	87-3A	DRAIN COCK (KEROSENE OR DISTILLATE)		1
69 940 D	15	99-7	DRAIN PLUG (GASOLINE)		1
69 954 D	16	24-340	IDLE ADJUSTING SCREW SPRING		1
69 923 D	17	43-33	IDLE ADJUSTING SCREW		1
69 922 D	18	13-879	THROTTLE SHAFT WITH LEVER, COMPLETE		
			(INCLUDES REFERENCE NOS. 20 AND 24)		1
69 932 D	19	62-167	THROTTLE STOP PIN		1
69 953 D	20	24-262	THROTTLE STOP SCREW SPRING		1
352 701 R91	21	15-A-91	THROTTLE PLATE SCREW (WILL WORK FOR 69 945 D)		2
69 936 D	22	78-322	THROTTLE PLATE SCREW LOCKWASHER (USED WITH SCREW, 69 945 D ONLY)		2
69 944 D	23	14-175	THROTTLE PLATE		1
69 946 D	24	15-42	THROTTLE STOP SCREW		1
69 931 D	25	55-231	THROTTLE SHAFT PACKING RETAINER		1
69 924 D	26	44-38	THROTTLE SHAFT PACKING WASHER		1

ENGINE

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			CARBURETOR, Marvel-Schebler—Continued		
69 947 D	27	15-223	IDLE DRILLING SCREW		1
69 945 D	28	15-443	BODY TO BOWL SCREW		4
12 795 D	29	78-154	BODY TO BOWL SCREW LOCKWASHER		4
69 943 D	30	227-517	THROTTLE BODY, COMPLETE (GASOLINE)		
			(INCLUDES REFERENCE NO. 18, 19, 21, 22, 23, 25, 26 AND 31)		1
69 973 D	30	227-939	THROTTLE BODY, COMPLETE (KEROSENE OR DISTILLATE)		
			(INCLUDES REFERENCE NOS. 18, 19, 21, 22, 23, 25, 26 AND 31)		1
69 930 D	31	55-230	THROTTLE SHAFT HOLE PLUG		1
69 926 D	32	49-264	ECONOMIZER JET (GASOLINE)		1
69 969 D	32	49-161	ECONOMIZER JET (KEROSENE OR DISTILLATE)		1
69 929 D	33	49-101L	IDLING JET		1
69 932 D	34	16-80	BOWL TO BODY GASKET		1
69 968 D	35	47-270	MAIN DISCHARGE JET		1
69 951 D	36	16-28	MAIN DISCHARGE JET WASHER		1
69 923 D	37	46-448	VENTURI (5/8")		1
69 931 D	38	55-231	AIR SHUTTER PACKING RETAINER		1
69 924 D	39	44-38	AIR SHUTTER PACKING WASHER		2
69 928 D	40	49-196	MAIN JET (GASOLINE)		1
70 144 D	41	27-554	AIR SHUTTER		1
69 917 D	42	26-656	AIR SHUTTER SHAFT WITH LEVER		1
69 936 D	43	78-322	AIR SHUTTER SCREW LOCKWASHER (USED WITH SCREW 69 945 D ONLY)		2
352 701 R91	44	15-A-91	AIR SHUTTER SCREW (WILL WORK FOR 69 945 D)		2
69 937 D	45	78-184	AIR SHUTTER STOP SCREW WASHER		1
69 955 D	46	24-480	AIR SHUTTER STOP SCREW SPRING		1
69 948 D	47	15-357	AIR SHUTTER STOP SCREW		1
69 939 D	48	55-40	DRIP PLUG FELT		1
69 942 D	49	179-35	DRIP PLUG WASHER		1
69 938 D	50	67-528	FILTER SCREEN		1
24 520 D			CARBURETOR GASKET		1
69 957 D		16-634	GASKET PACKAGE (GASOLINE)		
			(INCLUDES 24 520 D AND REFERENCE NOS. 8, 34 AND 36)		1
69 961 D		286-673	REPAIR KIT PACKAGE (GASOLINE) (INCLUDES GASKET		
			PACKAGE, 69 957 D AND REFERENCE NOS. 9, 10, 17, 18,		
			21, 25, 26, 31, 32, 33, 38, 39, 40, 44 AND 46)		1
69 962 DA		286-672	REPAIR KIT PACKAGE (KEROSENE OR DISTILLATE)		
			(INCLUDES GASKET PACKAGE, 69 964 D AND REFERENCE		
			NOS. 9, 10, 17, 18, 21, 25, 26, 31, 32, 33, 38,		
			39, 44, AND 46)		1
69 964 D		16-635	GASKET PACKAGE (KEROSENE OR DISTILLATE)		
			(INCLUDES 24 520 D AND REFERENCE NOS. 4, 8, 34 AND 36)		1

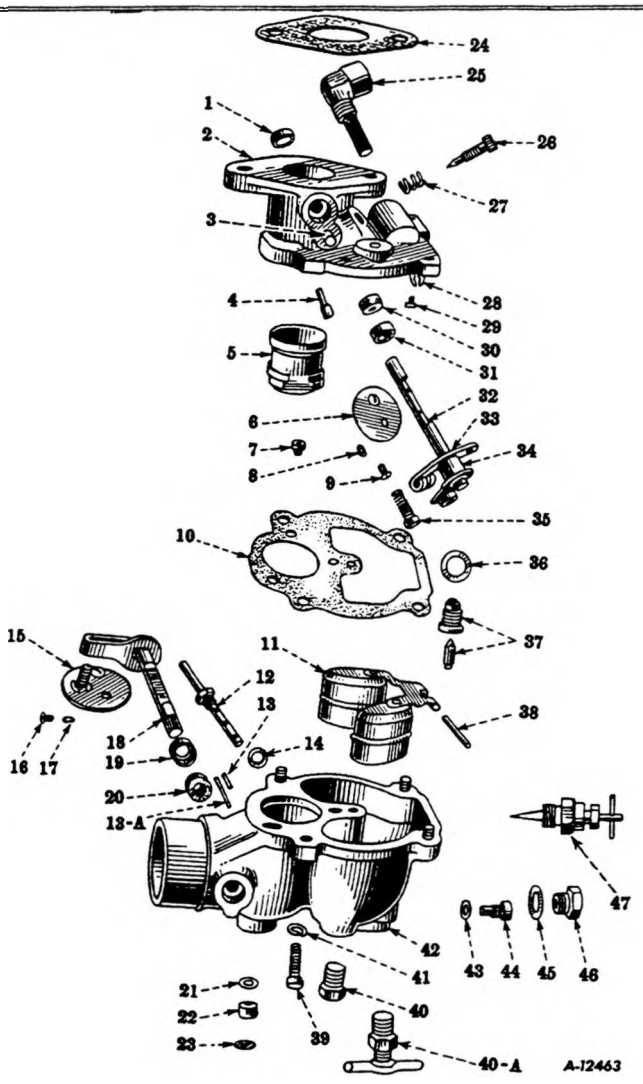

CARBURETOR, Zenith Model 161 x 7

48616 DC		0-9749	CARBURETOR, COMPLETE (KEROSENE OR DISTILLATE-SPECIAL)		
			(OPTIONAL WITH MARVEL-SCHEBLER CARBURETOR, 69402 D)		1
220065			HEX NUT, 5/16" N.C.		2
103320			LOCKWASHER, 5/16"		2
52499 DB		0-9752	CARBURETOR, COMPLETE (GASOLINE) (MARVEL-SCHEBLER CARBURETOR,		
			69401 D)		1
179817			CAP SCREW, 5/16 x 7/8" N.C. HEX HEAD		2
103320			LOCKWASHER, 5/16"		2
53797 D	1	CR37-1x1	THROTTLE SHAFT HOLE PLUG		1
53771 D	2	B2-62D	THROTTLE BODY (GASOLINE)	501 TO 61610	1
54651 D	2	B2-62D-1	THROTTLE BODY (KEROSENE OR DISTILLATE)	501 TO 67631	1
62167 D	2	B2-138C-2	THROTTLE BODY (KEROSENE OR DISTILLATE)	67632 UP	1
62181 D	2	B2-138C-3	THROTTLE BODY (GASOLINE)	61611 UP	1
54061 D	3	CR121-26	THROTTLE STOP PIN		1

ENGINE

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			CARBURETOR, Zenith Model 161 x 7—Continued		
53779 D	4	C55-6	IDLING JET NO. 16	501 TO 61610	1
62172 D	4	C55-6	IDLING JET NO. 18	61611 UP	1
53776 D	5	C38-21	VENTURI NO. 14 (GASOLINE)	501 TO 61610	1
53800 D	5	C38-21	VENTURI NO. 15 (KEROSENE OR DISTILLATE)	501 TO 67631	1
62171 D	5	C38-51	VENTURI NO. 15	61611 UP	1
53774 D	6	C21-47	THROTTLE PLATE	501 TO 61610	1
62169 D	6	C21-88	THROTTLE PLATE	61611 UP	1
53777 D	7	C52-2	WELL VENT NO. 23 (GASOLINE)	501 TO 61610	1
53801 D	7	C52-2	WELL VENT NO. 26 (KEROSENE OR DISTILLATE)	501 TO 67631	1
94039 H	7	C77-18	WELL VENT NO. 22	61611 UP	1
426217	8	T41-5	THROTTLE PLATE SCREW LOCKWASHER NO. 5 (SAME AS 31859 D)		2
31858 D	9	T1585-3	THROTTLE PLATE SCREW		2
53788 DA	10	C142-16	BOWL TO BODY GASKET		1
53783 D	11	C85-28	FLOAT		1
53780 D	12	C66-26-2	MAIN DISCHARGE JET NO. 50 (GASOLINE)	501 TO 61610	1
53781 D	12	C66-37-1	MAIN DISCHARGE JET NO. 50		1
			(KEROSENE OR DISTILLATE)	501 TO 67631	1
62173 D	12	C66-50	MAIN DISCHARGE JET NO. 50	61611 UP	1
53799 D	13	C120-9	AIR SHUTTER LEVER LOCATING PIN		1
54060 D	13A	CR121-5	AIR SHUTTER STOP PIN		1
31847 D	14	T56-52	MAIN DISCHARGE JET WASHER	61611 UP	
53794 D	14	T56-60	MAIN DISCHARGE JET WASHER	501 TO 61610	1
53784 D	15	C101-17	AIR SHUTTER		1
31858 D	16	T1585-3	AIR SHUTTER SCREW		2
426217	17	T41-5	AIR SHUTTER SCREW LOCKWASHER NO. 5 (SAME AS 31859 D)		2
55802 D	18	C108-57	AIR SHUTTER SHAFT WITH LEVER (WILL WORK FOR 53785 D)		1
42191 D	19	C131-4x2	AIR SHUTTER PACKING RETAINER		2
21210 D	20	CT57-4	AIR SHUTTER PACKING WASHER		2
12469 D	21	CT52-7	DRIP PLUG INNER WASHER		1
40534 D	22	CT57-12	DRIP PLUG FELT		1
40535 D	23	CT93B-50	DRIP PLUG OUTER WASHER		1
24520 D	24		CARBURETOR GASKET		1
53796 D	25	C150-17	FILTER SCREEN		
30593 D	26	C46-25	IDLE ADJUSTING SCREW		1
30594 D	27	C111-9	IDLE ADJUSTING SCREW SPRING		1

ENGINE

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			CARBURETOR, Zenith Model 161 x 7—Continued		
53789 D	28	CR88-8	Float Bracket		
29888 D	29	T73-9	Float Bracket Drive Screw		1
21210 D	30	CT57-4	Throttle Shaft Packing Washer		1
42191 D	31	C131-4x2	Throttle Shaft Packing Retainer		1
53798 D	32	C29-143	Throttle Shaft with Lever	501 to 61610	1
62170 D	32	C29-225	Throttle Shaft with Lever	61611 Up	1
54062 D	33	CT52-24	Throttle Lever Spacer		1
12428 D	34	CT63-2	Taper Pin		1
12455 D	35	T1S8-10	Throttle Stop Screw		1
53792 D	36	T56-20	Fuel Valve Washer		1
53782 D	37	C81-17	Fuel Valve, Complete - No. 25 (Will Work for 54059 D)		1
35514 D	38	C120-4	Float Axle	501 to 61610	1
62174 D	38	C120-42	Float Axle	61611 Up	1
132119	39	T1S10-10	Bowl to Body Screw No. 10-32 x 5/8" (Cadmium Plated) (Same as 12460 D)		4
54063 D	40	CT91-3	Drain Plug (Gasoline)		1
53791 D	40A	CT150-1	Drain Cock (Kerosene or Distillate)		1
106497	41	T41-10	Bowl to Body Screw Lockwasher No. 10 (Same as 12453 D)		4
53772 D	42	B3-63A	Fuel Bowl (Gasoline)	501 to 61610	1
53773 D	42	B3-63B	Fuel Bowl (Kerosene or Distillate)	501 to 67631	1
62168 D	42	B3-85D-2	Fuel Bowl	61611 Up	1
12435 D	43	T56-24	Main Jet Washer		1
53778 D	44	C52-6-1	Main Jet No. 17 (Gasoline)	501 to 61610	1
53802 D	44	C52-6-1	Main Jet No. 22 (Kerosene or Distillate)	501 to 67631	1
55728 D	44	C52-6-1	Main Jet No. 18 (Gasoline)	61611 Up	1
55594 D	44	C52-6-1	Main Jet No. 19 (Kerosene or Distillate)	67632 Up	1
12433 D	45	T56-23	Lower Plug Washer (Gasoline)		1
12433 D	45	T56-23	Main Jet Adjustment Washer (Kerosene or Distillate)		1
16825 D	46	C138-23	Lower Plug (Gasoline) (Main Jet Passage)		1
53786 D	47	C71-21	Main Jet Adjustment (Kerosene or Distillate)		1
53787 D		CR37-1x2	Air Shutter Shaft Hole Plug		1
354763 R91			Carburetor Overhaul Package		1

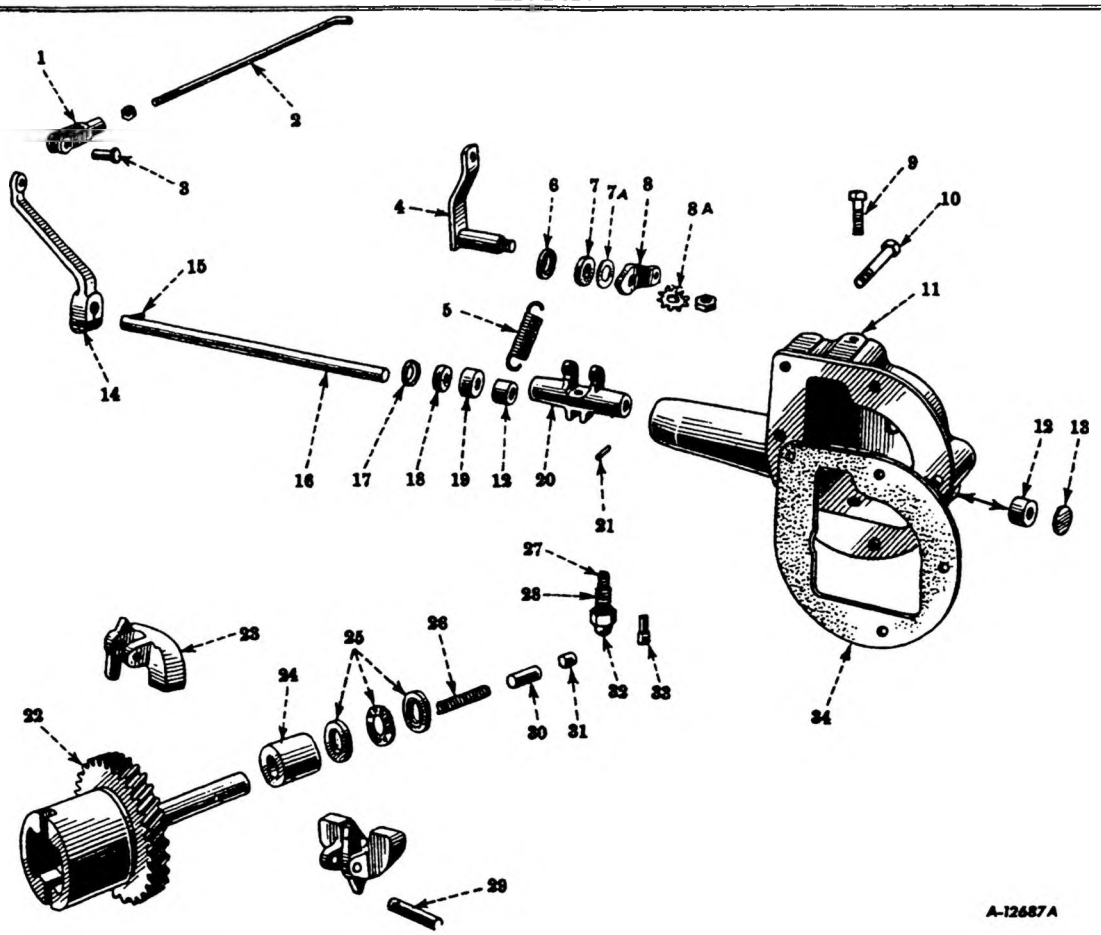

GOVERNOR AND CONNECTIONS

104036	1	Governor Connecting Rod Fork (Same as 17730 D)	1	
103024		Hex Nut, 1/4" N.F.	1	
43617 DA	2	Governor Connecting Rod	1	
137130		Cotter Pin, 1/16 x 7/16"	1	
14611 H	3	Governor Connecting Rod Fork Pin (Order 103494)	1	
137130		Cotter Pin, 1/16 x 7/16"	1	
17741 D	3	Governor Connecting Rod Fork Pin (Order 103494)	1	
137130		Cotter Pin, 1/16 x 7/16"	1	
103494	3	Governor Connecting Rod Fork Pin (Same as 14611H)	1	
137130		Cotter Pin, 1/16 x 7/16"	1	
46947 DAX	4	Governor Speed Change Lever with Shaft	1	
114494		Hex Jam Nut, 3/8" N.F.	1	
46944 DA	5	Governor Spring	1	
46950 D	6	Governor Speed Change Lever Shaft Seal Retainer	1	
46949 D	7	Governor Speed Change Lever Shaft Seal	1	
355476 R1	7A	Governor Spring Lever Washer (Used with Governor Spring Lever,		
		51491 DA)	1	
355477 R91	8	Governor Spring Lever, 51491 DA, with Washer, 355476 R1		
		(Will Work for 51491 DAX and 46945 DX)	1	
51491 DA	8	Governor Spring Lever	1	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		GOVERNOR AND CONNECTIONS—Continued		
114606	8A	Governor Speed Change Lever and Shaft Nut Lockwasher		
		(Shakeproof 1120) (Same as 21491 H)		1
41359 D	9	Governor Speed Change Lever Stop (Used with 6340 DX)		1
220064		Hex Nut, 1/4" N.C.		1
357432 R1	9	Governor Speed Change Lever Stop		1
218438		Hex Jam Nut, 3/8"-16 N.C.		1
54041 D	10	Governor Housing Bolt (Will Work for 53061 D)		1
103320		Lockwasher, 5/16"		1
6340 DAX	11	Governor Housing, Complete		1
179821		Cap Screw, 5/16 x 1-3/8" N.C. Hex Head		2
179829		Cap Screw, 5/16 x 2-3/4" N.C. Hex Head		2
103320		Lockwasher, 5/16"		4
357433 R91	11	Governor Housing, 6340 DAX with Nut, 218438 and Stop,		
		357432 R1 (Will Work for 6340 DX)		1
45753 D	12	Governor Rockshaft Bearing (Torrington BH 68)		2
172531	13	Governor Housing Expansion Plug, 3/4"		1
6507 DA	14	Governor Rockshaft Arm		1
179796		Cap Screw, 1/4 x 7/8" N.C. Hex Head		1
103319		Lockwasher, 1/4"		1
106958	15	Governor Rockshaft Arm Key (Woodruff No. 1, 1/16 x 1/2")		1
46943 D	16	Governor Rockshaft (Order 353576 R91)	501 to 9435	1
46943 DA	16	Governor Rockshaft	9436 Up	1
43483 D	17	Governor Rockshaft Seal Retainer		1
43482 D	18	Governor Rockshaft Seal		1
46939 D	19	Governor Rockshaft Bushing		1
6816 DA	20	Governor Rockshaft Lever (Order 353576 R91)	501 to 9435	1
6816 DB	20	Governor Rockshaft Lever (Order 352522 R1)	9436 Up	1
352522 R1	20	Governor Rockshaft Lever (Will Work for 6816 DB)	9436 Up	1
6816 DBX	20	Governor Rockshaft, 46943 DA and Lever, 6816 DB		
		with Pin, 142485 (Order 353576 R91)	501 to 9435	1
353576 R91	20	Governor Rockshaft, 46943 DA and Lever, 352522 R1		
		with Pin, 142485 (Will Work for 6816 DA and 46943 D)	501 to 9435	1
19496 D	21	Governor Rockshaft Lever Groove Pin, 3/32 x 5/8"	501 to 9435	1
142485	21	Governor Rockshaft Lever Groove Pin, 1/8 x 5/8"		
		(Same as 38146 D)	9436 Up	1
6339 DAX	22	Magneto and Governor Pinion with Pin (33 Teeth)		1
351778 R1	23	Governor Weight (Will Work for 6506 D)		2
49325 D	24	Governor Thrust Sleeve		1
43481 D	25	Governor Thrust Ball Bearing (Aetna ED 2293)		
		(Optional with 55314 D)		1
55314 D	25	Governor Thrust Ball Bearing (Nice 5971)		
		(Optional with 43481 D)		1

ENGINE

GOVERNOR AND CONNECTIONS —Continued

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
49218 D	26	Governor Shaft Bumper Spring (Order 250846 R91)	501 to 136336	1	
49218 DA	26	Governor Shaft Bumper Spring	136337 Up	1	
28078 D	27	Governor Bumper Spring		1	
31804 D	28	Governor Bumper Spring Body		1	
114495		Hex Jam Nut, 7/16" N.F.		1	
46924 D	29	Governor Weight Pin		2	
108628		Cotter Pin, 1/16 x 7/8"		2	
49219 D	30	Governor Shaft Bumper Pin (Order 250846 R91)	501 to 136336	1	
49219 DA	30	Governor Shaft Bumper Pin	136337 Up	1	
49220 D	31	Governor Shaft Stop Pin		1	
50046 D	32	Governor Bumper Spring Body Cap		1	
46942 D	33	Governor Rockshaft Lever Retainer Pin		1	
45875 D	34	Governor Housing Gasket		1	
250846 R91		Governor Shaft Bumper Spring, 49218 DA and Pin, 49219 DA			
		(Will Work for 49218 DA and 49219 D)	501 to 136336	1	
356745 R91		Governor, Assembly Package		1	

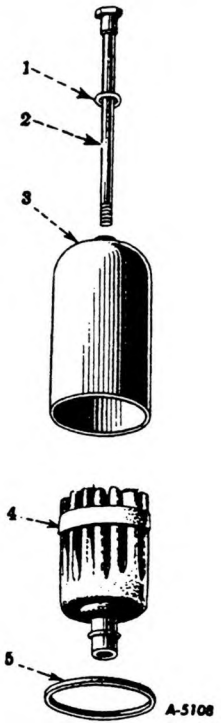

LUBRICATING OIL FILTER

13727 D	1	Oil Filter Case Retaining Bolt Gasket (Optional with 365109 R1)		1
365109 R1	1	Oil Filter Case Retaining Bolt Gasket (Optional with 13727 D)		1
43418 D	2	Oil Filter Case Retaining Bolt	501 to 97937	1
63857 D	2	Oil Filter Case Retaining Bolt	97938 Up	1
43417 DX	3	Oil Filter Case	501 to 97937	1
63856 D	3	Oil Filter Case	97938 Up	1
63858 D	4	Oil Filter Element (Umbrella Type)(Will Work for 39515 DA)	501 to 97937	1
63855 D	4	Oil Filter Element (Umbrella Type) (Optional with 355009 R1)	97938 Up	1
355009 R91	4	Oil Filter Element (Radial Fin Type) (Optional with 63855 D)	97938 Up	1
13728 D	5	Oil Filter Case Gasket		1

MEMORANDA

ELECTRICAL SYSTEM

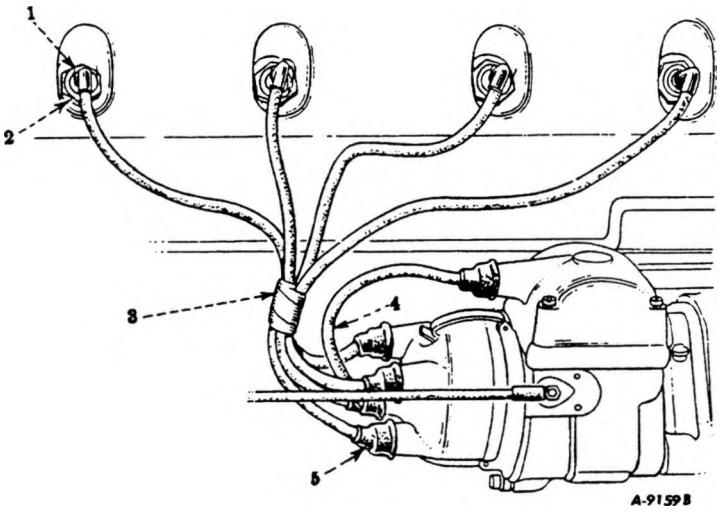

SPARK PLUGS AND CABLES

SPARK PLUGS—Normal Service

353976 R91	1	Spark Plug (Champion 15-A)	4	
353982 R91	1	Spark Plug (AC-85-S Com)	4	
353991 R91	1	Spark Plug (Auto Lite BT-8)	4	

SPARK PLUGS—Light or Moderate Service

355261 R91	1	Spark Plug (Champion C-15)	4	
353985 R91	1	Spark Plug (AC-88-S Com)	4	
353992 R91	1	Spark Plug (Auto-Lite BT-10)	4	

SPARK PLUGS—Severe Service

353978 R91	1	Spark Plug (Champion H-17-A)	4	
353983 R91	1	Spark Plug (AC-83-S Com)	4	
353990 R91	1	Spark Plug (Auto-Lite BT-4)	4	

SPARK PLUGS—Extremely Severe Service

353977 R91	1	Spark Plug (Champion H-16-A)	4	
353986 R91	1	Spark Plug (AC-81-S-Com)	4	
353989 R91	1	Spark Plug (Auto-Lite BT-3)	4	
37762 H	2	Spark Plug Gasket	4	
356694 R92	3	Ignition Cable Service Package (Consists of Spark Plug Cable, Assembly, with Cable, 356686 R92 and Four Nipples, 251553 R1) (Will Work for 355866 R91)	1	
356686 R92	4	Coil to Distributor Cable (Secondary)	1	
251553 R1	5	Coil to Distributor Cable Nipple	4	
65064 DA		Spark Plug and Breaker Point Gage (Not Illustrated)	1	
46190 DC		Spark Plug Wrench (Not Illustrated)	1	

ELECTRICAL SYSTEM

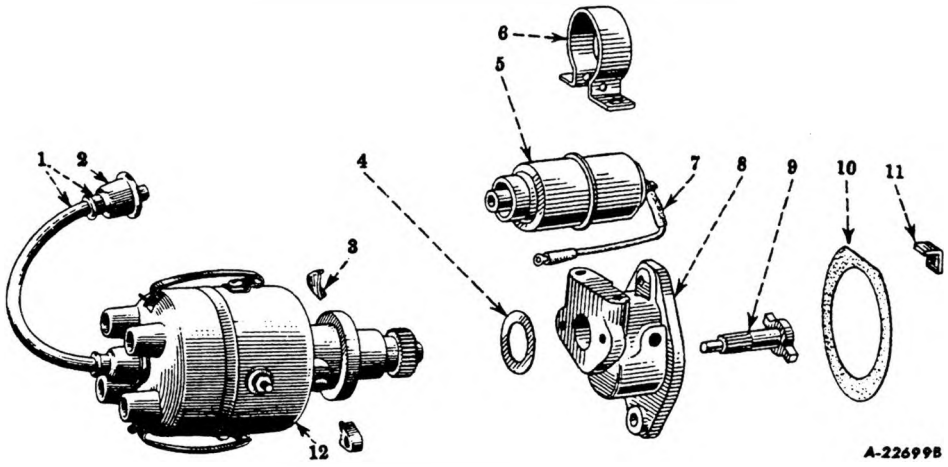

BATTERY IGNITION UNIT

353870 R91		Battery Ignition Unit (Less Ref. Nos. 10 and 11)	1	
356686 R92	1	Cable, Coil to Distributor with 2 Nipples, 251553 R1		
		(Secondary) (Will Work for 49125 D)	1	
251553 R1	2	Nipples	2	
353937 R1	3	Distributor Clamp	2	
180078		Cap Screw, 5/16 x 7/8" N.C. Hex Head (Cadmium Plated)	2	
120214		Lockwasher, 5/16" (Cadmium Plated)	2	
353936 R2	4	Distributor Gasket	1	
353874 R91	5	Ignition Coil (6 Volt)	1	
120614		Hex Nut, No. 10-32 (Cadmium Plated)	2	
120217		Lockwasher, No. 10 (Cadmium Plated)	2	
353889 R1	6	Coil Clamp	1	
180073		Cap Screw, 5/16 x 1/2" N.C. Hex Head	2	
132926		Slotted Screw, No. 10-32 x 1-1/4" Round Head (Cadmium Plated)	1	
120611		Square Nut, No. 10-32 (Cadmium Plated)	1	
120214		Lockwasher, 5/16" (Cadmium Plated)	2	
120217		Lockwasher, No. 10 (Cadmium Plated)	1	
120393		Washer, 11/32" I.D. x 11/16" O.D. x No. 16 Ga. (Cadmium Plated)	2	
353942 R11	7	Cable, Coil to Distributor, Primary	1	
353933 R11	8	Distributor Drive Housing	1	
179840		Cap Screw, 3/8 x 1-1/8" N.C. Hex Head	2	
179846		Cap Screw, 3/8 x 1-7/8" N.C. Hex Head	1	
103321		Lockwasher, 3/8"	2	
103883		Pipe Plug, 1/8" Headless Slotted	1	
353934 R11	9	Distributor Drive Shaft	1	
46168 DB	10	Distributor Drive Housing Gasket	1	
46868 D	11	Distributor Mounting Clip	1	
353890 R91	12	Distributor, Complete	1	
353938 R91		Battery Ignition Package (Tractors Equipped with Magnetos and Electric		
		Starting and/or Lighting)	1	

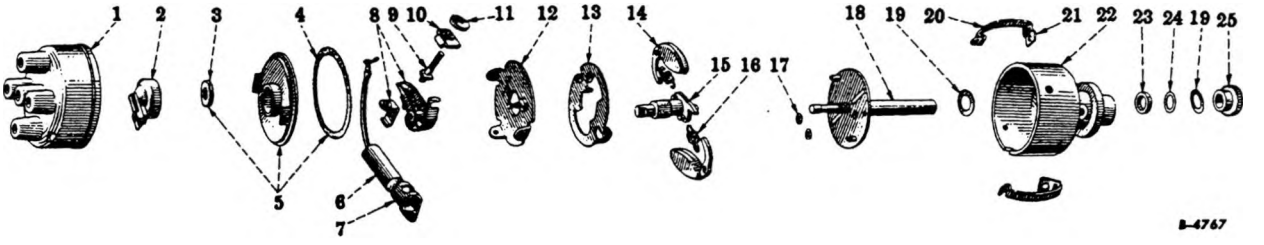

BATTERY IGNITION DISTRIBUTOR

353890 R91		Distributor, Complete	1
351693 R91	1	Distributor Cap	1
353896 R91	2	Distributor Rotor	1
353901 R2	3	Breaker Cover Seal Felt	1
352284 R2	4	Breaker Cover Gasket	1
353900 R11	5	Breaker Cover with Felt, 353901 R2 and Cover Gasket, 352284 R2	1
353903 R2	6	Condenser	1
353905 R1	7	Condenser Clamp	1
131949		Slotted Screw, No. 8-32 x 3/16" Fillister Head (Cadmium Plated)	1
121841		Lockwasher, No. 8 (Cadmium Plated)	1
353172 R91	8	Breaker Arm and Stationary Point Package	1
436690		Slotted Screw, No. 8-32 x 3/16" Pan Head (Cadmium Plated)	1
353907 R1	9	Terminal Screw	1
120622		Hex Nut, No. 8-32 (Cadmium Plated)	3
121841		Lockwasher, No. 8 (Cadmium Plated)	3
353906 R1	10	Spring Anchor Terminal Insulator	1

ELECTRICAL SYSTEM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BATTERY IGNITION DISTRIBUTOR—Continued		
251538 R1	11	Terminal Insulating Washer		1
352277 R11	12	Breaker Plate		1
121832		Slotted Screw, No. 8-32 x 3/8" Round Head (Cadmium Plated)		1
121841		Lockwasher, No. 8 (Cadmium Plated)		1
352301 R1	13	Governor Weight Guard		1
131949		Slotted Screw, No. 8-32 x 3/16" Fillister Head (Cadmium Plated)		2
121841		Lockwasher, No. 8 (Cadmium Plated)		2
353915 R91	14	Weight Arm		2
353908 R91	15	Cam (Order 355724 R91)		1
355724 R91	15	Cam with Felt, 355460 R1 (Will Work for 353908 R91)		1
353918 R1	16	Governor Spring		2
352293 R1	17	Weight Arm Spacer		4
353928 R91	18	Distributor Shaft		1
352298 R1	19	Distributor Thrust Washer		2
353894 R1	20	Distributor Cap Spring		2
353895 R1	21	Distributor Cap Spring Support		2
121832		Slotted Screw, No. 8-32 x 3/8" Round Head (Cadmium Plated)		2
121841		Lockwasher, No. 8 (Cadmium Plated)		2
353898 R11	22	Distributor Housing with Seal, 252739 R1, Retainer, 353899 R1 and Plug, 125947		1
125947		Pipe Plug, 1/8" Slotted (Cadmium Plated)		1
353899 R1	23	Distributor Shaft Oil Seal Retainer		1
252739 R1	24	Distributor Shaft Oil Seal		1
353902 R1	25	Distributor Gear		1
117890		Straight Pin, 1/8 x 15/16" Square End (Order 354552 R1)		1
21394 D		Stationary Point and Terminal Washer		3
352302 R1		Cam Oil Hole Felt (For 5/32" Cam Bore)		1
354552 R1		Distributor Gear Pin		1
355460 R1		Cam Oil Hole Felt (For 9/32" Cam Bore)		1

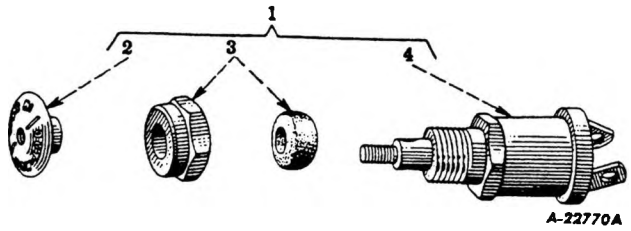

BATTERY IGNITION SWITCH

62801 DC	1	Battery Ignition Switch, Complete	1	
64022 H		Slotted Screw, No. 8-32 x 1/4" Special Head (Cadmium Plated)	2	
121841		Lockwasher, No. 8 (Cadmium Plated)	2	
8732 D	2	Switch Knob	1	
120217		Lockwasher, No. 10 (Cadmium Plated)	1	
56517 DX	3	Switch Mounting Nut	1	
138553		Lockwasher, 9/16" Internal Tooth (Cadmium Plated)	1	
	4	Battery Ignition Switch (Order 62801 DC)	1	

ELECTRICAL SYSTEM

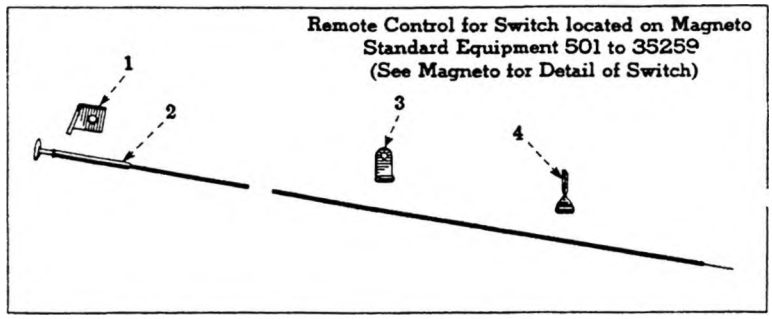

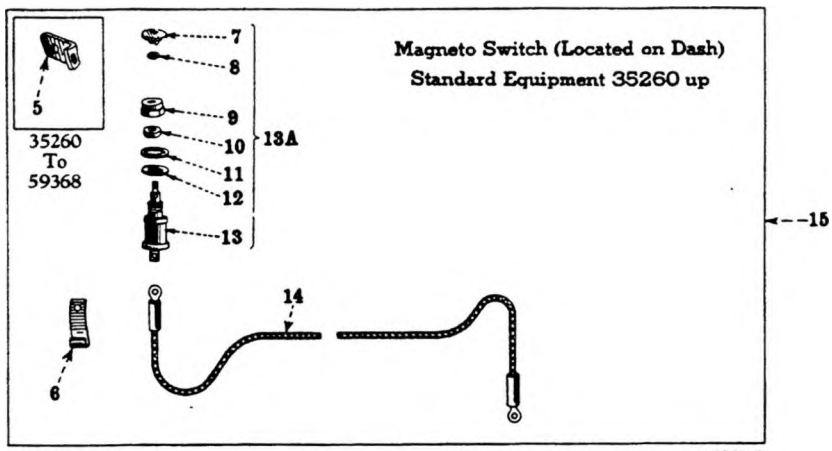

A-12466A

MAGNETO IGNITION SWITCH AND CONTROLS

49642 D	1	Magneto Grounding Switch Control Wire Bracket ("A" and "B" only)	1
51006 D	2	Magneto Grounding Switch Control Wire ("A" and "B" only)	1
51008 D	3	Magneto Grounding Switch Control Wire Clip, Rear ("A" and "B" only)	1
51007 D	4	Magneto Grounding Switch Control Wire Clip, Front ("A" and "B" only)	1
56506 D	5	Magneto Ignition Switch Bracket 35260 to 59368	1
58262 D	6	Magneto Ignition Switch Cable Clip	1
8732 D	7	Magneto Ignition Switch Knob	1
131183	8	Lockwasher, No. 10 (Cadmium Plated)	1
56517 D	9	Magneto Ignition Switch Mounting Nut	1
56519 D	10	Magneto Ignition Switch Plunger Dust Seal	1
138553	11	Magneto Ignition Switch Mounting Nut Lockwasher (Same as 55440 D)	1
56507 D	12	Magneto Ignition Switch Bracket Washer	1
	13	Magneto Ignition Switch (Not Serviced Separately) (Order 54207 DB)	
54207 DB	13A	Magneto Ignition Switch, Complete	1
64022 H		Slotted Screw, No. 8-32 x 5/16" Special Head (Cadmium Plated)	1
121841		Lockwasher, No. 8 (Cadmium Plated)	1
358572 R91	14	Magneto Ignition Switch Cable (Will Work for 55679 D)	1
132100		Slotted Screw, No. 10-32 x 5/16" N.F. (Fillister Head) (Cadmium Plated)	1
131183		Lockwasher, No. 10 (Cadmium Plated)	1
62585 D	15	Magneto Grounding Switch Attachment (Special) 501 to 35259	1

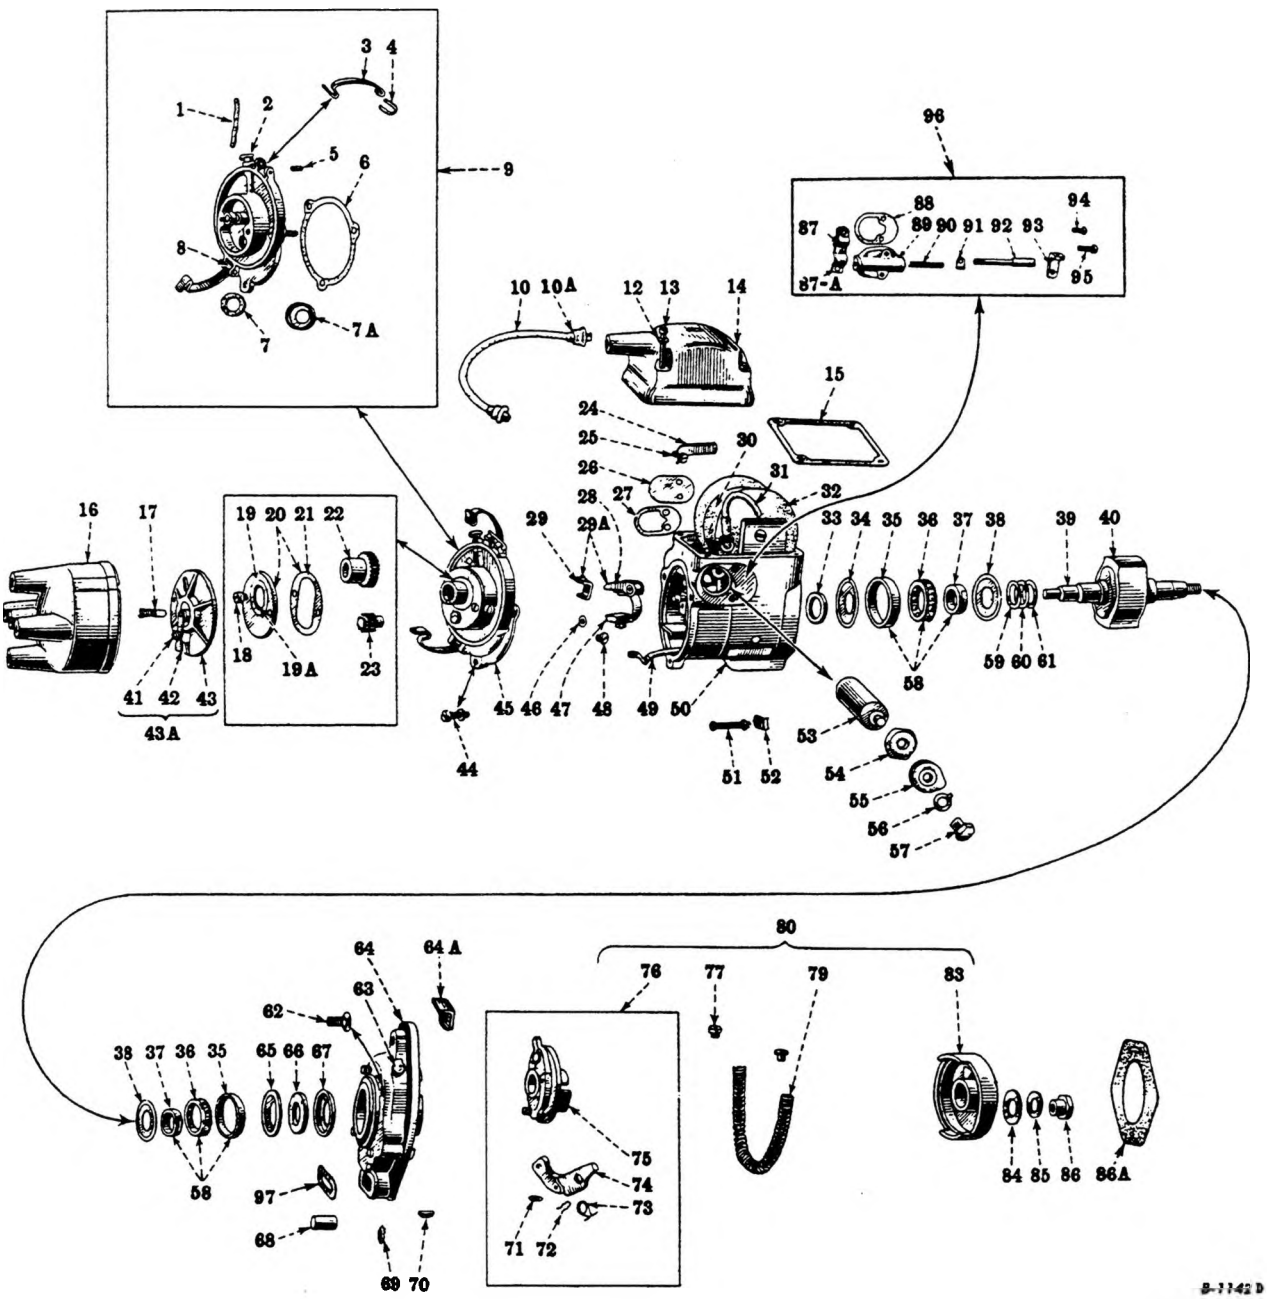

MAGNETO, INTERNATIONAL TYPE H-4

ELECTRICAL SYSTEM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		MAGNETO, INTERNATIONAL TYPE H-4—Continued		
351210 R91		MAGNETO COMPLETE (CLOCKWISE) (WILL WORK FOR 47477 DA) TRACTORS-35260 UP		1
179842		CAP SCREW, 3/8 x 1-3/8" N.C. HEX HEAD		2
103321		LOCKWASHER, 3/8"		2
53180 DA		MAGNETO, 351218 R91 WITH GROUNDING SWITCH, 50770 DA TRACTORS-501 TO 35259		1
E4 216	1	OIL WELL FELT		1
E4 295	2	OILER		1
51666 D	3	DISTRIBUTOR CAP SPRING		2
55855 D	4	DISTRIBUTOR CAP SPRING STOP PIN	MAGNETO 59061 TO 1002061	1
47424 D	5	DISTRIBUTOR CAP LOCATING PIN		1
47408 D	6	DISTRIBUTOR BODY GASKET		1
49423 D	7	DISTRIBUTOR BODY FELT SEAL		1
49424 D	7A	DISTRIBUTOR BODY FELT RETAINER		1
51667 D	8	DISTRIBUTOR CAP SPRING PIN		2
			MAGNETO 39061 TO 1002061	1
6483 DAY	9	DISTRIBUTOR BODY, COMPLETE		1
356686 R91	10	COIL TO DISTRIBUTOR CABLE WITH 2 NIPPLES, 251553 R1		
		(SECONDARY) (OPTIONAL WITH 49125 D)		1
251553 R1	10A	COIL TO DISTRIBUTOR CABLE NIPPLE	TRACTORS 204042 UP	2
38609 DA	12	COIL COVER MOUNTING WASHER		4
49791 D	13	COIL COVER MOUNTING SCREW (ORDER 131997)		4
131997	13	FOLLOWS REF. NO. 14		
47449 DAY	14	COIL COVER WITH SECONDARY LEADOUT, COMPLETE		1
131997		SLOTTED SCREW, NO. 8 - 32 x 1-1/2" FILLISTER HEAD		
		(CADMIUM PLATED) (WILL WORK FOR 49791 D)		4
47453 D	15	COIL COVER GASKET		1
47413 DXC	16	DISTRIBUTOR CAP		1
47413 DYC	16	DISTRIBUTOR CAP 47413 DXC WITH BRUSH, 21350 DXA, 32032 DXA		
		OR 356622 R11		1
21350 DXA	17	DISTRIBUTOR BRUSH WITH SPRING (OPTIONAL WITH 32032 DXA		
		OR 356622 R11)		1
32032 DXA	17	DISTRIBUTOR BRUSH WITH SPRING (OPTIONAL WITH 21350 DXA		
		OR 356622 R11)		1
356622 R11	17	DISTRIBUTOR BRUSH WITH SPRING (OPTIONAL WITH 32032 DXA		
		OR 21350 DXA)		1
132760	18	FOLLOWS REF. NO. 20		
49417 D	19	DISTRIBUTOR GEAR COVER FELT RETAINER		1
49418 D	19A	DISTRIBUTOR GEAR COVER FELT SEAL		1
49416 DX	20	DISTRIBUTOR GEAR COVER, COMPLETE		1
132760		SLOTTED SCREW, NO. 8 - 32 x 1/2" ROUND HEAD (CADMIUM PLATED)		2
121841		LOCKWASHER, NO. 8 (CADMIUM PLATED)		2
49419 D	21	DISTRIBUTOR GEAR COVER GASKET		1
49420 DX	22	DISTRIBUTOR GEAR, 24 TEETH		1
47417 DX	23	ROTOR PINION		1

ELECTRICAL SYSTEM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		MAGNETO, INTERNATIONAL TYPE H-4—Continued		
47452 D	24	Secondary Leadout		1
E4A 546	25	Secondary Leadout Screw (Order 436652)		1
436652	25	Slotted Screw, No. 4-48 x 5/16" Pan Head (Cadmium Plated)		1
131043		Lockwasher, No. 4 (Cadmium Plated)		1
48343 D	26	Magneto Frame Expansion Plug	Magneto 501 to 45589	1
55015 D	26	Condenser Hole Cover	Magneto 45590 up	1
121832		Slotted Screw, No. 8 - 32 x 3/8" Round Head (Cadmium Plated)		2
121841		Lockwasher, No. 8 (Cadmium Plated)		2
48472 DA	27	Condenser Hole Cover Gasket	Magneto 45590 up	1
47431 DB	28	Breaker Arm, Complete (Order 353171 R91)		1
21388 DBX	29	Stationary Point Contact Disc and Support (Order 353171 R91)		1
353171 R91	29A	Breaker Arm and Stationary Point Package		
		(Will Work for 47431 DB and 21388 DBX)		1
436692		Slotted Screw, No. 8 - 32 x 5/16" Pan Head		1
21314 DX	30	Coil Core with 2 Screws, 133495		1
47439 DAX	30	Coil and Core, Complete		1
57926 DX	30	Coil, Complete with End Insulators		1
47442 D	31	Primary to Condenser Leadout Tube	Magneto 501 to	1
49593 D	32	Coil End Insulator		2
E4 226	33	Bearing Felt		1
47454 D	34	Felt Retainer, Inner		1
ST 601	35	Rotor Shaft Ball Bearing, Outer Race (1H-15-0)		2
ST 602	36	Rotor Shaft Ball Bearing Retainer and Balls (1H-15-RU)		2
ST 600	37	Rotor Shaft Ball Bearing, Inner Race (1H-15-1)		2
E4A 324	38	Oil Flinger		2
21341 D	39	Breaker Cam	Magneto 501 to 216969	1
60094 D	39	Breaker Cam	Magneto 216970 up	1
47455 DAR	40	Rotor, Complete		1
47427 D	41	Distributor Rotor Nut		1
131181		Lockwasher, No. 6 (Cadmium Plated)		1
47428 DA	42	Distributor Arm		1
47425 DX	43	Distributor Rotor		1
47425 DY	43A	Distributor Rotor, Complete		1
47409 D	44	Distributor Mounting Screw	Magneto 501 to 649261	3
120217		Lockwasher, No. 10 (Cadmium Plated)		3
56066 DA	45	Distributor, Complete		1
21394 D	46	Stationary Point Support Washer		1
47432 D	47	Spring Anchor		1
133482		Slotted Screw, No. 8 - 32 x 3/8" Flat Head (Cadmium Plated)		1
120622		Hex Nut, No. 8 - 32 (Cadmium Plated)		1
121841		Lockwasher, No. 8 (Cadmium Plated)		1

ELECTRICAL SYSTEM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		MAGNETO, INTERNATIONAL TYPE H-4—Continued		
21393 D	45	Stationary Point Support Screw (Order 436692)		1
436692	48	Slotted Screw, No. 8-32 x 5/16" Pan Head (Cadmium Plated)		1
47433 DX	49	Primary Leadout, Complete		1
6482 DAY	50	Frame, Complete		1
131952	51	Follows Reference No. 52		
48339 D	52	Condenser Clip		1
131992		Slotted Screw, No. 8 - 32 x 1-1/4" Fillister Head (Cadmium Plated)		1
121841		Lockwasher, No. 8 (Cadmium Plated)		1
21409 DB	53	Condenser (Will Work for 47546 D)		1
47438 DA	54	Short Circuiting Terminal Inner Washer		1
48341 D	55	Short Circuiting Terminal Outer Washer		1
48342 DA	56	Short Circuiting Terminal Lockwasher		1
48340 DA	57	Short Circuiting Terminal		1
ST 307	58	Rotor Shaft Ball Bearing (1H-M-15)		2
E4A 305	59	Rotor Shim, Light		X
E4 212	60	Rotor Shim, Medium		X
E4A 372	61	Rotor Shim, Heavy		X
173-4	62	Follows Ref. No. 64		
27311 D	63	Impulse Coupling Oiler		1
6515 DAX	64	Mounting Flange, Complete		1
173464		Slotted Screw, 1/4-20 x 9/16" Flat Head		4
114616		Lockwasher, 1/4" (External Tooth)		4
46868 D	64A	Mounting Clip		1
47474 D	65	Oil Retainer Washer, Inner (Order 353051 R91)		1
47475 DA	66	Oil Seal (Order 353051 R91)		1
47473 D	67	Oil Retainer Washer, Outer (Order 353051 R91)		1
47468 DA	68	Impulse Coupling Stop Pin		1
114616	69	Mounting Flange Lockwasher (Shakeproof No. 1514) (Same as 46785 D)		4
106749	70	Rotor Shaft Key (Woodruff No. 3-1/8 x1/2") (Same as 4167 T)		1
47461 D	71	Pawl Pin Washer		1
47462 D	72	Pawl Pin Snap Ring		2
51303 D	73	Pawl Spring	Magneto 7635 Up	2
51304 D	74	Pawl	Magneto 7635 Up	2
47293 DX	75	Magneto Member		1
47293 DY	76	Magneto Member with Pawls, Complete		1
				X-As Required

ELECTRICAL SYSTEM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		MAGNETO, INTERNATIONAL TYPE H-4—Continued		
251555 R1	77	Spring End Button (Will work for 47465 D)		2
47822 D	79	Magneto Coupling Spring		1
47293 DZ	80	Rotating Unit, Complete		1
47292 DX	83	Drive Member		1
24603 D	84	Magneto Member Lockwasher		1
251591 R1	85	Impulse Coupling Nut, Lockwasher		1
47470 D	86	Impulse Coupling Nut		1
46168 DB	86A	Magneto Flange Gasket		1
50768 D	87	Grounding Switch Control Wire Clamp	Magneto 501 to 45589	1
131954		Screw No. 8 - 32 x 1/4" Fillister Head (Cadmium Plated)		1
120622		Hex Nut, No. 8-32 (Cadmium Plated)		1
121841		Lockwasher, No. 8 (Cadmium Plated)		1
50769 D	87A	Grounding Switch Control Wire Support	Magneto 501 to 45589	1
48472 DA	88	Switch Housing Gasket	Mangeto 501 to 45589	1
6674 D	89	Switch Housing	Magneto 501 to 45589	1
131979		Slotted Screw, No. 8 - 32 x 3/4" Fillister Head (Cadmium Plated)		2
121841		Lockwasher, No. 8 (Cadmium Plated)		2
48475 D	90	Grounding Switch Spring	Magneto 501 to 45589	1
48473 D	91	Grounding Switch Contact	Magneto 501 to 45589	1
48474 D	92	Grounding Switch Plunger	Magneto 501 to 45589	1
120614		Hex Nut, No. 10 - 32 (Cadmium Plated)		2
120217		Lockwasher, No. 10 (Cadmium Plated)		1
49631 D	93	Grounding Switch Control Link	Magneto 501 to 45589	1
51285 D	94	Grounding Switch Control Clamp Screw	Magneto 501 to 45589	1
120622		Hex Nut, No. 8 - 32 (Cadmium Plated)		1
121841		Lockwasher, No. 8 (Cadmium Plated)		1
E4A 358	95	Grounding Switch Plunger Screw	Magneto 501 to 45589	1
120217		Lockwasher, No. 10 (Cadmium Plated)		2
50770 D	96	Magneto Grounding Switch, Complete	Magneto 501 to 45589	1
24523 D	97	Magneto Bolt Washer (Will Work for 41335 D and 62493 D)		1
21372 D		Tube of Magneto Grease (Furnished when Ordered)		1
57314 D		Magnet Keeper		1
57755 D		Breaker Point Gauge		1
69398 D		Electrical Insulating Varnish (1 Pint)		
		(Furnished when Ordered)		X
353051 R91		Oil Seal Service Package		1
133495		Slotted Screw, No. 8-32 x 5/8" Flat Head		2
				X-As Required

Always give MAGNETO NUMBER when ordering Parts.

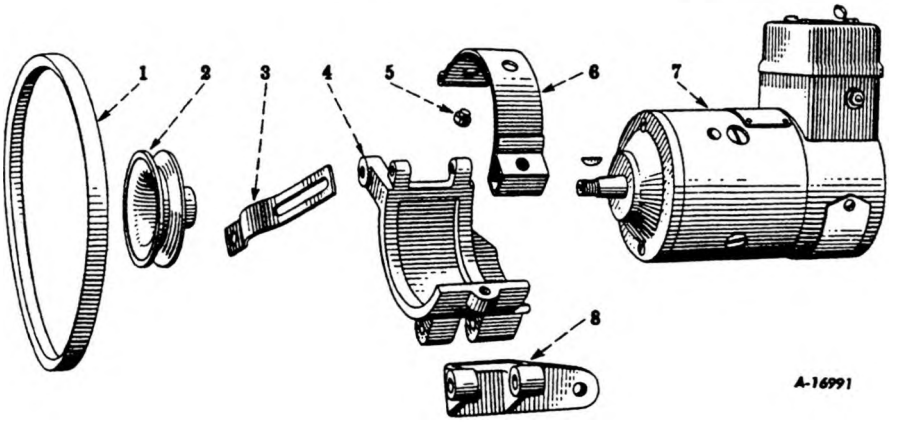

GENERATOR, PULLEY AND BRACKET (Bosch "No-Battery" Type) (Special)

52318 DA	1	Generator Belt	1	
9191 D	2	Generator Pulley	1	
61469 DA	3	Generator Brace	1	
179817		Cap Screw, 5/16 x 7/8" N.C. Hex. Head	1	
220066		Hex. Nut, 3/8" N.C.	1	
103320		Lockwasher, 5/16"	1	
103321		Lockwasher, 3/8"	1	
103340		Steel Washer, 11/32" I.D. x 11/16" O.D. x No. 16 Gauge	1	
9190 D	4	Generator Saddle	1	
186312		Cap Screw, 3/8 x 4" N.F. Hex. Head	1	
103026		Hex. Nut, 3/8" N.F.	1	
103321		Lockwasher, 3/8"	1	
28309 D	5	Generator Dowel Pin	1	
26080 DB	6	Generator Strap	1	
179822		Cap Screw, 5/16 x 1-1/2" N.C. Hex. Head	1	
181326		Cap Screw, 1/4 x 2-3/4" N.F. Hex. Head	1	
103024		Hex. Nut, 1/4" N.F.	1	
103320		Lockwasher, 5/16"	1	
103319		Lockwasher, 1/4"	1	
*61875 D	7	Generator (Bosch No. ARJF 75/6-900-A16) (Includes Woodruff Key, NKE 5/1, Nut, WMU 511/2 and Lockwasher, WA 7-16) (No Longer supplied for Service)	1	
9189 D	8	Generator Bracket	1	
179841		Cap Screw, 3/8 x 1-1/4" N.C. Hex Head	2	
103321		Lockwasher, 3/8"	2	
		* - All Service and Replacement Parts for Generator Should be Referred to an Authorized United American Bosch Corporation Service Station, Located in All Principal Cities. Orders Must Show Bosch Generator Number, Part Number and Name.		

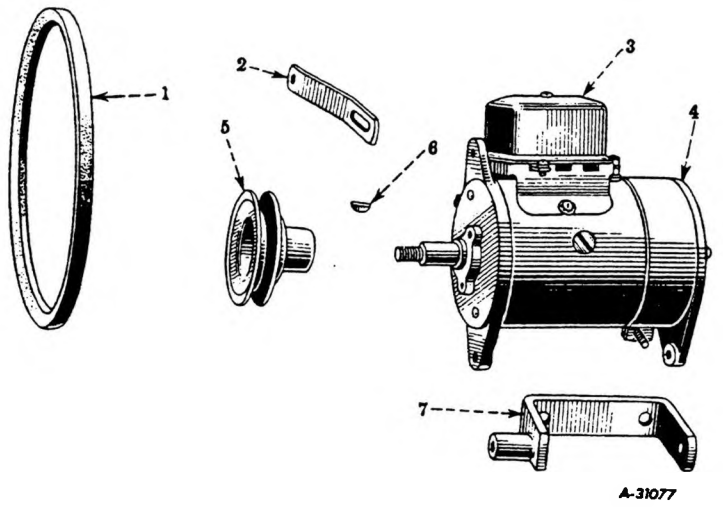

GENERATOR, PULLEY AND BRACKET (Delco-Remy) (Special)

49291 D	1	Generator Belt	1
49288 DA	2	Generator Brace	1
179816		Cap Screw, 5/16 x 3/4" N.C. Hex Head	1
220066		Hex Nut, 3/8" N.C.	1
103320		Lockwasher, 5/16"	1
103321		Lockwasher, 3/8"	1
Q 397		Washer, 11/32" I.D. x 3/4" O.D. x No. 16 Gauge	1
46412 D	3	Generator Relay (Delco-Remy 1116766)	1
132900		Slotted Screw, No. 10-32 x 3/8" Round Head (Cadmium Plated)	2
138479		Lockwasher, No. 10 (External Tooth) (Cadmium Plated)	2
120391		Washer, 7/32" I.D. x 1/2" O.D. x No. 18 gauge (Cadmium Plated)	2
45634 D	4	Generator with Relay, 46412 D (Delco-Remy 1101355) (Order 356936 R91) (See NOTE)	1
356936 R91	4	Generator, Complete (Will Work for 45634 D)	1
356937 R91	4	Generator (Delco-Remy 1101423)	1
179818		Cap Screw, 5/16 x 1" N.C. Hex Head	2
220065		Hex Nut, 5/16" N.C.	1
103047		Hex Nut, 1/2" N.C. (Castellated)	1
103320		Lockwasher, 5/16"	2
103374		Cotter Pin, 3/32 x 1"	1
Q 1520		Steel Washer, 17/32" I.D. x 1" O.D. x No. 14 Gauge	1
6812 D	5	Generator Pulley	1
103905	6	Woodruff Key No. 5, 1/8 x 5/8"	1
49287 DC	7	Generator Bracket	1
179838		Cap Screw, 3/8 x 7/8" N.C. Hex. Head	2
103321		Lockwasher, 3/8"	2
356938 R91		Cable, Generator "A" Terminal to Ground (Used with Generator, 356937 R91) (Delco-Remy 1872924)	1
356939 R91		Cable, Generator "F" Terminal to Relay "F" Terminal (Used with Generator, 356937 R91) (Delco-Remy 1877569)	1
		NOTE - Refer to Delco-Remy Electrical Equipment Parts Catalog TC-45 when Ordering Detail Parts for Complete Generator.	

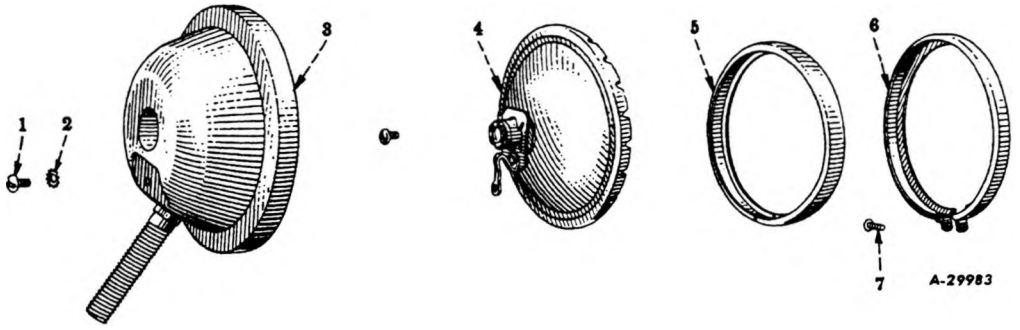

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			HEADLIGHTS OR REAR LIGHT (Sealed Beam) (Guide Lamp Corp.)		
357884 R91		926115	Headlight or Rear Light (6 to 8 Volt)		X
220063			Hex Nut, 1/2 N.C.		1
103323			Lockwasher, 1/2"		1
	1	455347	Slotted Machine Screw, No. 8 x 1/4" N.C. Pan Head		2
138530	2	138530	Lockwasher, No. 8 Internal-Tooth (Cadmium Plated)		2
358894 R91	3	5944116	Body		1
358890 R91	4	5943703	Sealed Unit		1
358892 R91	5	5944120	Gasket		1
358891 R91	6	5943697	Moulding		1
53526 D	7	912048	Moulding Screw		1

X - As Required

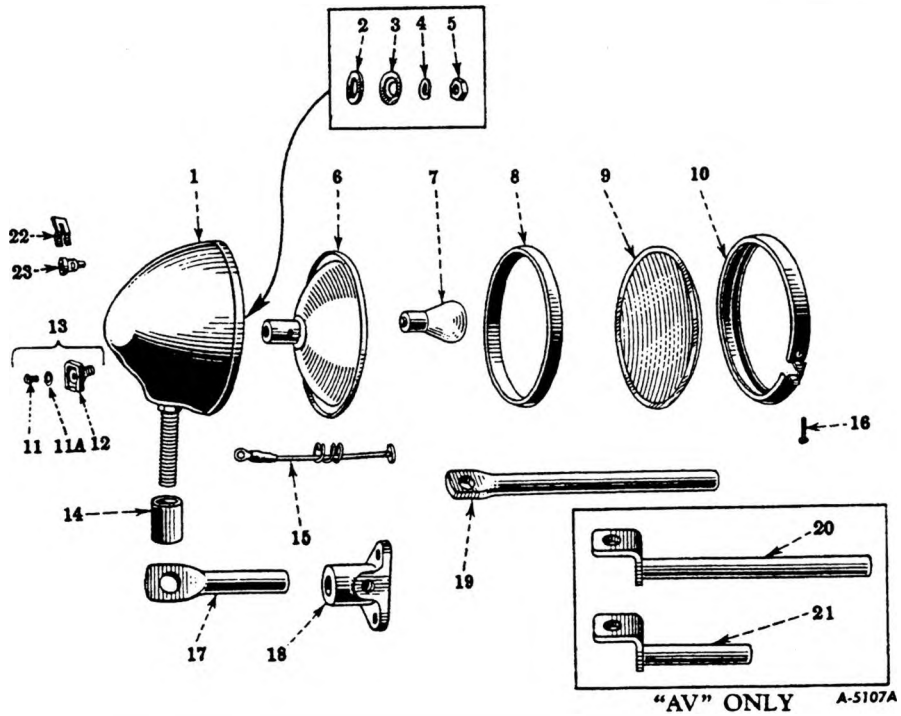

HEADLIGHT OR REAR LIGHT (Conventional) (Guide Lamp Corp.)

53522 DA	1	5939959	Body Assembly	1
37075 D	2	918653	Terminal Insulating Washer	1
37072 D	3	918652	Cup Washer	1
112723	4		Follows Reference No. 12	
37063 D	5	134556	Terminal Nut	1
53523 D	6	923119	Reflector Assembly	1
142309	7	1133L	Light Bulb (32 C.P.-S.C. 6-8 Volt) (Will Work for 103643)	1
53527 D	8	924639	Gasket Assembly	1
350478 R1	9	5936059	Lens (Will Work for 53521 D)	1
53525 DA	10	5939960	Moulding Assembly	1
121749	11		Follows Ref. 12 and 23	
136530	11A		Follows Ref. 12 and 23	
37064 D	12	918651	Terminal Plate (Order 68417 D)	1
121749			Slotted Screw, No. 8-32 x 5/16" Round Head	
			(Cadmium Plated) (same as 37536 H)	2
138530			Lockwasher, No. 8 Internal Tooth (Cadmium Plated)	
			(Same as 37077 D)	2
112723			Lockwasher, 5/16"	1
37067 D	13	920744	Terminal Plate, Complete (Order 68417 D)	1

ELECTRICAL SYSTEM

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			HEADLIGHT OR REAR LIGHT (Conventional) (Guide Lamp Corp.)—Continued		
45569 D	14		HEADLIGHT SPACER		1
53524 D	15	924209	WIRING ASSEMBLY		1
53526 D	16	912048	MOULDING SCREW		1
49393 D	17		REAR LIGHT POST (WILL WORK FOR 49282 D)		1
49393 D	17		HEADLIGHT POST, RIGHT ("A" ONLY)		1
102896			SET SCREW, 3/8 X 1" N.C. SQUARE HEAD (CUP POINT)		1
218438			HEX JAM NUT, 3/8" N.C.		1
6813 D	18		REAR LIGHT BRACKET		1
179817			CAP SCREW, 5/16 X 7/8" N.C. HEX HEAD		3
102896			SET SCREW, 3/8 X 1" N.C. (CUP POINT)		1
13001 R1			HEX NUT, 5/16" N.C.		3
218438			HEX JAM NUT, 3/8" N.C. 8		1
103320			LOCKWASHER, 5/16"		3
49394 D	19		HEADLIGHT POST, LEFT ("A", "B" AND "BN" ONLY)		1
102896			SET SCREW, 3/8 X 1" N.C. SQUARE HEAD (CUP POINT)		1
218438			HEX JAM NUT, 3/8" N.C.		1
49394 D	19		HEADLIGHT POST, RIGHT ("B" AND "BN" ONLY)		1
102896			SET SCREW, 3/8 X 1" N.C. SQUARE HEAD (CUP POINT)		1
218438			HEX JAM NUT, 3/8" N.C.		1
60393 DX	20		HEADLIGHT BRACKET POST, LEFT ("AV" ONLY)		1
102896			SET SCREW, 3/8 X 1" N.C. SQUARE HEAD (CUP POINT)		1
218438			HEX JAM NUT, 3/8" N.C.		1
60394 DX	21		HEADLIGHT BRACKET POST, RIGHT ("AV" ONLY)		1
102896			SET SCREW, 3/8 X 1" N.C. SQUARE HEAD (CUP POINT)		1
218438			HEX JAM NUT, 3/8" N.C.		1
79408 H	22	922785	TERMINAL PLATE SPRING		1
79407 H	23	922786	TERMINAL PLATE		1
121749			SLOTTED SCREW, NO. 8-32 X 5/16" ROUND HEAD (CADMIUM PLATED) (SAME AS 37536 H)		2
138530			LOCKWASHER, NO. 8 INTERNAL TOOTH (CADMIUM PLATED) (SAME AS 37 077 D)		2
45640 DB		873-24	HEADLIGHT OR REAR LIGHT		X
114774			HEX NUT, 1/2" N.C.		1
103323			LOCKWASHER, 1/2" N.C.		1
68417 D		5935509	TERMINAL PLATE, COMPLETE (WILL WORK FOR 37064 D, AND 37067 D)		1

X - AS REQUIRED

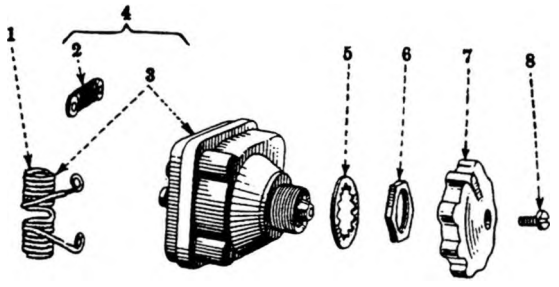

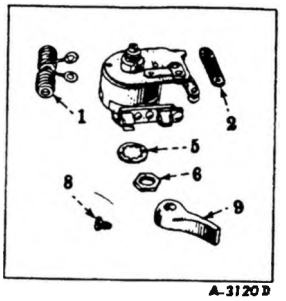

A-3120 B

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
			LIGHTING SWITCH (Delco-Remy)			
	1	814545	DIMMER RESISTANCE COIL		1	
	2	1878070	GENERATOR FIELD RESISTANCE COIL (DELCO-REMY)		1	
	3	1994038	LIGHTING SWITCH WITH COIL, 814545		1	
	3	1994021	LIGHTING SWITCH, COMPLETE (6 VOLT) (BOSCH LIGHTING)		1	
	3	1994036	LIGHTING SWITCH WITH COIL, 814545 (BOSCH "NO BATTERY" LIGHTING)		1	
	4	1994019	LIGHTING SWITCH WITH COILS, 47889 D AND 47891 D (DELCO-REMY)		1	
	5	1222	LIGHTING SWITCH MOUNTING NUT LOCKWASHER (SHAKEPROOF) (DELCO-REMY)	501 TO 29560	1	
	5	1230	LIGHTING SWITCH MOUNTING NUT LOCKWASHER (SHAKEPROOF)	29561 UP	1	
	6	1873327	LIGHTING SWITCH MOUNTING NUT (DELCO-REMY)	501 TO 29560	1	
	6	1882012	LIGHTING SWITCH MOUNTING NUT	29561 UP	1	
	7	1882013	LIGHTING SWITCH KNOB	29561 UP	1	
	8	1864099	LIGHTING SWITCH HANDLE MOUNTING SCREW		1	
		121841	LOCKWASHER, NO. 8 (CADMIUM PLATED)		1	
	9	1873326	LIGHTING SWITCH HANDLE (DELCO-REMY)	501 TO 29560	1	

LIGHTING EQUIPMENT

(Bosch No-Battery Generator) (Special)

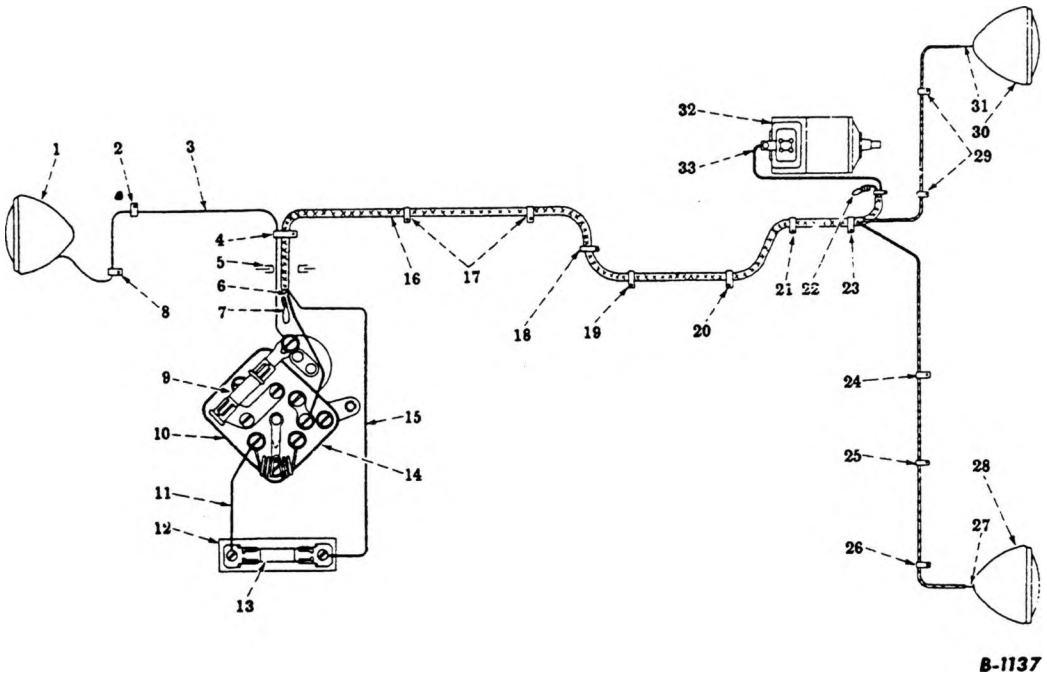

WIRING DIAGRAM—ELECTRIC LIGHTING (Bosch No-Battery Generator) (Special)
(Two Headlights and One Rear Light)

ELECTRICAL SYSTEM

INDEX TO REFERENCE NUMBERS IN ILLUSTRATION

REF. NO.	I.H. PART NO.	DESCRIPTION
1	45640 DB	REAR LIGHT.
2	60938 D	CLIP - ON TRANSMISSION CASE COVER CORNER BOLT, LEFT SIDE
3	30711 DX	CABLE - SWITCH TO REAR LIGHT.
4	27387 D	CLIP - ON CORNER TRANSMISSION CASE COVER BOLT. TURN THE CLIP TOWARD THE REAR OF TRACTOR AND BEND IN ASSEMBLY TO CLEAR THE TRANSMISSION CASE COVER. LEAD THE CABLES OVER THE TOP OF THE COVER, TO INSTRUMENT PANEL. (501 TO 96389)
4	63764 D	CLIP (SAME AS ABOVE) (96390 UP)
5	52062 D	GROMMET - IN INSTRUMENT PANEL COVER
†6	.....	CABLE - GENERATOR TO SWITCH (NATURAL WITH BLACK AND RED CROSS TRACERS)
†7	.....	CABLE - (NATURAL WITH BLACK TRACER) INSULATE THE TERMINAL AND FASTEN SECURELY WITH FRICTION TAPE
8	60938 D	CLIP - ON TRANSMISSION CASE COVER (CORNER BOLT, RIGHT SIDE)
9	10815 V	FUSE
10	1994019	LIGHTING SWITCH
11	59462 D	CABLE - SWITCH TO FUSE BLOCK (501 TO 128026)
11	61257 D	CABLE - SWITCH TO FUSE BLOCK (128027 UP)
12	7472 H	FUSE BLOCK
13	10315 V	FUSE
14	.....	A GOOD ELECTRICAL CONNECTION MUST BE MADE BETWEEN THE SWITCH AND THE SWITCH MOUNTING TO COMPLETE THE GENERATOR GROUNDING CIRCUIT.
†15	.....	CABLE - FUSE BLOCK TO HEADLIGHT (BLACK)
16	51998 D	CABLE HARNESS
17	61032 D	CLIP - ON CLUTCH HOUSING. USE HOLES FOR MOUNTING BATTERY BOX. USE 3/8 - 16 N.C. x 1/2" CAP SCREW AND LOCKWASHER. (501 TO 96389)
17	60938 D	CLIP (SAME AS ABOVE) (96390 UP)
18	61032 D	CLIP - ON FUEL TANK SUPPORT BRACKET BOLT REAR (501 TO 96389)
18	60938 D	CLIP - ON FUEL TANK SUPPORT BRACKET BOLT REAR (96390 UP)
19	61032 D	CLIP - ON RADIATOR SHUTTER CONTROL BRACKET BOLT ON REAR FUEL TANK SUPPORT. BEND THE CLIP SO CABLE HARNESS DOES NOT TOUCH THE RADIATOR SHUTTER CONTROL ROD. (501 TO 96389)
19	60938 D	CLIP (SAME AS ABOVE) (96390 UP)
20	61032 D	CLIP - ON FRONT FUEL TANK SUPPORT BRACKET BOLT (501 TO 96389)
20	60938 D	CLIP - ON FRONT FUEL TANK SUPPORT BRACKET BOLT (96390 UP)
21	61032 D	CLIP - ON LOWER AIR CLEANER SUPPORT BRACKET BOLT (501 TO 96389)
21	60938 D	CLIP - ON LOWER AIR CLEANER SUPPORT BRACKET BOLT (96390 UP)
†22	.....	CABLE - (NATURAL WITH BLACK TRACER) INSULATE THE TERMINAL AND FASTEN SECURELY WITH FRICTION TAPE
23	61032 D	CLIP - ON GENERATOR MOUNTING BRACKET, REAR BOLT (501 TO 96389)
23	60938 D	CLIP - ON GENERATOR MOUNTING BRACKET, REAR BOLT (96390 UP)
24	6830 H	CLIP - ON GENERATOR BRACE BOLT ON ENGINE (501 TO 96389)
24	61813 D	CLIP - ON GENERATOR BRACE BOLT ON ENGINE (96390 UP)
25	6830 H	CLIP - ON ENGINE CRANKCASE FRONT COVER BOLT (FIRST BOLT BELOW THE GOVERNOR HOUSING) (501 TO 96389)
25	61813 D	CLIP - ON ENGINE CRANKCASE FRONT COVER BOLT (FIRST BOLT BELOW THE GOVERNOR HOUSING) (96390 UP)
26	52116 D	FRONT LIGHT CABLE CLAMP
†27	.....	CABLE - FUSE BLOCK TO HEADLIGHT (BLACK)
28	45640 DB	HEADLIGHT
29	52116 D	FRONT LIGHT CABLE CLAMP
30	45640 DB	HEADLIGHT
†31	.....	CABLE - FUSE BLOCK TO HEADLIGHT (BLACK)
32	61875 D	GENERATOR (NO LONGER SUPPLIED FOR SERVICE)
†33	.....	CABLE - GENERATOR TO SWITCH (NATURAL WITH BLACK AND RED CROSS TRACERS) CUT OFF TERMINAL AND "SKIN" BACK THE WIRE.

† THESE PARTS NOT SUPPLIED SEPARATELY. ORDER 51998 D

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		ELECTRIC LIGHTING (Bosch No-Battery Generator) (Special)			
61513 D		Electric Lighting Attachment (1 Headlight, 1 Rear Light) (Order 61514 D)		1	
61514 D		Electric Lighting Attachment (2 Headlights, 1 Rear Light)		1	
		(Complete Attachment No Longer Supplied for Service)			
		(Fan and Generator Pulley Hub Attachment No. 28318 DX Must Be			
		Applied with These Attachments, Unless Tractor Is Already So Equipped).			
6813 D		Rear Light Bracket		1	
179817		Cap Screw, 5/16 x 7/8" N.C. Hex Head		3	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
13001 R1		Hex Nut, 5/16" N.C.		3	
218438		Hex Jam Nut, 3/8" N.C.		1	
103320		Lockwasher, 5/16"		3	
9189 D		Generator Bracket		1	
179841		Cap Screw, 3/8 x 1-1/4" N.C. Hex Head		2	
103321		Lockwasher, 3/8"		2	
9190 D		Generator Saddle		1	
186312		Cap Screw, 3/8 x 4" N.F. Hex Head		1	
103026		Hex Nut, 3/8" N.F.		1	
103321		Lockwasher, 3/8"		1	
9191 D		Generator Pulley		1	
26080 DA		Generator Strap		1	
181326		Cap Screw, 1/4 x 2-3/4" N.F. Hex Head		1	
179822		Cap Screw, 5/16 x 1-1/2" N.C. Hex Head		1	
103024		Hex Nut, 1/4" N.F.		1	
103320		Lockwasher, 5/16"		1	
103319		Lockwasher, 1/4"		1	
26086 D		Generator (Bosch No-Battery Type) (Optional with 61875 D)			
		(No Longer Supplied for Service)		1	
27387 D		Double 1/4" Loom Clip (1/2" Bolt)	501 to 96389	1	
27618 D		Switch to Rear Light Cable Loom Clamp Ring		2	
28309 D		Generator Dowel Pin		1	
29205 D		Switch to Rear Light Cable Loom		1	
30711 DX		Switch to Rear Light Cable, with Loom, 29205 D, Terminal, 38433 D			
		and Ring, 27618 D		1	
45569 D		Light Spacer		3	
45640 DB		Light (Swivel Type) (See Detail List for Service Parts)			
		(Guide Lamp No. 873-24)		3	
114774		Hex Nut, 1/2" N.C.		3	
103323		Lockwasher, 1/2"		3	
49279 D		Generator Brace Stud		1	
218438		Hex Nut, 3/8" N.C.		1	
103321		Lockwasher, 3/8"		1	

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		ELECTRIC LIGHTING (Bosch No-Battery Generator) (Special)—Continued			
49393 D		Rear Light Post		1	
49393 D		Right Front Light Post ("A" only)		1	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
218438		Hex Jam Nut, 3/8" N.C.		1	
49394 D		Left Front Light Post ("A", "B" and "BN" only)		1	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
218438		Hex Jam Nut, 3/8" N.C.		1	
49394 D		Right Front Light Post ("B" and "BN" only)		1	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
218438		Hex Jam Nut, 3/8" N.C.		1	
50930 DX		Instrument Panel Cover		1	
103025		Hex Nut, 5/16" N.F.		1	
103320		Lockwasher, 5/16"		1	
51063 DA		Instrument Panel Screw		2	
103092		Hex Nut, No. 8-32 N.C.		2	
106496		Lockwasher, No. 8		2	
51998 D		Cable Harness		1	
52062 D		Instrument Panel Grommet		1	
52116 D		Front Light Cable Clamp ("A", "B" and "BN")		4	
110501		Slotted Screw, No. 10-24 x 5/8" N.C. (Round Head)		4	
110634		Square Nut, No. 10-24 N.C.		4	
52318 DA		Generator Belt		1	
		Lighting Switch, Complete (Delco-Remy 1994019) (For Components, See List of Parts Under Detail of "Lighting Switch Unit")		1	
106496		Lockwasher, No. 8		1	
57869 D		Front Light Post (Used on "A" with High Clearance Attachment)		2	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		2	
218438		Hex Jam Nut, 3/8" N.C.		2	
59462 D		Switch to Fuse Block Cable less Loom	501 to 123026	1	
60393 DX		Front Light Bracket Post, L.H. ("AV" only)		1	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
218438		Hex Jam Nut, 3/8" N.C.		1	
60394 DX		Front Light Bracket Post, R.H. ("AV" only)		1	
102896		Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1	
218438		Hex Jam Nut, 3/8" N.C.		1	

ELECTRICAL SYSTEM

PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
	ELECTRIC LIGHTING (Bosch No-Battery Generator) (Special)—Continued		
60938 D	3/8" I.D. Cable Clip for 3/8" Bolt	96390 up	8
179971	Cap Screw, 1/4 x 1/2" N.C. Hex Head		1
179833	Cap Screw, 3/8 x 1/2" N.C. Hex Head		2
179837	Cap Screw, 3/8 x 3/4" N.C. Hex Head		1
13000 R1	Hex Nut, 1/4" N.C.		1
103319	Lockwasher, 1/4"		1
103321	Lockwasher, 3/8"		2
61032 D	3/8" I.D. Cable Clip for 3/8" Bolt	501 to 96389	8
179833	Cap Screw, 3/8 x 1/2" Hex Head		3
220066	Hex Nut, 3/8"		3
103321	Lockwasher, 3/8"		3
61257 D	Switch to Fuse Block Cable Less Loom	128027 up	1
61262 DX	Instrument Panel with Transfer		1
	Lighting Switch, Complete (see Detail Parts on page 54)		1
106496	Lockwasher No. 8, 3/64 x 3/64"		1
61469 DA	Generator Brace		1
179817	Cap Screw, 5/16 x 7/8" N.C. Hex. Head		1
220060	Hex Nut, 3/8" N.C.		1
103320	Lockwasher, 5/16"		1
103321	Lockwasher, 3/8"		1
103340	Washer, 11/32" I. D. x 11/16" O.D. x No. 16 Gauge		1
61813 D	1/4" Cable Clip for 3/8" Bolt	96390 up	2
61875 D	Generator (Bosch No-Battery Type) (will work for 26086 D)		
	No Longer Supplied for Service		1
63764 D	Double 1/4" Loom Clip (1/2" Bolt)	96390 up	1
6830 H	1/4" Cable Clip for 3/8" Bolt	501 to 96389	3
7472 H	1 Fuse Block		1
100751	Slotted Screw, No. 8-32 x 1/2" N.C. (Round Head)		1
103092	Hex Nut, No. 8-32 N.C.		1
106496	Lockwasher, No. 8		1
10815 V	Fuse		2
350551 R1	Manifold Heat Shield (Kerosene or Distillate)		1
353198 R91	Instrument Panel Assembly Complete		1
142309	Light Bulb (Mazda 32 C.P.-S.C. 6-8 Volt) (Will Work for		
	103643)		1
	Cable - Generator to Switch (not Supplied Separately,		
	order 51998 D)		1
	Cable - Fuse Block to Headlight (Not Supplied Separately,		
	order 51998 D)		1

LIGHTING AND STARTING EQUIPMENT

(Delco-Remy—Special)

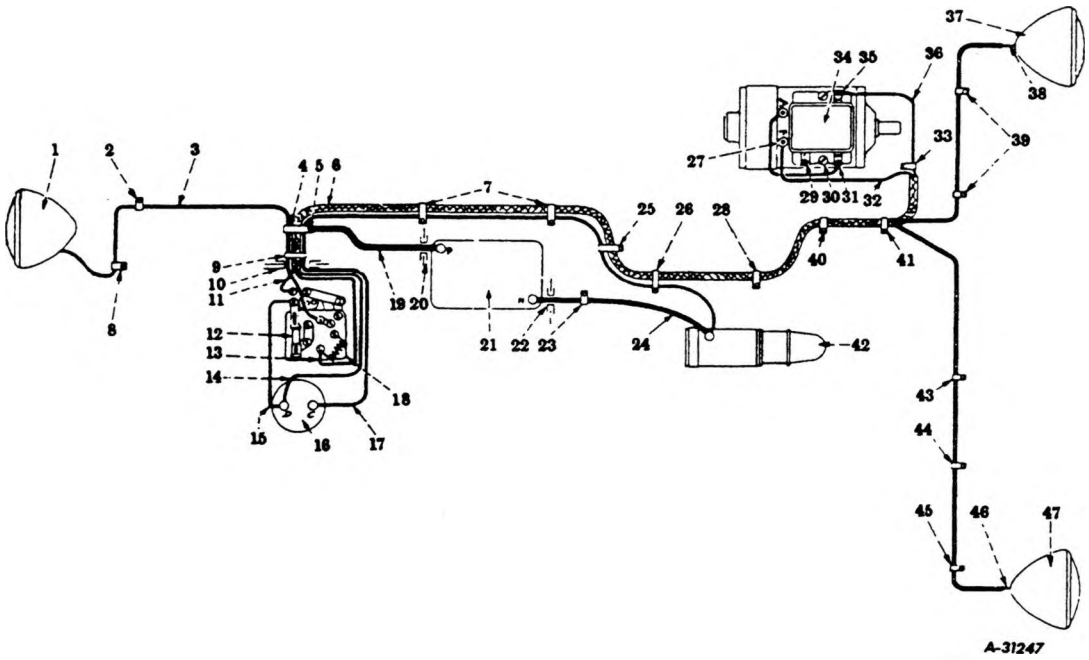

WIRING DIAGRAM—ELECTRIC LIGHTING AND STARTING (Delco-Remy) (Special)
(Two Headlights and One Rear Light)

INDEX TO REFERENCE NUMBERS IN ILLUSTRATION

REF. NO.	I H PART NO.	DESCRIPTION
1	45640 DB	REAR LIGHT (CONVENTIONAL).
1	357884 R91	REAR LIGHT (SEALED BEAM).
2	60938 D	CLIP - ON TRANSMISSION CASE COVER CORNER BOLT, LEFT SIDE.
3	30711 DX	CABLE - SWITCH TO REAR LIGHT.
4	63972 D	CLIP - ON CORNER TRANSMISSION CASE COVER BOLT.
5	.....	GROUND - ON TRANSMISSION CASE COVER BOLT.
6	51998 D	CABLE HARNESS.
7	63764 D	CLIP - ON BATTERY BOX MOUNTING BOLTS.
8	60938 D	CLIP - ON TRANSMISSION CASE COVER CORNER BOLT, RIGHT SIDE.
9	27383 D	CABLE CLAMP.
10	52062 D	GROMMET - IN INSTRUMENT PANEL COVER.
11	.....	CABLE - GENERATOR FIELD TO SWITCH (NATURAL WITH BLACK TRACER) (ORDER 51998 D).
12	106653	FUSE. (SAME AS 10815 VA)
†13		CABLE - SWITCH TO HEADLIGHT (BLACK) (ORDER 51998 D).
†14	.....	CABLE - GENERATOR TO AMMETER (NATURAL WITH BLACK AND RED CROSS TRACERS) (ORDER 51998 D).
15	61257 D	CABLE - AMMETER TO SWITCH.
16	42383 DC OR 354473 R91	AMMETER.
17	358562 R91	CABLE - AMMETER TO CRANKING MOTOR.
18	1994019	SWITCH.
19	57258 DA	CABLE - BATTERY TO GROUND.
20	52118 D	GROMMET - IN BATTERY BOX.
21	354210 R91, 354214 R91, 355079 R91, 355196 R92, 355782 R91	BATTERY.
22	52118 D	GROMMET - IN BATTERY BOX.
23	56278 D	CLIP - ON REAR FUEL TANK BRACKET BOLT, RIGHT SIDE, UNDER STARTING CONTROL ROD BRACKET.
24	57257 DA	CABLE - BATTERY TO CRANKING MOTOR.
25	63764 D	CLIP - ON FUEL TANK SUPPORT, REAR.
26	63764 D	CLIP - ON FUEL TANK SUPPORT BRACKET BOLT, REAR.
27	.....	"F" TERMINAL ON FRAME.
28	60936 D	CLIP - ON FUEL TANK SUPPORT BRACKET BOLT, FRONT.
29	.....	"F" TERMINAL ON RELAY.
30	.....	MOUNTING SCREW.
31	.....	"GEN" TERMINAL.
†32	.....	CABLE - GENERATOR FIELD TO SWITCH (NATURAL WITH BLACK TRACER) (ORDER 51998 D)
33	61813 D	CLIP - ON GENERATOR BRACE BOLT (GENERATOR END).
34	356937 R91	GENERATOR.
35	.....	"BAT" TERMINAL.
†36	.....	CABLE - GENERATOR TO AMMETER (NATURAL WITH BLACK AND RED CROSS TRACERS) (ORDER 51998 D)
37	45640 DB	HEADLIGHT (CONVENTIONAL).
37	357884 R91	HEADLIGHT (SEALED BEAM).
†38	.....	CABLE - SWITCH TO HEADLIGHT (BLACK) (ORDER 51998 D).
39	52116 D	CLIP - CLAMP CABLE TO REAR SIDE OF LIGHT POST.
40	60938 D	CLIP - ON AIR CLEANER SUPPORT BRACKET BOLT, LOWER.
41	60938 D	CLIP - ON GENERATOR MOUNTING BRACKET.
42	55784 D	CRANKING MOTOR.
43	6830 H	CLIP - ON GENERATOR BRACE BOLT.
44	61813 D	CLIP - ON CRANKCASE FRONT COVER BOLT (FIRST BELOW GOVERNOR HOUSING).
45	61813 D	CLIP - CLAMP CABLE TO REAR SIDE OF LIGHT POST.
†46	.....	CABLE - SWITCH TO HEADLIGHT (BLACK) (ORDER 51998 D).
47	45640 DB	HEADLIGHT (CONVENTIONAL).
47	357884 R91	HEADLIGHT (SEALED BEAM).

† THESE PARTS NOT SUPPLIED SEPARATELY. ORDER 51998 D.

ELECTRICAL SYSTEM

PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
	LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)		
55764 DB	Lighting and Starting Attachment (2 Headlights and 1 Rear Light)		1
	NOTE - Fan and Generator Pulley Hub Attachment No. 28313 DX and Flywheel Ring Gear Attachment No. 56618 DA must be applied, unless Tractor is already so equipped. Tractors equipped with "Starting Only" or "Lighting Only", can be converted to a combination Starting and Lighting Attachment by ordering the individual parts necessary to make a complete Starting and Lighting Attachment. Likewise the service parts for "Starting Only" or "Lighting Only" should be ordered from this list.		
6812 D	Generator Pulley		1
6813 D	Rear Light Bracket		1
179017	Cap Screw, 5/16 x 7/8" N.C. Hex Head		3
102896	Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1
13001 R1	Hex. Nut, 5/16" N.C.		3
218438	Hex. Jam Nut, 3/8" N.C.		1
103320	Lockwasher, 5/16"		3
8639 D	Carburetor Starting Shutter Lever		1
100661	Screw, No. 10-32 x 5/8" N.F. (Fillister Head)		1
106497	Lockwasher, No. 10		1
22063 D	Battery to Cranking Motor Cable Clip	501 to 109804	1
22063 D	Battery to Cranking Motor Cable Clip	Ⓐ	1
22063 D	Cable Harness Clip	501 to 109804	3
22063 D	Cable Harness Clip	Ⓣ	3
22063 D	17/32" Cable Clip (3/8" Bolt)	Ⓣ	7
27383 D	Cable Clamp		1
27385 D	1/4" Loom Clip (3/8" Bolt)		4
27387 D	Double 1/4" Loom Clip (1/2" Bolt) (5 used on Ⓣ and Ⓐ)		1 ⊙
27618 D	Generator to Ammeter Cable Loom Clamp Ring	Ⓐ	2
27618 D	Cable Loom Clamp Ring	Ⓣ	2
27618 D	Switch to Rear Light Cable Loom Clamp Ring		2
27618 D	Ammeter to Cranking Motor Cable Loom Clamp Ring		2
29205 D	Switch to Rear Light Cable Loom		1
30700 D	Generator to Ammeter Cable Loom	Ⓐ	1
30711 DX	Switch to Rear Light Cable with Loom		1

(Ⓣ) - For Tractors Equipped with Lighting Only
(Ⓐ) - For Tractors Equipped with Starting Only
⊙ - On Tractors 501 to 109304

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO REQ'D	
		LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)—Continued			
359323 R91		Battery to Ground Cable (Will work for 35407 D)	①	1	
38777 D		Battery Cable Terminal, with Bolt, 26453 HX (Negative)	①	1	
38778 D		Battery Cable Terminal, with Bolt, 26453 HX (Positive)	①	1	
39184 D		Triple 1/4" Loom Clip (3/8" Bolt)	①Ⓐ	1	
39184 D		Triple 1/4" Loom Clip (3/8" Bolt)	501 to 109804	1	
356562 R91		Ammeter to Cranking Motor Cable, Complete with Loom (Will work for 39275 DX)		1	
39276 D		Ammeter to Cranking Motor Cable Loom		1	
42383 DC		Ammeter (AC 1501142) (Optional with 354473 R91)		1	
120614		Hex Nut, No. 10-32 (Cadmium Plated)		4	
120217		Lockwasher, No. 10 (Cadmium Plated)		2	
45488 D		Starting Switch Lever		1	
45569 D		Light Spacer		3	
45634 D		Generator, Complete (Delco-Remy 1101355) (See NOTE) (Order 356936 R91)		1	
179818		Cap Screw, 5/16 x 1" N.C. Hex. Head		2	
220065		Hex. Nut, 5/16" N.C.		1	
103320		Lockwasher, 5/16"		2	
103374		Cotter Pin, 3/32 x 1"		1	
103047		Hex. Nut, 1/2" N.C. (Castellated)		1	
Q 1520		Steel Washer, 17/32" I.D. x 1" O.D.		1	
103905		Woodruff Key, No. 5, 1/8 x 5/8"		1	
45640 DB		Rear Light (For Components See Detail of Parts Under Details of "Headlight or Rear Light" Unit)		3	
114774		Hex Nut, 1/2" N.C.		3	
103323		Lockwasher, 1/2"		3	
46412 D		Generator Relay (Delco-Remy 1116766)		1	
132900		Slotted Screw, No. 10-32 x 3/8" Round Head (Cadmium Plated)		2	
138479		Lockwasher, No. 10 (External tooth) (Cadmium Plated)		2	
120391		Washer, 7/32" I.D. x 1/2" O.D. x No. 18 Gauge (Cadmium Plated)		2	
		Lighting Switch, Complete (Delco-Remy) (Order 1994019)	501 to 29560	1	
		NOTE - Refer to Delco-Remy Electrical Equipment Parts Catalog TC-45 When Ordering Detail Parts for Complete Cranking Motor.			

① - For Tractors Equipped with Lighting Only
Ⓐ - For Tractors Equipped with Starting Only

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)—Continued			
49287 DC		GENERATOR BRACKET		1	
179838		CAP SCREW, 3/8 x 7/8" N.C. HEX HEAD		2	
103321		LOCKWASHER, 3/8"		2	
49286 DA		GENERATOR BRACE		1	
179816		CAP SCREW, 5/16 x 3/4" N.C. HEX HEAD		1	
220066		HEX NUT, 3/8" N.C.		1	
103320		LOCKWASHER, 5/16"		1	
103321		LOCKWASHER, 3/8"		1	
103340		WASHER, 11/32" I.D. x 11/16" O.D. x No. 16 GAUGE		1	
49291 D		GENERATOR BELT		1	
49393 D		RIGHT FRONT LIGHT POST (USED ON FARMALL-A TRACTOR ONLY)		1	
102896		SET SCREW, 3/8 x 1" N.C. SQUARE HEAD (CUP POINT)		1	
218438		HEX JAM NUT, 3/8" N.C.		1	
49393 D		REAR LIGHT POST		1	
102896		SET SCREW, 3/8 x 1" N.C. SQUARE HEAD (CUP POINT)		1	
218438		HEX JAM NUT, 3/8" N.C.		1	
49394 D		LEFT FRONT LIGHT POST ("A", "B" AND "BN" ONLY)		1	
102896		SET SCREW, 3/8 x 1" N.C. SQUARE HEAD (CUP POINT)		1	
218438		HEX JAM NUT, 3/8" N.C.		1	
49394 D		RIGHT FRONT LIGHT POST ("B" AND "BN" ONLY)		1	
102896		SET SCREW, 3/8 x 1" N.C. SQUARE HEAD (CUP POINT)		1	
218438		HEX JAM NUT, 3/8" N.C.		1	
50929 DX		INSTRUMENT PANEL WITH TRANSFER (ORDER 50929 DCY OR 61478 DA)	501 TO 29560	1	
50929 DCX		INSTRUMENT PANEL WITH TRANSFER	29561 UP	1	
50929 DCY		INSTRUMENT PANEL, 50929 DCX WITH SWITCH, 57310 DX (WILL WORK FOR 50929 DX)	501 TO 29560	1	
50930 DX		INSTRUMENT PANEL COVER, WITH BOLT		1	
103025		HEX NUT, 5/16" N.F.		1	
103320		LOCKWASHER, 5/16"		1	
50937 DX		BATTERY BOX COVER WITH CLIPS AND RETAINERS		1	
50939 DX		BATTERY BOX COVER HOLD-DOWN SCREW		2	
103127		WING NUT, 1/4" N.C.		2	
Q 391		WASHER, 9/32" I.D. x 5/8" O.D. x No. 18 GAUGE		2	
50943 D		BATTERY BOX		1	
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		4	
103321		LOCKWASHER, 3/8"		4	
50943 DX		BATTERY BOX WITH COVER, COMPLETE		1	

⊕ - FOR TRACTORS EQUIPPED WITH LIGHTING ONLY

△ - FOR TRACTORS EQUIPPED WITH STARTING ONLY

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)—Continued			
51063 DA		Instrument Panel Screw		2	
103092		Hex Nut, No. 8 x 32" N.C.		2	
106496		Lockwasher, No. 8		2	
51689 D		Battery Box Hold-down Rubber (Order 65054 DA)	107970 to	2	
51690 D		Battery Hold Down Rubber		4	
51770 D		Battery Strap Spacer (Order 65054 DA)	501 to 107969	1	
140707		Self Tapping Screw, No. 7 x 3/8" Flat Head		1	
51998 D		Cable Harness		1	
51999 DX		Battery to Ammeter Cable with Loom	①	1	
52030 DX		Ammeter to Switch Cable with Loom (Order 61257 D)	501 to 35575	1	
52062 D		Instrument Panel Grommet		1	
52063 D		Battery Box Body Grommet (Optional with 68431 D)	①	2	
52116 D		Front Light Post Loom Clip	①	4	
110501		Slotted Screw, No. 10-24 x 5/8" N.C. (Round Head)	①	4	
110634		Square Nut, No. 10-24 N.C.	①	4	
52116 D		Cable Clamp		1	
110501		Slotted Screw, No. 10-24 x 5/8" N.C. (Round Head)		1	
		Square Nut, No. 10-24 N.C.		1	
52116 D		Cable Clamp		3	
110501		Slotted Screw, No. 10-24 x 5/8" N.C. (Round Head)		3	
110634		Square Nut, No. 10-24 N.C.		3	
52116 D		Front Light Post Loom Clamp ("B" and "BN" only)		1	
110501		Slotted Screw, No. 10-24 x 5/8" N.C.		1	
110634		Square Nut, No. 10-24 N.C.		1	
52118 D		Battery Box Grommet		2	
55757 D		Cranking Motor Push Rod			
		(Order 55757 DA with Bracket, 55758 DA)	501 to 42756	1	
55757 DA		Cranking Motor Push Rod	42757 up	1	
103373		Cotter Pin, 3/32 x 3/4"		1	
103340		Washer, 11/32" I.D. x 11/16" O.D. x No. 16 Gauge		1	
55758 D		Cranking Motor Push Rod Bracket			
		(Order 55758 DA with Push Rod, 55757 DA)	501 to 42756	1	
55758 DA		Cranking Motor Push Rod Bracket	42757 up	1	
181364		Cap Screw, 3/8 x 1" N.F. Hex. Head		1	
55759 D		Choke Rod		1	
137130		Cotter Pin, 1/16 x 7/16"		1	
55760 D		Choke Rod Bracket		1	
181364		Cap Screw, 3/8 x 1" N.F. Hex Head		1	

① - For Tractors Equipped with Lighting Only

ELECTRICAL SYSTEM

PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
	LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)—Continued		
55781 D	Battery Strap Spacer, Complete (Order 65054 D)		1
55784 D	Cranking Motor (Delco-Remy 1107021) (See NOTE)		1
179003	Cap Screw, 1/2 x 1-1/4" N.C. Hex Head		2
103323	Lockwasher, 1/2"		2
56278 D	Battery to Cranking Motor Cable Clip	109805 up	1
57257 DA	Battery to Cranking Motor Cable, with Terminals and Bolt		1
57258 DA	Battery to Ground Cable, with Terminals and Bolt		1
57261 DX	Generator to Ammeter Cable with Loom	Ⓐ	1
	Lighting Switch, Complete (Delco-Remy 1994019)		
	(For Components, See List of Parts Under "Detail of		
	Lighting Switch" Unit)	29561 up	1
121841	Lockwasher, No. 6		1
57889 D	Front Light Post ("A" only with High Clearance)		1
102896	Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		2
218438	Hex Jam Nut, 3/8" N.C.		2
59462 D	Ammeter to Switch Cable (Order 61257 D)		1
60321 D	Field Change Package for Tractors with Exhaust		
	Lift Attachment	501 to 42756 Ⓐ	1
60393 DX	Front Light Bracket Post, L.H. ("AV" only)		1
102896	Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1
218438	Hex Jam Nut, 3/8" N.C.		1
60394 DX	Front Light Bracket Post, R.H. ("AV" only)		1
102896	Set Screw, 3/8 x 1" N.C. Square Head (Cup Point)		1
218438	Hex Jam Nut, 3/8" N.C.		1
60938 D	Cable Harness Clip	109805 up	3
60938 D	1/4" Loom Clip (3/8" Bolt)	109805 up	4
		Ⓣ and Ⓐ	3
61257 D	Ammeter to Switch Cable		
	(Will work for 52030 DX and 59462 D)	35576 up	1
61478 DA	Instrument Panel (Will work for 50929 DX)	Ⓐ	1
61813 D	1/4" Cable Clip (3/8" Bolt)	109805 up	3
63764 D	Double 1/4" Loom Clip (1/2" Bolt)	109805 up	4
63972 D	Triple 1/4" Loom Clip (3/8" Bolt)	109805 up	1
65054 DA	Battery Hold Down Rubber, Long (Will work for 51689 D, 51770 D, 53276 D		
	and 53276 D		4
68431 D	Battery Box Body Grommet (Optional with 52063 D)	Ⓣ	2
	NOTE - Refer to Delco-Remy Electrical Equipment Parts Catalog TC-45 when		
	Ordering Detail Parts For Complete Cranking Motor.		

Ⓣ - For Tractors Equipped with Lighting Only
Ⓐ - For Tractors Equipped with Starting Only

ELECTRICAL SYSTEM

PART NUMBER		DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		LIGHTING AND STARTING ATTACHMENT (Delco-Remy) (Special)—Continued		
6830 H		1/4" Cable Clip (3/8" Bolt)	(†)	3
6830 H		1/4" Cable Clip (3/8" Bolt)	501 to 104504	3
26453 HX		Battery to Cranking Motor Cable Bolt with Nut		
		(Used with Cable, 57257 D and 57258 D)		1
26453 HX		Battery to Ground Cable Bolt with Nut		
		(Used with Cable, 57257 D and 57258 D)		1
26453 HX		Battery Cable Terminal Bolt with Nut		
		(Used with Cable, 57257 D and 57258 D)	(†)	1
34745 H		Battery to Ground Cable Lug to Terminal		
		(Will work for 26378 H)	501 to	1
250466 R92		Ammeter Clamp (AC-85-7408) (Used with Ammeter, 42 383 DB)		1
351145 R91		Ammeter (Rochester) (Order 354473 R91)		1
352154 R91		Ammeter Clamp (Rochester 4000-B) (Used with Ammeter, 354473 R91)		1
352265 R1		Ammeter Clamp Mounting Washer (Rochester 4000-28-C)		2
353197 R91		Instrument Panel Assembly, Complete		1
355079 R91		Battery (Delco-Remy M15-WL) (See NOTE)		1
354210 R91		Battery (Globe Union 61-P) (See NOTE)		1
354214 R91		Battery (Edison A485-3) (See NOTE)		1
355196 R91		Battery (Auto-Lite IMS-85 R) (See NOTE)		1
355762 R91		Battery (Willard) (See NOTE)		1
354473 R91		Ammeter (Rochester 4010-C6) (Optional with 42383 DB)		1
120614		Hex Nut, No. 10-32 (Cadmium Plated)		4
120217		Lockwasher, No. 10 (Cadmium Plated)		2
356062 R91		Terminal Bolt with Nut (Used with Cable, 57257 DA		
		and 57258 DA)		1
356936 R91		Generator, Complete (Will work for 45634 D)		1
356937 R91		Generator (Delco-Remy 1101423)		1
356938 R91		Cable, Generator "A" Terminal to Ground (Used with		
		Generator, 356937 R91) (Delco-Remy 1872924)		1
356939 R91		Cable, Generator "F" Terminal to Relay "F" Terminal		
		(Used with Generator, 356937 R91) (Delco-Remy 1877569)		1
357844 R91		Rear Light (Sealed Beam) (For Components See List Under		
		Details of "Headlight or Rear Light" Unit)		3
114774		Hex Nut, 1/2" N.C.		3
103323		Lockwasher, 1/2"		3
1408 YC		Battery (6 Volt) (Prest-O-Lite 613-BE) (Order 60909 DB)		1
106653		Fuse (Same as 10815 VA)		1
142309		Light Bulb (Mazda 32 Candle Power - S.C. 6-8 volt)		
		(Will work for 103643)		1
		Cable - Generator Field to Switch (Order 51998 D)		1
		Cable - Generator to Ammeter (Order 51998 D)		1
		Cable - Ammeter to Cranking Motor (Order 51998 D)		1
		Cable - Switch to Headlight (Order 51998 D)		1

(†) - For Tractors Equipped with Lighting Only

NOTE - Batteries are Optional

MEMORANDA

CHASSIS

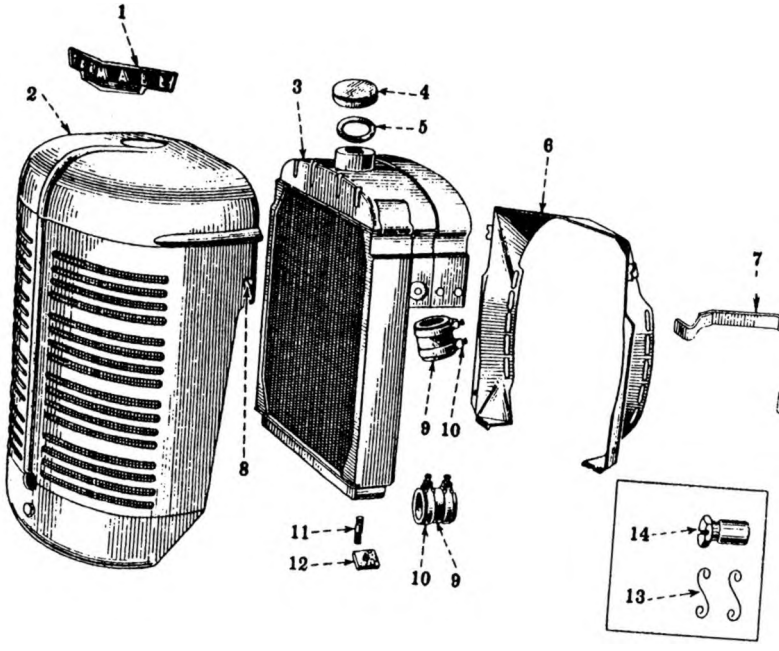

RADIATOR, GRILLE AND HOOD

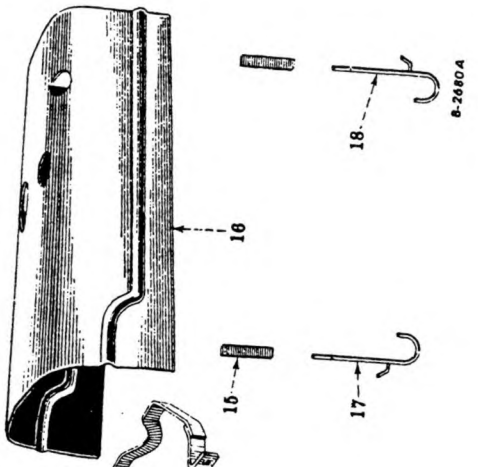
16
15
17
18
8-2660A

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		RADIATOR, GRILLE AND HOOD		
43658 D	1	NAME PLATE (FARMALL)	501 TO	1
350516 R1		SCREW, No. 7 x 3/8" FLAT HEAD		2
352580 R1	1	NAME PLATE (IH)	UP	1
352581 R1		SLOTTED SCREW, No. 6 x 1/2" COUNTERSUNK FLAT HEAD		1
51110 DX	2	RADIATOR GRILLE, COMPLETE ("A" ONLY)	501 TO 41329	1
52963 DX	2	RADIATOR GRILLE, COMPLETE ("B" AND "BN")	501 TO 40192	1
58139 DAX	2	RADIATOR GRILLE, COMPLETE (NOT "B" OR "BN")	41330 UP	1
58140 DAX	2	RADIATOR GRILLE, COMPLETE ("B" AND "BN")	40193 UP	1
51149 DBX	3	RADIATOR, COMPLETE	SEE NOTE (A)	1
58124 DBX	3	RADIATOR, COMPLETE - LESS CAP	SEE NOTE (B)	1
120702		STREET ELBOW, 3/8" x 45° (B AND BN ONLY)		1
43983 D	4	RADIATOR CAP, WITH GASKET, 43984 D		1
43934 D	5	RADIATOR CAP GASKET		1
50237 DAX	6	FAN HOUSING	SEE NOTE (A)	1
16242 R1		CAP SCREW, 1/4 x 3-1/2" N.F. HEX HEAD		4
103024		HEX NUT, 1/4" N.F.		4
103319		LOCKWASHER, 1/4"		4
58130 D	6	FAN HOUSING	SEE NOTE (B)	1
186304		CAP SCREW, 5/16 x 3-1/2" N.F. HEX HEAD		2
217220		CAP SCREW, 5/16 x 3-3/4" N.F. HEX HEAD		2
103025		HEX NUT, 5/16" N.F.		4
103320		LOCKWASHER, 5/16"		4
51003 D	7	RADIATOR BRACE	SEE NOTE (A)	1
181331		CAP SCREW, 5/16 x 1/2" N.F. HEX HEAD		2
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
103320		LOCKWASHER, 5/16"		2
103321		LOCKWASHER, 3/8"		1
103340		WASHER, 11/32" I.D. x 3/4" O.D. x No. 16 GA.		2
359170 R11	7	RADIATOR BRACE (WILL WORK FOR 58129 D)	SEE NOTE (B)	1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
103321		LOCKWASHER, 3/8"		1
58141 D	8	RADIATOR GRILLE FASTENER SCREW	SEE NOTE (B)	3
20075 D	9	RADIATOR HOSE, 2" I.D. x 2-1/4" LONG, 3 PLY		2
357870 R91	10	RADIATOR HOSE CLAMP (WILL WORK FOR 29970 D AND 91406 HA)		4
		NOTE (A) - "B" AND "BN" - 501 TO 40192		
		"A", "AV" - 41330 UP		
		NOTE (B) - "B" AND "BN" - 40193 UP		
		"A", "AV" - 41330 UP		

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		RADIATOR, GRILLE AND HOOD—Continued		
47232 DA	11	Radiator Mounting Stud		2
120370		Hex. Nut, 7/16" N.F. (Cadmium Plated)		2
103322		Lockwasher, 7/16"		2
47240 D	12	Radiator Pad		2
50958 D	13	Hood Fastener Spring	See Note Ⓐ	4
		Rivet, 1/8 x 7/32 x 9/32" Head (Tubular)		8
50958 D	13	Radiator Grille Fastener Spring	See Note Ⓐ	3
104051		Rivet, 1/8 x 1/4" (Round Head)		6
50957 D	14	Hood Fastener	See Noe Ⓐ	4
50957 D	14	Radiator Grille Fastener	See Note Ⓐ	3
48707 D	15	Hood Clamp Hook Spring	See Note Ⓑ	4
51144 DX	16	Hood with Fasteners, 50957 D (Gasoline)	See Note Ⓐ	1
58144 DX	16	Hood with Clamp Brackets (Gasoline)	See Note Ⓑ	1
58145 DX	16	Hood with Bracket (Kerosene or Distillate)	See Note Ⓒ	1
51148 DX	16	Hood with Bracket (Kerosene or Distillate)	See Note Ⓐ	1
58147 D	17	Hood Clamp Handle with Hook, R.H.		
		(Used at Right Rear and Left Front of Hood)	See Note Ⓑ	2
Q 391		Washer, 9/32"I.D. x 5/8" O.D. x No. 18 Ga.		2
103372		Cotter Pin, 3/32 x 1/2"		2
60754 D	17	Hood Clamp, R.H., Rear with Bracket (Kerosene or Distillate)	See Note Ⓒ	1
58146 D	18	Hood Clamp Handle with Hook, L.H.		
		(Used at Left Rear and Right Front of Hood)	See Note Ⓑ	2
Q 391		Washer, 9/32"I.D. x 5/8" O.D. x No. 18 Ga.		2
103372		Cotter Pin, 3/32 x 1/2"		2

Note Ⓐ - "B" and "BN" - 501 to 40192
"A", "AV" - 501 to 41329
Note Ⓑ - "B" and "BN" - 40193 Up
"A","AV" - 41330 Up
Note Ⓒ - "B" and "BN" - 40408 Up
"A", "AV" - 41405 Up

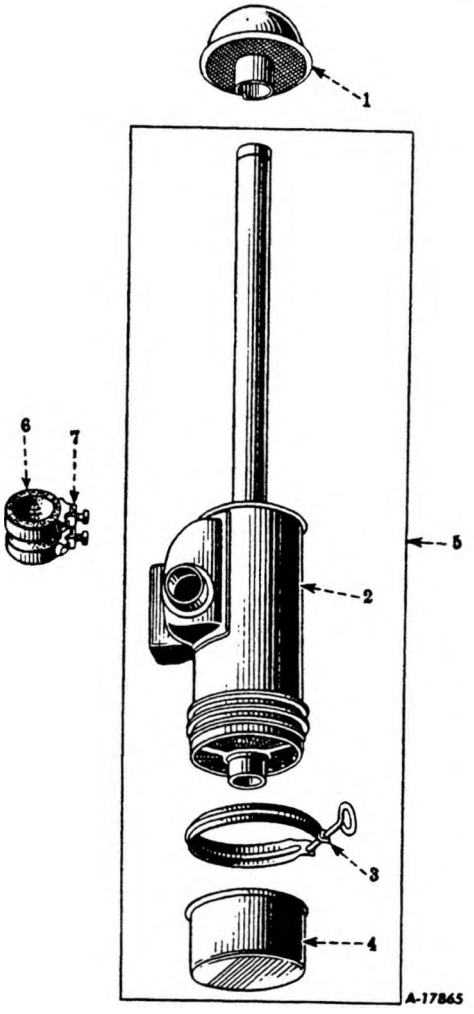

AIR CLEANER (Donaldson Manufacturing Company)

350750 R91	1	Air Intake Cap (Will Work for 51493 D)	1	
355934 R91	2	Body (Will Work for 52870 DB)	1	
52872 D	3	Oil Cup Retaining Clamp	1	
52871 D	4	Oil Cup	1	
355931 R91	5	Air Cleaner, Complete 4", "A" Type (Will Work for 51363 DBX)	1	
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head	2	
103321		Lockwasher, 3/8"	2	
Q 1597		Washer, 13/32" I.D. x 3/4" O.D. x No. 16 Ga.	2	
48861 DB	6	Air Cleaner Connection Hose, 1-1/2" I.D. x 1-9/16" Long, 8 Ply	1	
56356 D	7	Air Cleaner Hose Clamp (Will Work for 46352 D and 51064 D)	2	

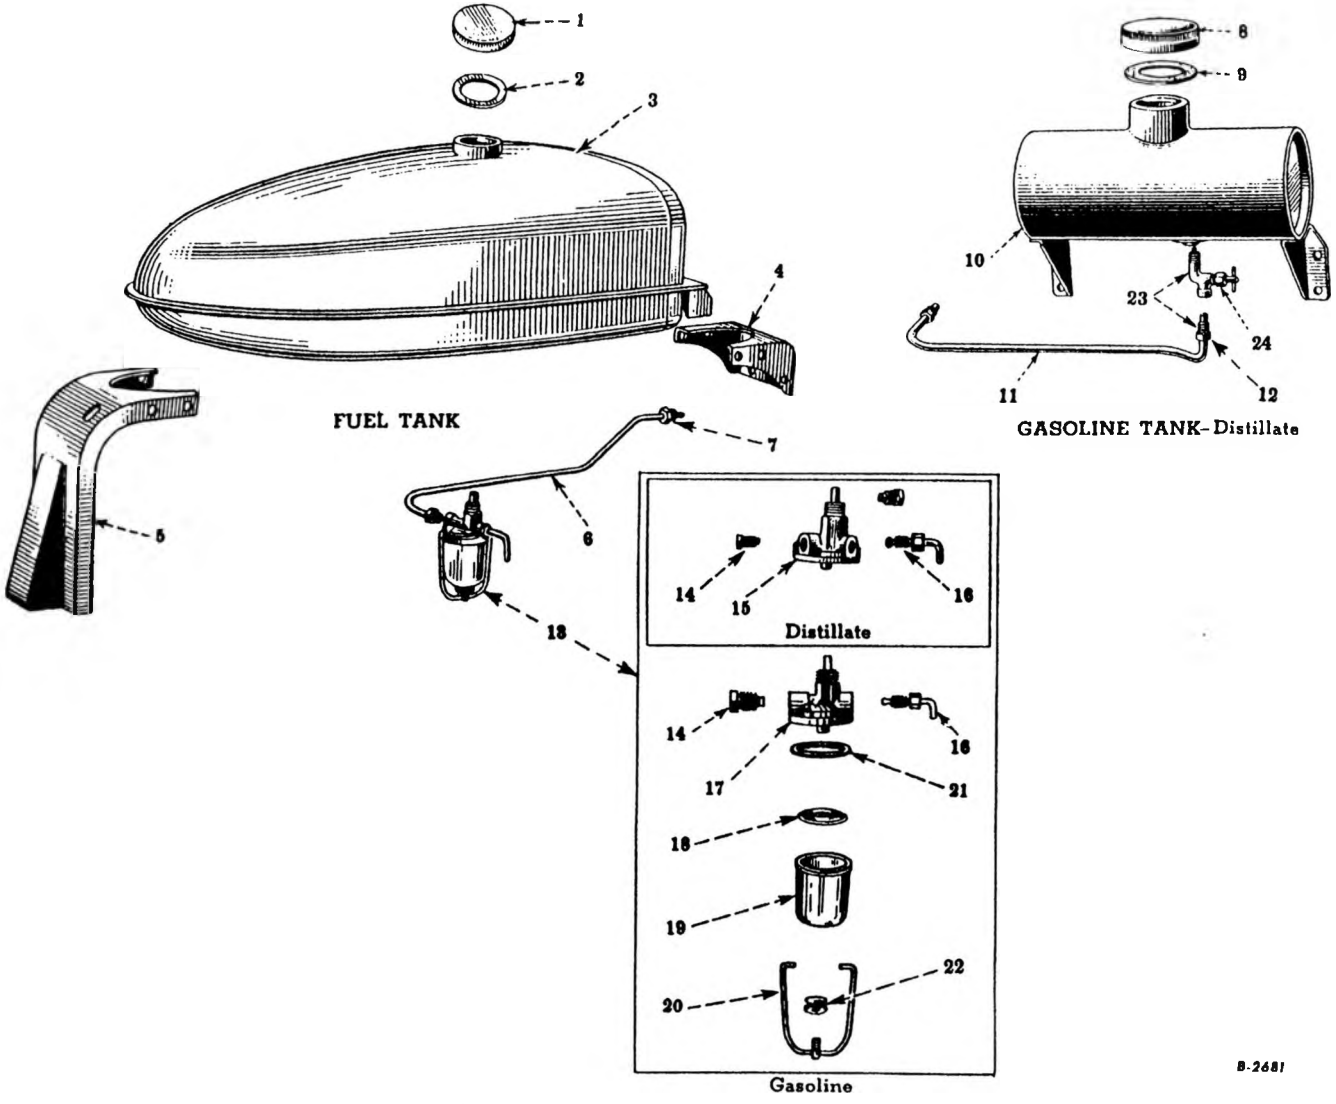

FUEL TANK, GASOLINE TANK, FUEL STRAINER, AND CONNECTIONS

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FUEL TANK AND CONNECTIONS		
23995 DA	1	Fuel Tank Filler Cap with Gasket 23977 DA		1
23977 DA	2	Fuel Tank Filler Cap Gasket		1
49606 DBX	3	Fuel Tank with Filler Cap, 23995 DA	See Note Ⓐ	1
181360		Cap Screw, 3/8 x 3/4" N.F. Hex Head		8
103026		Hex Nut, 3/8" N.F.		8
103321		Lockwasher, 3/8"		8
58132 DAX	3	Fuel Tank with Filler Cap, 23995 DA	See Note Ⓑ	1
181360		Cap Screw, 3/8 x 3/4" N.F. Hex Head		8
103026		Hex Nut, 3/8" N.F.		8
103321		Lockwasher, 3/8"		8
350621 R1	4	Fuel Tank Support Bracket, Front (Will Work for 49602 DAR and 350102 R1)		1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
49601 D	5	Fuel Tank Support Bracket, Rear		1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
51498 DX	6	Fuel Pipe with Two Coupling Nuts, 29899 D (Gasoline)	See Note Ⓐ	1
52892 DX	6	Fuel Pipe with Two Coupling Nuts, 29899 D (Kerosene or Distillate)	See Note Ⓐ	1
58137 DX	6	Fuel Pipe with Two Coupling Nuts, 29899 D (Gasoline)	See Note Ⓑ	1
58138 DX	6	Fuel Pipe with Two Coupling Nuts, 29899 D (Kerosene or Distillate)	See Note Ⓑ	1
29899 D	7	Fuel Pipe Coupling Nut		2
24523 D		Fuel Tank Support Spacer ("A" and "B") (Will Work for 41335 D and 62493 D)		2
41335 D		Fuel Tank Support Spacer (Order 24523 D)		2
41235 D		Fuel Pipe Clip		1
62493 D		Fuel Tank Support Spacer ("A" and "B") (Order 24523 D)	501 to 22375	2
		GASOLINE TANK AND CONNECTIONS		
23995 DA	8	Gasoline Tank Filler Cap with Gasket, 23977 DA		1
23977 DA	9	Gasoline Tank Filler Cap Gasket		1
49230 DX	10	Gasoline Tank with Cap, 23995 DA		1
51497 DAX	11	Gasoline Pipe with Two Coupling Nuts, 29899 D (Kerosene or Distillate) (Will Work for 51497 DX)		1
29899 D	12	Gasoline Pipe Coupling Nut (Kerosene or Distillate)		2

Note Ⓐ - "B" and "BN" - 501 to 40192
"A", "AV" - 501 to 41329

Note Ⓑ - "B" and "BN" - 40193 Up
"A", "AV" - 41330 Up

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			FUEL STRAINER (Imperial Brass Mfg. Company)		
51066 DC	13	43121	Gasoline Strainer (Gasoline) (Order 355142 R92)		1
355142 R92	13	45251	Gasoline Strainer with Coupling Nut, 29899 D		
			(Will work for 51066 DC and 51066 DCX)		1
51495 DD	13	45245	Fuel Strainer (Kerosene or Distillate)		1
29899 D	14	81-L	Coupling Nut (Gasoline)		1
29899 D	14	81-L	Coupling Nut (Kerosene or Distillate)		2
52356 D	15	43117-1	Strainer Body with Tube (Kerosene or Distillate) (For 51495 DB)		1
354143 R91	15	44910-2	Strainer Body (Kerosene or Distillate) (For 51495 DC)		1
52355 D	16	43073-3	Stem, Assembly (For 51066 DB or 51495 DB)		1
259403 R91	16	44801-7	Stem, Assembly (For 51066 DC or 51495 DC or 51495 DD)		1
54436 D	17	43121-2	Strainer Body with Tube (Gasoline) (For 51066 DB)		1
259402 R91	17	44788-2	Strainer Body (Gasoline) (For 51066 DC)		1
355141 R91	17	45012-2	Strainer Body (Gasoline) (For 355142 R92)		1
13194 D	18	25854	Strainer Screen (For 51066 DC or 51495 DC or 51495 DD)		1
49923 D	18	32278	Strainer Screen (For 355142 R92)		1
357957 R1	19	25858-D	Strainer Bowl (Glass) (For 51066 DC or 51495 DC or 51495 DD)		1
357958 R1	19	32276	Strainer Bowl (Glass) (For 355142 R92)		1
17564 D	20	26984-C	Bail, Assembly (For 51066 DC or 51495 DC or 51495 DD)		1
49947 D	20	32279	Bail, Assembly (For 355142 R92)		1
355888 R1	21	44801-3	Strainer Gasket (Will work for 13193 D)		
			(For 51066 DC or 51495 DCX)		1
49924 D	21	32275	Strainer Gasket (For 355142 R92)		1
17565 DA	22	27208-F	Nut and Cap, Assembly (For 51066 DC or 51495 DC or 51495 DD)		1
50061 D	22	32277	Nut and Cup, Assembly (For 355142 R92)		1
			SHUT-OFF VALVES (Imperial Brass Mfg. Co.)		
51495 DAX	23	43106	Gasoline Tank Shut-off Valve with Nut, 29899 D		
			(Kerosene or Distillate)		1
51496 DA	24		Gasoline Tank Shut-off Valve (Kerosene or Distillate)		1
29899 D		27105	Pipe Coupling Nut		2
59367 D		3469	Handle		1
59370 D		27339	Packing		2
59371 D		26368	Packing Nut		1
59372 D		3470	Packing Washer		1
59376 D		41591-2	Valve Stem		1
59376 DX		41591-4	Valve Stem and Handle		1
69113 D		43106-1	Valve Body (Used with Valve, 51496 DAX)		1

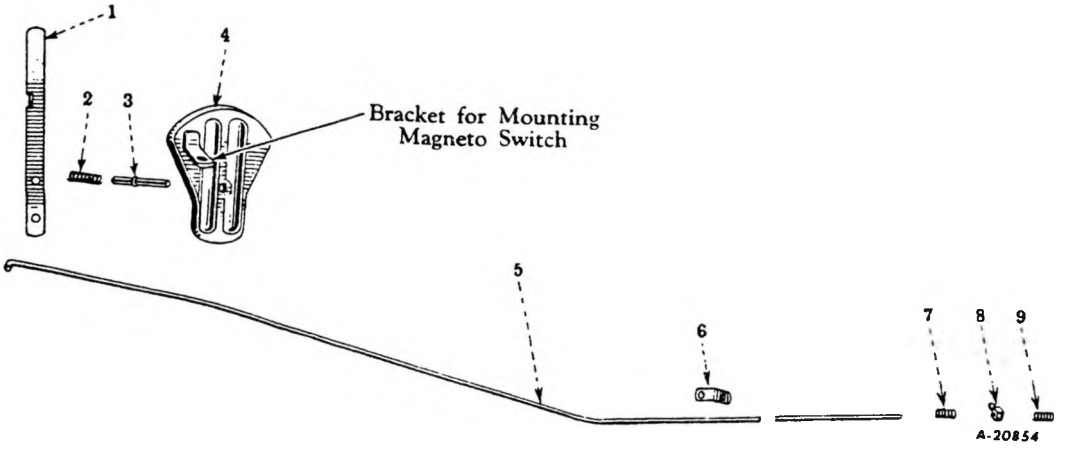

GOVERNOR CONTROLS

48260 DA	1	Governor Control Lever		1
43650 D	2	Governor Control Lever Spring		1
43651 DB	3	Governor Control Pivot Pin		1
103025		Hex Nut, 5/16" N.F.		1
103320		Lockwasher, 5/16"		1
107763		Cotter Pin, 1/8 x 5/8"		1
Q 397		Washer, 11/32"I.D. x 3/4" O.D. x No. 16 Ga.		1
48259 DX	4	Governor Control Sector with Ignition Switch Bracket		1
		(Will Work for 48259 D)		1
50389 D	5	Governor Control Rod ("A" and "B" only)	501 to 2689	1
103372		Cotter Pin, 3/32 x 1/2"		1
107761		Cotter Pin, 1/16 x 5/8"		2
Q 103		Washer, 17/64"I.D. x 5/8" O.D. x No. 18 Ga.		2
53972 D	5	Governor Control Rod	2690 Up	1
103372		Cotter Pin, 3/32 x 1/2"		1
107761		Cotter Pin, 1/16 x 5/8"		2
Q 103		Washer, 17/64"I.D. x 5/8" O.D. x No. 18 Ga.		2
49605 DA	6	Governor Control Rod Guide		1
181333		Cap Screw, 5/16 x 5/8" N.F. Hex Head		1
103025		Hex Nut, 5/16" N.F.		1
103320		Lockwasher, 5/16"		1
53393 D	7	Governor Control Rod Equalizer Spring, Rear	2690 Up	1
51299 DA	8	Governor Control Rod Swivel		1
107761		Cotter Pin, 1/16 x 5/8"		1
Q 103		Washer, 17/64"I.D. x 5/8" O.D. x No. 18 Ga.		1
51300 D	9	Governor Control Rod Equalizer Spring ("A" and "B" only)		1

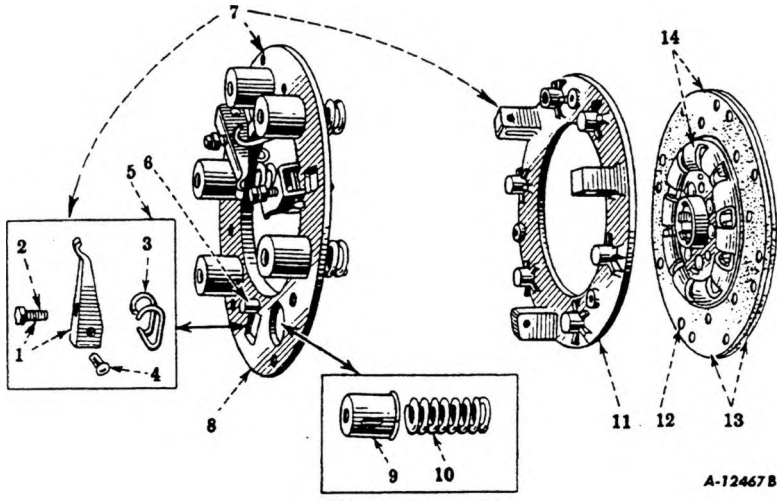

CLUTCH (56 620 DA)

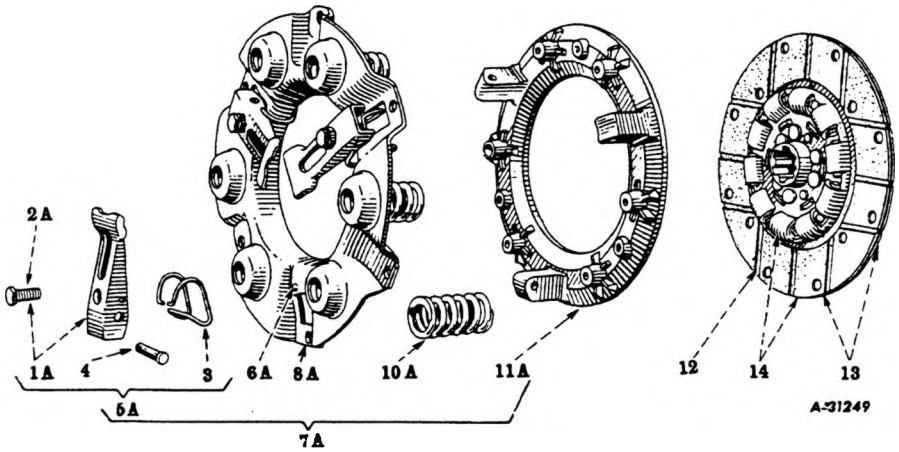

CLUTCH (56 620 DC)

CLUTCH (Rockford)

CHASSIS

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			CLUTCH (Rockford)		
56620 DC		CLA-1805-12	Clutch (9") 353242 R91 with driven member, 56631 DB		
			(Optional with Atwood Clutch 62600 DAX)	501 to 87001, 87997 up ⊙	1
179816			Cap Screw, 5/16 x 3/4" N.C. Hex Head		6
103320			Lockwasher, 5/16"		6
51457 D	1	UCL-4372	Lever with adjusting screw, 51459 D		
			(Used on clutch 56620 DA)		3
353243 R91	1A	UCL-1-4372	Lever with adjusting screw, 352745 R1		
			(Used on clutch 56620 DC)		3
51459 D	2	CL-4356	Adjusting Screw (Used on clutch 56620 DA)		3
114 494		CL-1608	Hex Jam Nut, 3/8" N.F. (Same as 27166 H)		3
352745 R1	2A	CL-7671	Adjusting Screw (Used on Clutch 56620 DC)		3
114 494		CL-1608	Hex Jam Nut, 3/8" N.F. (Same as 27166 H)		3
51461 D	3	CL-4197	Lever Spring		3
51460 D	4	CL-4196	Lever Pin		3
103372			Spring Cotter, 3/32 x 1/2"		3
353077 R91	5	UCL-4372-C3	Clutch Lever, Complete (Used on Clutch 56620 DA)		1
353246 R91	5A	UCL-1-4372-C3	Clutch Lever, Complete (Used on Clutch 56620 DC)		1
51455 D	6	CL-4287	Adjusting Screw Seat (Used on Clutch 56620 DA)		3
7911 T	6A	CL-7670	Adjusting Screw Seat (Used on Clutch 56620 DC)		3
51452 D	7	UCLA-4534	Clutch, Complete - Less Driven Member Complete		
			(Order 353242 R91)		1
353242 R91	7A	UCLA-1-7669	Clutch, Complete - Less Driven Member Complete		
			(Will Work for 51452 D)		1
51453 D	8	UCL-4534	Back Plate with Screw seat, 51455 D		
			(Used on Clutch 56620 DA)		1
352744 R91	8A	UCL-7669	Back Plate with Screw Seat, 7911 T		
			(Used on Clutch 56620 DC)		1
20090 VB	9	CL-1271	Spring Cup (Used on Clutch 56620 DA)		6
51462 D	10	CL-505-3A	Clutch Spring (Will Work for 20093 VC)		
			(Used on Clutch 56620 DA)		6
353078 R91	10	UCL-505-3A-S6	Clutch Spring Package (Consists of 6 Springs, 51462 D)		
			(Used on Clutch 56620 DA)		1
353244 R1	10A	CL-2317-15	Clutch Spring (Used on Clutch 56620 DC)		6
353245 R91	10A	UCL-2317-15-S6	Clutch Spring Package (Consists of 6 Springs, 353244 R1)		
			(Used on Clutch 56620 DC)		1
51456 D	11	CL-4535	Pressure Plate (Used on Clutch 56620 DA)		1
351448 R1	11A	CL-4535-1	Pressure Plate (Used on Clutch 56620 DC)		1
53795 V	12	CL-1011	Tubular Rivet (Brass) (Will Work for 38387 D)		20
30718 DXA	13		Clutch Facing Package (2 facings) with 22 Rivets, 53795 V		1
56631 DB	14	UCL-2-3846-1	Driven Member, Complete		1

⊙ - After Tractor Serial No. 108222 Rockford and Atwood Clutches are optional. Complete Clutches are interchangeable but Individual Parts are not.

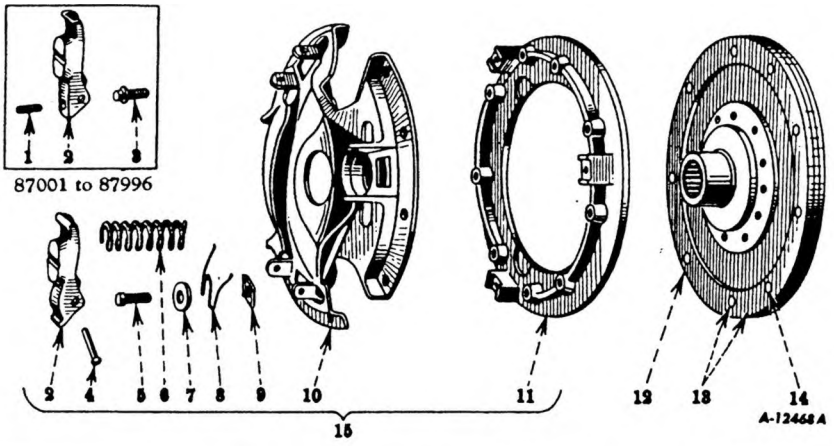

CLUTCH (Atwood)

62600 DAX		9000-3	Clutch (9") with Driven Member, 351297 R92	87001 to 87996	
			(Optional with Rockford Clutch 56620 DC)	108223 up ⊙	1
179816			Cap Screw, 5/16 x 3/4" N.C. Hex Head		6
103320			Lockwasher, 5/16"		6
63159 D	1	3110	Adjusting Screw	87001 to 87996	3
114492			Hex Jam Nut, 1/4" N.F.		3
103024			Hex Nut, 1/4" N.F.		3
63158 D	2	3128	Clutch Lever (Order 69904 DX)	87001 to 87996	3
63158 DX	2	3129	Clutch Lever, 63158 D with One Screw, 63159 D and		
			Two Nuts, 114492 (Order 69904 DX)	87001 to 87996	3
69904 DX	2		Clutch Lever Package		
			(Will Work for 63158 D and 63158 DX)	87001 to 87996	1
69904 D	2	610	Clutch Lever	108223 up	3
63975 D	3	3133	Clutch Bracket Bolt	87001 to 87996	3
103320			Lockwasher, 5/16"		3
63161 D	4	3132	Pivot Pin (1-5/8")		3
351955 R1	4		Pivot Pin (1-11/16")		3
69905 D	5	611	Adjusting Screw	108223 up	3
114493			Hex Jam Nut, 5/16"		3
63160 D	6	318	Pressure Spring		3
63157 D	7	2338	Adjusting Screw Washer		3
64771 D	8	2817	Return Spring		3
63156 D	9	3127	Return Spring Stop		3
63154 D	10	3125	Clutch Bracket		1
63153 D	11	3130	Pressure Plate		1
62601 D	12	9002-2	Clutch Driven Member (Order 351297 R92)		1
351297 R92	12	9002-8	Clutch Driven Member		1
63973 DX	13		Plate Facing Package with 10 Rivets, 63974 D (Order 351467 R91)		1
351467 R91	13		Clutch Facing Package (2 Facings with 10 Rivets, 63974 D)		
			(Will Work for 63973 DX) (Used with Member, 351297 R91)		1
30718 DXA	13		Clutch Facing Package (Consists of Two Grooved Facings with		
			Twenty-two Rivets, 53795 V) (Used with Member, 351297 R92)		1
63974 D	14	366	Facing Rivet (Used with Facing, 351467 R91)		10
53795 V	14		Facing Rivet (Used with Facing, 30718 DXA)		20
62600 DA	15	9001-3	Clutch, Complete - Less Driven Member		1

⊙ - After Tractor Serial No. 108222 Rockford and Atwood Clutches are Optional. Complete Clutches are Interchangeable but Individual Parts are not.

PRINTED IN UNITED STATES OF AMERICA

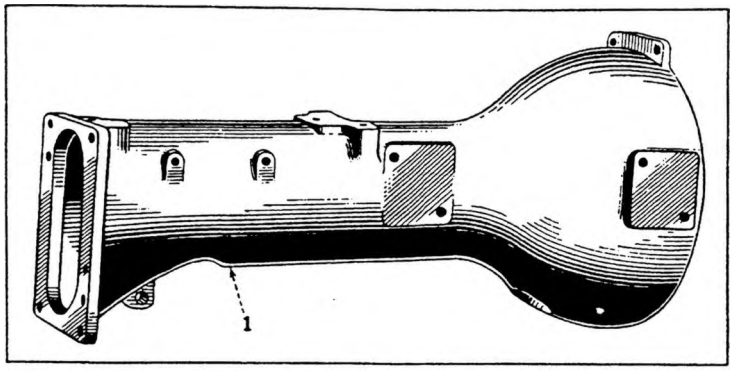

501 to 54386

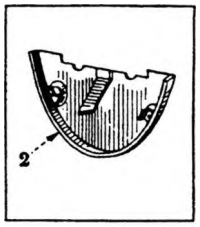

501 to 35350

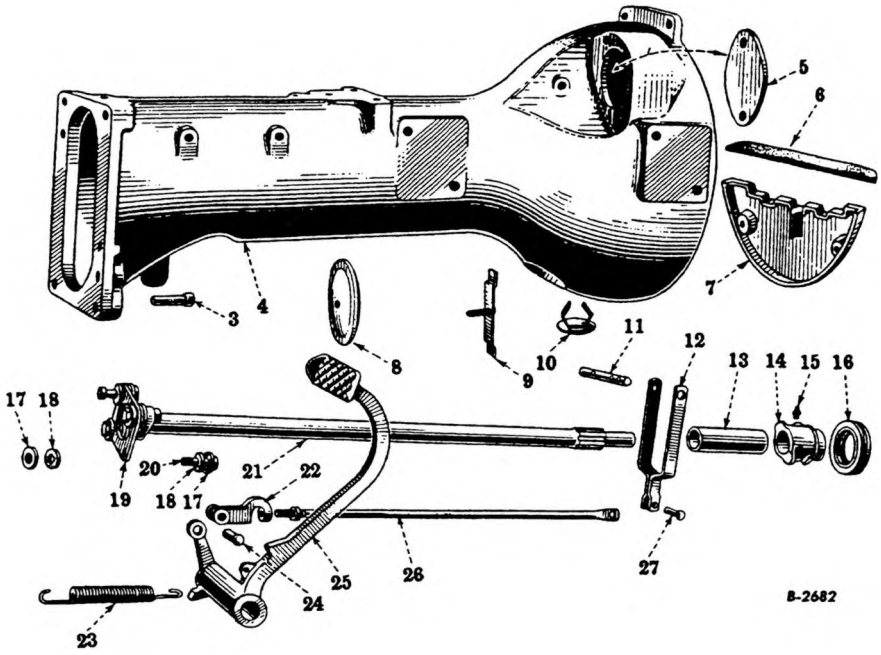

CLUTCH HOUSING, CONTROLS AND CONNECTIONS

6830 DCX	1	Clutch Housing with Corks and Sleeve Guide, 43546 D		
		(Optional with 8638 DEY with Starter Pad Cover, 48554 D) 47218 to 54386	1	
179805		Cap Screw, 1/2 x 1-1/2" N.C. Hex Head	2	
179887		Cap Screw, 1/2 x 1-3/4" N.C. Hex Head	4	
179933		Cap Screw, 5/8 x 2-1/2" N.C. Hex Head	4	
103323		Lockwasher, 1/2"	6	
103325		Lockwasher, 5/8"	4	
		Cork, No. 4 (7/16 - 5/8, - 13/16" Long)	8	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		CLUTCH HOUSING, CONTROLS AND CONNECTIONS			
6830 DCY	1	Clutch Housing, 6830 DCX, with Two Dowels, 58747 D and Four Cap Screws, 179932			
		(For "A" and "B" Only) (Will work for 6830 DX, DAX, DBX)			
		(Optional with 8638 DEX with Starter Pad Cover, 48554 D)	501 to 47217	1	
47714 DX	2	Clutch Housing Cover with 2 Spacers and Pointer ("A" and "B" Only)			
		(Order 8778 DAX)	501 to 35350	1	
179819		Cap Screw, 5/16 x 1" N.C. Hex Head		2	
103320		Lockwasher, 5/16"		2	
357232 R1	3	Transmission Case Clutch Housing Dowel (Will Work for 15945 D)	51864 Up	2	
58747 D	3	Transmission Case Clutch Housing Dowel (Will work for 22977 DA)	501 to 51863	2	
8638 DEX	4	Clutch Housing with Corks and Sleeve Guide, 43546 D	54387 Up	1	
179885		Cap Screw, 1/2 x 1-1/2" N.C. Hex Head		2	
179887		Cap Screw, 1/2 x 1-3/4" N.C. Hex Head		4	
179933		Cap Screw, 5/8 x 2-1/2" N.C. Hex Head		4	
103323		Lockwasher, 1/2"		6	
103325		Lockwasher, 5/8"		4	
		Cork, No. 4 (7/16 - 5/8, 13/16" Long)		8	
8638 DEY	4	Clutch Housing, 8638 DEX with Two Dowels, 58747 D, Starter Pad			
		Cover, 48554 D and Four Cap Screws, 179932			
		("A" and "B" Only) (Will Work for 6830 DX, DAX, DBX, DCX and DCY)	501 to 54386	1	
48554 D	5	Starter Pad Cover	54387 Up	1	
179877		Cap Screw, 1/2 x 5/8" N.C. Hex Head		2	
103323		Lockwasher, 1/2"		2	
57575 D	6	Clutch Housing Cover Felt (Used with Cover, 8778 DAX)	35351 Up	1	
8778 DAX	7	Clutch Housing Cover with Felt, 57575 D (Order 354910 R91)	35351 Up	1	
179819		Cap Screw, 5/16 x 1-1/8" N.C. Hex Head		2	
103320		Lockwasher, 5/16"		2	
354910 R91	7	Clutch Housing Cover, 354909 R1 with Two Screws;			
		179812 and Two Washers, 103320) (Will Work for 8778 DAX)		1	
354909 R1	7	Clutch Housing Cover		1	
179812		Cap Screw, 5/16 x 1/2" N.C. Hex Head		2	
103320		Lockwasher, 5/16"		2	
57576 DX	8	Clutch Housing Hand Hole Cover with Felt	35351 Up	1	
57578 DX	9	Clutch Housing Hand Hole Cover Bar with Welding Bolt	35351 Up	1	
103127		Wing Nut, 1/4" N.C.		1	
57579 DX	10	Clutch Housing Dust Cover with Spring	35351 Up	1	
111871		Tobular Rivet, 1/8 x 5/32"		2	
46278 DAR	11	Clutch Release Yoke Pivot Pin		1	
103396		Cotter Pin, 5/32 x 1"		2	
47716 D	12	Clutch Release Yoke 55C		1	
43546 D	13	Clutch Release Sleeve Guide 55C		1	
6116 D	14	Clutch Release Sleeve 55C		1	
109461	15	Clutch Release Sleeve Lubricator (Same as Q 3615)		1	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		CLUTCH HOUSING, CONTROLS AND CONNECTIONS—Continued		
18567 D	16	Clutch Release Bearing (Nice 5015-1) (Optional with 55211 D or 55212 D)		1
55211 D	16	Clutch Release Bearing (Bantam F-124-A) (Optional with 18567 D or 55212 D)		1
55212 D	16	Clutch Release Bearing (Aetna A-801) (Optional with 18567 D or 55211 D)		1
43551 D	17	Clutch Drive Shaft Joint Rubber Washer Retainer		8
43550 D	18	Clutch Drive Shaft Joint Rubber Washer		8
43549 D	19	Clutch Drive Shaft Joint Disc		1
43552 DBX	20	Clutch Drive Shaft Joint Screw with Nut, 103026 and Lockwasher, 103321		4
351852 R2	21	Clutch Shaft (Will work for 46286 D)		1
49401 D	22	Clutch Rod Adjustable Yoke		1
47845 DA	23	Clutch Pedal Return Spring		1
26480 D	24	Clutch Rod Yoke Pin (Will Work for 16881 D)		1
103373		Cotter Pin, 3/32 x 3/4"		1
6400 DA	25	Clutch Pedal		1
49402 D	26	Clutch Operating Rod		1
103027		Hex Nut, 7/16" N.F		2
H 1290	27	Clutch Rod End Pin		1
B 92-1/2	27	Clutch Rod End Pin (Same as H 1290)		1
103384		Cotter Pin, 1/8 x 3/4"		1
57581 DA		Clutch Housing Dust Seal Field Change Package	501 to 35350	1
66584 D		Clutch Pedal Lubricator (3/16")		1
103026		Hex Nut, 3/8" N.F. (Used with Clutch Drive Shaft Joint Screw)		4
103321		Lockwasher, 3/8" (Used with Clutch Drive Shaft Joint Screw)		4
127800		Straight Lubricator Fitting 1/8"		1
179932		Cap Screw, 5/8 x 2-1/4" N.C. Hex Head (Used with Clutch Housing)		4

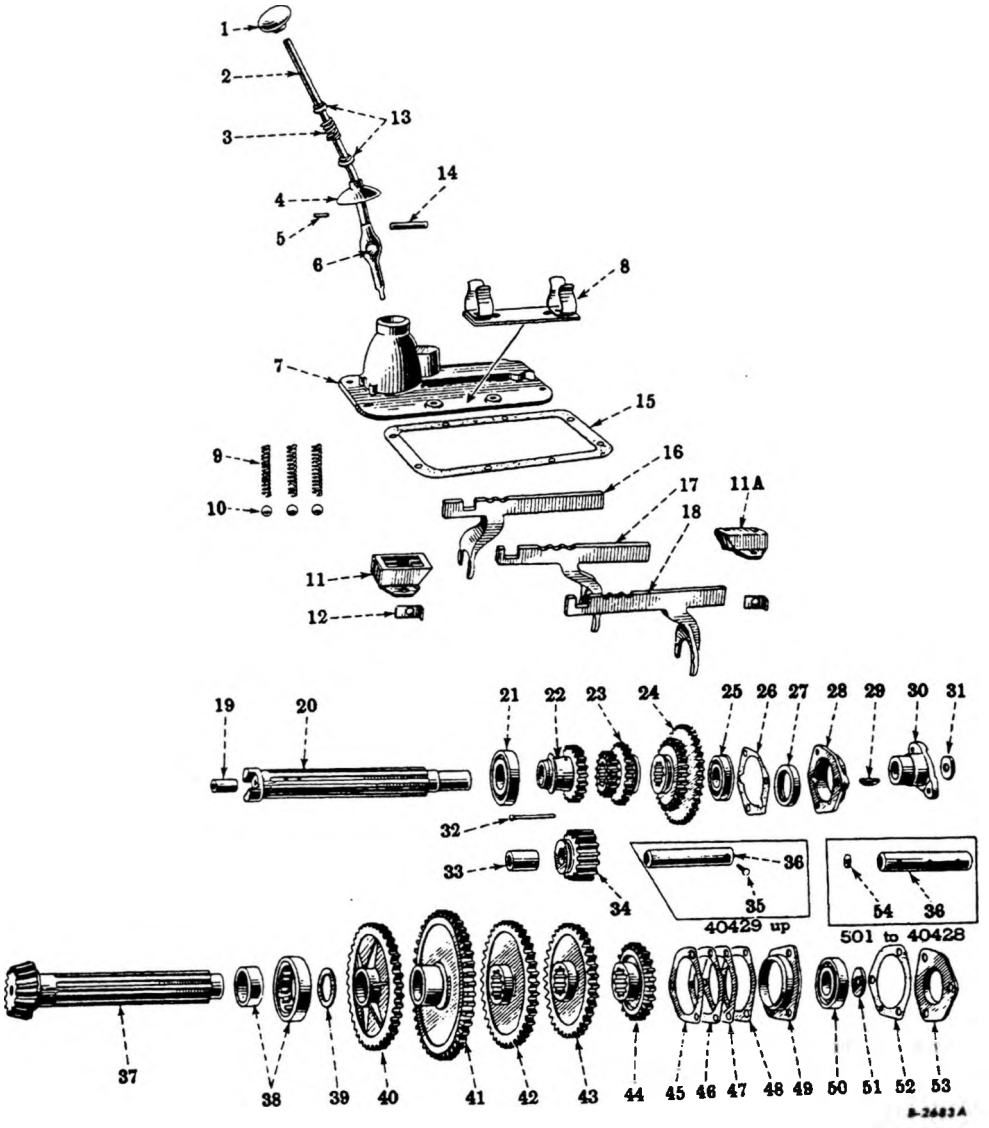

TRANSMISSION AND GEAR SHIFTER MECHANISM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		TRANSMISSION AND GEAR SHIFTER MECHANISM		
63059 DE		TRANSMISSION, COMPLETE (BALL BEARING)(4 SPEEDS FORWARD, 1 REVERSE)		
		WITH DIFFERENTIAL		1
9637 D	1	GEAR SHIFT LEVER BALL (USED WITH LEVER 67689 DX)		1
48427 D	1	GEAR SHIFT LEVER BALL (USED WITH LEVER, 49493 D)	501 TO 10463	1
53717 DA	1	GEAR SHIFT LEVER BALL (USED WITH LEVER, 49493 D)	10464 UP	1
49493 D	2	GEAR SHIFT LEVER (WILL WORK FOR 67689 DX)		1
43578 D	3	GEAR SHIFT SWIVEL SPRING		1
49489 D	4	GEAR SHIFT SWIVEL SHIELD		1
43580 D	5	GEAR SHIFT SWIVEL SPRING RETAINER PIN		1
49488 D	6	GEAR SHIFT SWIVEL SHAFT, LARGE		1
6832 DAX	7	TRANSMISSION CASE COVER WITH PIPE PLUG, 144000 OR 103876		1
179839		CAP SCREW, 3/8 x 1" N.C. HEX HEAD		6
179841		CAP SCREW, 3/8 x 1-1/4" N.C. HEX HEAD		2
103321		LOCKWASHER, 3/8"		8
350639 R91	8	STARTING CRANK MOUNTING BRACKET PLATE WITH CLIPS (WILL WORK FOR 49173 D)		1
110637		RIVET, 1/8 x 7/16" ROUND HEAD		4
41058 DA	9	GEAR SHIFT POPPET BALL SPRING		3
13722 D	10	GEAR SHIFT POPPET BALL, 1/2" (OPTIONAL WITH D 2616)		3
D 2616	10	GEAR SHIFT POPPET BALL, 1/2" (OPTIONAL WITH 13722 D) (WILL WORK FOR 4596 D)		3
47289 DA	11	GEAR SHIFT RAIL GUIDE WITH SUPPORT AND BRACKET (REAR)		1
179816		CAP SCREW, 5/16 x 3/4" N.C. HEX HEAD		2
357538 R91	11A	GEAR SHIFT RAIL GUIDE WITH SUPPORT AND BRACKET (FRONT)		
		(WILL WORK FOR 47289 DA)		1
179816		CAP SCREW, 5/16 x 3/4" N.C. HEX HEAD		2
48567 D	12	GEAR SHIFT RAIL GUIDE SUPPORT CAPSCREW LOCK		4
43579 D	13	GEAR SHIFT SWIVEL SPRING RETAINER		2
49492 D	14	GEAR SHIFT SWIVEL SHAFT, SMALL		1
47279 DA	15	TRANSMISSION CASE COVER GASKET		1
51178 DBX	16	REVERSE SPEED GEAR SHIFTER RAIL AND FORK		1
48833 DBX	17	FIRST AND SECOND SPEED GEAR SHIFTER RAIL AND FORK		1
48834 DBX	18	THIRD AND FOURTH SPEED GEAR SHIFTER RAIL AND FORK		1
43268 D	19	TRANSMISSION SPLINE SHAFT BUSHING		1
49297 DBX	20	TRANSMISSION SPLINE SHAFT (10 TEETH) WITH BUSHING, 43268 D		
		(WILL WORK FOR 62678 DX)		1
181395		CAP SCREW, 7/16 x 1" N.F. HEX HEAD		1
103322		LOCKWASHER, 7/16"		1

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		TRANSMISSION AND GEAR SHIFTER MECHANISM —Continued		
ST 205A	21	Transmission Spline Shaft Bearing, Rear (1H-C-235)		1
351063 R11	22	Reverse Spline Gear (20 Teeth) with Oil Retainer (Will Work for 51175 DX)		1
		Rivet, 3/16 x 2-1/4" Round Head		1
351064 R1	23	First and Second Speed Sliding Gear, 16 and 22 Teeth		
		(Will Work for 49304 DB)		1
351065 R1	24	Third and Fourth Speed Sliding Gear, 26 and 37 Teeth (Will Work for 49305 DB)		1
ST 246	25	Transmission Spline Shaft Bearing, Front (1H-GC-230)		1
46503 D	26	Transmission Spline Shaft Bearing Retainer Gasket		1
42177 D	27	Transmission Spline Shaft Oil Seal		1
6425 DX	28	Transmission Spline Shaft Bearing Retainer with Oil Seal, 42177 D		
		(Optional with 365000 R11)		1
365000 R11	28	Transmission Spling Shaft Bearing Retainer with Oil Seal, 42177 D)		
		(Optional with 6425 DX)		1
179841		Cap Screw, 3/8 x 1-1/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
66984 D	29	Transmission Drive Flange Key (Woodruff No. 126, 3/16 x 2-1/8")		
		(Will Work for 13552 D)		1
43548 D	30	Transmission Drive Flange		1
43262 DA	31	Transmission Drive Flange Washer		1
	32	Follows Reference No. 22		
51177 DR	33	Reverse Idler Gear Bushing		1
351058 R11	34	Reverse Idler Gear, 16 Teeth with Bushing (Will Work for 51176 DAX)		1
61082 D	35	Reverse Idler Shaft Lock Screw	51864 Up	1
103320		Lockwasher, 5/16"		1
43272 DB	36	Reverse Idler Shaft	501 to 40428	1
179803		Cap Screw, 1/4 x 1-3/4" N.C Hex Head		1
103319		Lockwasher, 1/4"		1
351816 R1	36	Reverse Idler Shaft (Will Work for 58339 D)	40429 Up	1
179803		Cap Screw, 1/4 x 1-3/4" N.C. Hex Head	40429 to 51863	1
103319		Lockwasher, 1/4"	40429 to 51863	1
49298 D	37	Countershaft and Bevel Pinion, 13 Teeth		1
181397		Cap Screw, 7/16 x 1-1/4" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
350501 R91	38	Countershaft Bearing (Bower MA-1207-EL) (Optional with 49339 D)		1
49339 D	38	Countershaft Bearing (Hyatt A1207-TS) (Optional with 350501 R91)		1
58338 D	39	First Speed Gear Spacer	39022 Up	1
354643 R11	40	Transmission Oiler Gear (Will Work for 58340 D)	39022 up	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		TRANSMISSION AND GEAR SHIFTER MECHANISM—Continued		
49299 DB	41	First Speed Gear, 45 Teeth (Order 58337 DAX)	501 to 39021	1
58337 DAX	41	First Speed Gear with Spacer, 58338 D (Will Work for 49299 DB)	501 to 39021	1
351059 R1	41	First Speed Gear, 45 Teeth (Will Work for 58337 DA)	39022 Up	1
351060 R1	42	Second Speed Gear, 39 Teeth (Will Work for 49300 DB)		1
351061 R1	43	Third Speed Gear, 35 Teeth (Will Work for 49301 DB)		1
351062 R1	44	Fourth Speed Gear, 24 Teeth (Will Work for 49302 DB)		1
47284 D	45	Countershaft Bearing Cage Shim (Light)		2
47285 D	46	Countershaft Bearing Cage Shim (Medium)		1
47286 D	47	Countershaft Bearing Cage Shim (Heavy)		1
50493 D	48	Countershaft Bearing Cage Shim (Fine)		X
47281 D	49	Countershaft Bearing Cage		1
ST 213 T	50	Countershaft Bearing (IH-C-230 T)		1
43262 DA	51	Countershaft Washer		1
47283 D	52	Countershaft Bearing Cage Gasket		1
47282 DA	53	Countershaft Bearing Cage Retainer		1
179839		Cap Screw, 3/8 x 1" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
13136 D	54	Reverse Idler Shaft Plug	501 to 40428	1
103876		Pipe Plug, 1" Countersunk Head (Case Iron) (Optional with 144000) (In Transmission Case Cover)		1
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 103876) (In Transmission Case Cover)		1

X-As Required

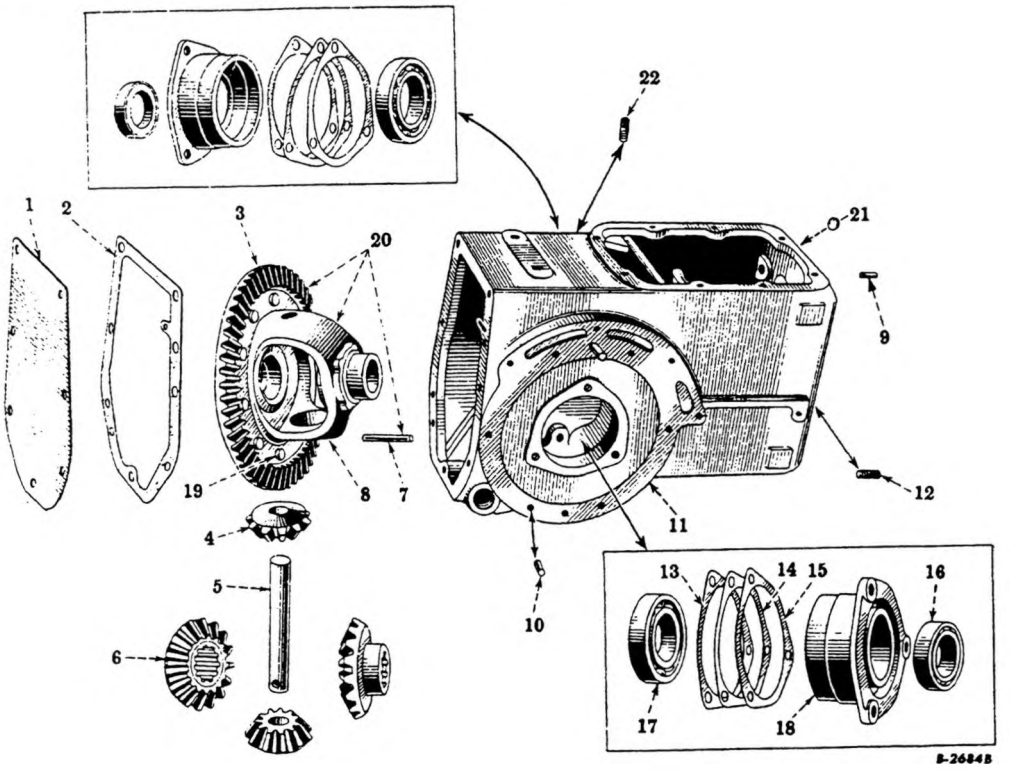

TRANSMISSION CASE AND DIFFERENTIAL

[illegible]	1	Transmission Case Rear Cover Plate		1
[illegible]		Bolt, 7/16 x 1" N.C. Hex Head		7
[illegible]		Lockwasher, 7/16"		7
[illegible] DA	2	Transmission Case Rear Cover Plate Gasket (Optional with 60589 D)		
		("A" and "B" only)	501 to 39021	1
60589 D	2	Transmission Case Rear Cover Plate Gasket (Will Work for 46061 DA)	39022 Up	1
46371 DX	3	Differential Drive Gear with Rivets, 53972 VA		1
42099 H	4	Differential Pinion (11 Teeth) (Order 50817 R1)		2
58342 D	4	Differential Pinion (11 Teeth) (Order 50817 R1)	501 to 172632	2
0817 R1	4	Differential Pinion (10 Teeth)	172633 Up	2
1094 Y	5	Differential Pinion Shaft		1
42098 H	6	Differential Gear (16 Teeth) (Order 50818 R1)		2
58341 D	6	Differential Gear (16 Teeth) (Order 50818 R1)	501 to 172632	2
0818 R1	6	Differential Gear (16 Teeth)	172633 Up	2
95022 H	7	Differential Pinion Shaft Lock Pin	34676 Up	1
1095 Y	7	Differential Pinion Shaft Retainer Screw	501 to 34675	1
[illegible]		Lockwasher, 3/8"		1

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		TRANSMISSION CASE AND DIFFERENTIAL—Continued		
6579 DBX	8	Differential Case with Rivets, 53972 VA (Order 6579 DBY)		1
6579 DBY	8	Differential Case, with Lock Pin, 95022 H and Rivets, 53972 VA (Will Work for 6579 DX and DBX)		1
357232 R1	9	Transmission Case to Clutch Housing Dowel Pin (Will Work for 15945 D)		2
24550 D	10	Rear Axle and Differential Housing Dowel		4
8105 DX	11	Transmission Case (Order 8846 DBY)	501 to 39021	1
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 103876)		1
103876		Pipe Plug, 1" Countersunk Head (Case Iron) (Optional with 144000)		1
103867		Pipe Plug, 3/8"		1
104940		Cork, #5 Tapered		2
8846 DBX	11	Transmission Case	39022 Up	1
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 103876)		1
103867		Pipe Plug, 3/8"		1
104940		Cork, #4 Tapered		2
8846 DBY	11	Transmission Case, Complete (Will Work for 8105 DX)	501 to 39021	1
355793 R91	11	Transmission Case, 8846 DBX with Six Nuts, 103027 and Six Washers, 103322 (Will Work for 8846 DAX)	39002 up	1
7210 T	12	Transmission Countershaft Bearing Cage Stud		1
103026		Hex Nut, 3/8" N.F.		1
103321		Lockwasher, 3/8"		1
46062 D	13	Differential Ball Bearing Retainer Shim, Light		X
50492 D	13	Differential Ball Bearing Retainer Shim, Fine		X
46063 D	14	Differential Ball Bearing Retainer Shim, Medium		X
46064 D	15	Differential Ball Bearing Retainer Shim. Heavy		X
46282 D	16	Differential Ball Bearing Retainer Oil Seal		2
	16A	Not Used		
ST 202	17	Differential Ball Bearing (1H-C-245)		2
6578 DBX	18	Differential Ball Bearing Retainer with Oil Seal, 46282 D and Seal Ring, 355740 R1)		2
179858		Cap Screw, 7/16 x 1" N.C. Hex Head		6
103322		Lockwasher, 7/16"		6
53972 VA	19	Differential Drive Gear Rivet		10
46385 DA	20	Differential Case with Drive Gear, Complete		1
	20A	Not Used		
172558	21	Transmission Case Idler Shaft Hole Plug (Same as 13806 D)	51864 Up	1
47280 D	21	Transmission Case Idler Shaft Hole Plug	501 to 51863	1
355790 R1	22	Rear Axle Housing, Left Hand, Mounting Stud (Used with Transmission Case, 8846 DAXA and 355793 R91)		6
103027		Hex Nut, 7/16" N.F. (Used with Transmission Case, 8846 DBX and 355793 R91)		6
103322		Lockwasher, 7/16" (Used with Transmission Case, 8846 DBX and 355793 R91)		6
355740 R1		Differential Ball Bearing Retainer Seal Ring		1
				X-As Required

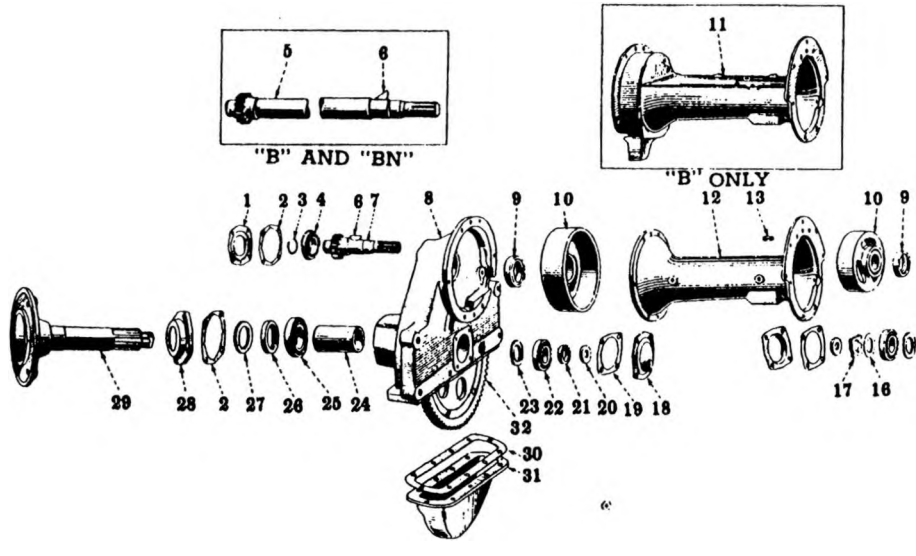
5
6
"B" AND "BN"
11
"B" ONLY
1 2 3 4 6 7 8 9 10 12 13 10 9
29 28 2 27 26 25 24 23 22 21 20 19 18 17 16
32
30
31

FINAL DRIVE

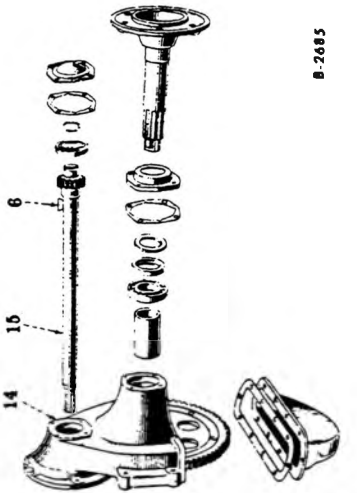
B-2685
6
15
14

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FINAL DRIVE		
48010 D	1	Differential Shaft Bearing Cover		2
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		8
48009 D	2	Differential Shaft Bearing Cover Gasket		2
48009 D	2	Rear Axle Bearing Retainer Gasket		2
43233 D	3	Differential Shaft Bearing Lock Ring		2
ST 239	4	Differential Shaft Ball Bearing (IH-GL-240)		2
49366 DA	5	Differential Shaft, Left (13 Teeth)("B" only)		1
49367 DA	5	Differential Shaft, Right (13 Teeth)("B" only)		1
56844 DA	5	Differential Shaft, Left (13 Teeth) ("BN" Only)		1
117993	6	Brake Drum Key (Woodruff No. 22, 1/4 x 1-3/8") (Same as 48199 D)		2
351826 R1	7	Differential Shaft, Left (13 Teeth) (Not "B" or "BN") (Will Work for 46343 D)		1
6827 DBX	8	Rear Axle Housing, L.H. with Plug, 144000 or 103876 (Order 9800 DX)		1
179861		Cap Screw, 7/16 x 1-3/8" N.C. Hex Head (Not "B" or "BN") (See Note)		2
179862		Cap Screw, 7/16 x 1-1/2" N.C. Hex Head (Not "B" or "BN") (See Note)		4
181406		Cap Screw, 7/16 x 2" N.F. Hex Head ("B" and "BN" only) (See Note)		6
103027		Hex Nut, 7/16" N.F. ("B" and "BN" only)		6
103322		Lockwasher, 7/16"		6
9800 DX	8	Rear Axle Housing, L.H., with Plug, 144000 or 103876 (Will Work for 6827 DBX)		1
179861		Cap Screw, 7/16 x 1-3/8" N.C., Hex Head (See Note)		2
179862		Cap Screw, 7/16 x 1-1/2" N.C., Hex Head (See Note)		4
103322		Lockwasher, 7/16" (See Note)		6
51494 DA	9	Differential Shaft Pinion Oil Seal		2
6401 DAX	10	Brake Drum with Screw, 102897 and Nut, 220066		2
6823 DDX	11	Differential Shaft Housing with 2 Dowels, 24550 D ("B" only)	20897 Up	2
179862		Cap Screw, 7/16 x 1-1/2" N.C. Hex Head		8
179066		Cap Screw, 7/16 x 2" N.C. Hex Head		4
103322		Lockwasher, 7/16"		12
104937		Cork, 5/16 x 7/16 x 5/8"		X
6823 DDY	11	Differential Shaft Housing with Bolts ("B" only)	501 to 20896	2
8894 DAX	11	Differential Shaft Housing with 2 Dowels, 24550 D ("BN" only)		2
179862		Cap Screw, 7/16 x 1-1/2" N.C. Hex Head		8
179866		Cap Screw, 7/16 x 2" N.C. Hex Head		4
103322		Lockwasher, 7/16"		12
104937		Cork, 5/16 x 7/16 x 5/8"		X
8106 DCX	12	Differential Shaft Housing with 2 Dowels, 24550 D (Not "B" or "BN")	19918 Up	1
179862		Cap Screw, 7/16 x 1-1/2" N.C. Hex Head		6
103322		Lockwasher, 7/16"		6
8106 DCY	12	Differential Shaft Housing with Bolts (Not "B" or "BN") (Will Work for 8106 DX and DAX)	501 to 19918	1
24550 D	13	Differential Shaft Housing Dowel	"A" and "AV"	2
			"B" and "BN"	4
		NOTE - Standard Parts Used with Transmission Case, 8846 DAX		X- As Required

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FINAL DRIVE—Continued		
9801 DX	14	Rear Axle Housing, R.H. with Plug, 144000 or 103876 (Will Work for 6828 DBX)		1
181406		Cap Screw, 7/16 x 2" N.F., Hex Head		6
103027		Hex Nut, 7/16" N.F.		6
103322		Lockwasher, 7/16"		6
351825 R1	15	Differential Shaft, Right (13 Teeth) (Not "B") (Will Work for 46344 D)		1
47907 D	16	Rear Axle Shaft Bearing Spacer Washer, R.H.		1
47906 DX	17	Rear Axle Shaft Bearing Spacer, Complete, R.H.		1
47946 D	18	Rear Axle Housing Bearing Cap		2
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		8
103321		Lockwasher, 3/8"		8
47954 D	19	Rear Axle Housing Bearing Cap Gasket		2
43240 D	20	Rear Axle Shaft Washer		2
47905 D	21	Rear Axle Shaft Bearing Spacer, L.H.		1
ST 205 A	22	Rear Axle Inner Bearing (IH-C-235)		2
49313 DA	23	Rear Axle Inner Bearing Washer		2
49903 D	24	Rear Axle Bearing Spacer		2
ST 278	25	Rear Axle Bearing Outer (IH-L-250)		2
43283 D	26	Rear Axle Oil Seal		2
15017 D	27	Rear Axle Felt Washer (Will Work for 43242 D)		2
6594 DX	28	Rear Axle Bearing Retainer with Oil Seal, 42383 D and Washer, 15017 D		
		(Optional with 365001 R11)		2
365001 R11	28	Rear Axle Bearing Retainer with Oil Seal, 42383 D and Washer,		
		15017 D (Optional with 6594 DX)		2
179839		Cap Screw, 3/8 x 1" N.C. Hex Head		8
103321		Lockwasher, 3/8"		8

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FINAL DRIVE—Continued		
49310 DA	29	Rear Axle Shaft (Standard) ("B" and "BN" only)	501 to 32383	2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		2
103325		Lockwasher, 5/8"		2
351824 R2	29	Rear Axle Shaft L.H. ("A" only) (Will Work for 49310 DA)	501 Up	
			(Also R.H., 501 to 5563)	1
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		1
103325		Lockwasher, 5/8"		1
351823 R2	29	Rear Axle Shaft R.H. ("A" only) (Will Work for 54126 D)	5564 Up	1
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		1
103325		Lockwasher, 5/16"		1
54126 D	29	Rear Axle Shaft (Heavy Wheel - Special) ("B" and "BN" only)	5564 to 40020	2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex. Head		2
103325		Lockwasher, 5/8"		2
351823 R2	29	Rear Axle Shaft (Heavy Wheel-Special) ("B" and "BN" only)		
		(Will Work for 54126 D)	5564 to 40020	2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		2
103325		Lockwasher, 5/16"		2
57109 D	29	Rear Axle Shaft (Standard)("B" and "BN" only)	32384 Up	2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		2
103325		Lockwasher, 5/8"		2
57110 D	29	Rear Axle Shaft (Heavy Wheel - Special) ("B" and "BN" only)	40021 Up	2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		2
103325		Lockwasher, 5/8"		2
351819 R1	29	Rear Axle Shaft ("AV" only) (Will Work for 57876 D)		2
181477		Cap Screw, 5/8 x 1-1/4" N.F. Hex Head		2
103325		Lockwasher, 5/8"		2
43245 D	30	Rear Axle Housing Pan Gasket		2
43244 D	31	Rear Axle Housing Pan		2
179814		Cap Screw, 5/16 x 5/8" N.C. Hex Head		20
103320		Lockwasher, 5/16"		20
49901 DX	32	Rear Axle Drive Gear with Hub (Order 351808 R91)		2
16257 R1		Rivet, 5/16 x 1-1/8" Round Head		12
351808 R92	32	Rear Axle Drive Gear with Hub and Six Rivets, 104268 (Steel Hub)		2
		(Optional with 357470 R91) (Will Work for 49901 DX)		2
16257 R1		Rivet, 5/16 x 1-1/8" Round Head (Used with Gear, 351808 R91)		12
104268		Rivet, 5/16 x 1-1/8" Flat Head (Will Work for 14267 R1)		
		(Used with Gear, 351808 R92)		12
357470 R91	32	Rear Axle Drive Gear with Hub, and Six Rivets, 104268		
		(Gray Iron Hub) (Optional with 351808 R92)		2
104268		Rivet, 5/16 x 1-1/8" Flat Head		12
102897		Set Screw, 3/8 x 1-1/4" N.C. Square Head (Cup Point) (In Brake Drum)		2
103876		Pipe Plug, 1" Countersunk Head (Cast Iron) (Optional with 144000)		
		(In Rear Axle Housing)		1
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 103876)		
		(In Rear Axle Housing)		1
220066		Hex Nut, 3/8" N.C.		2

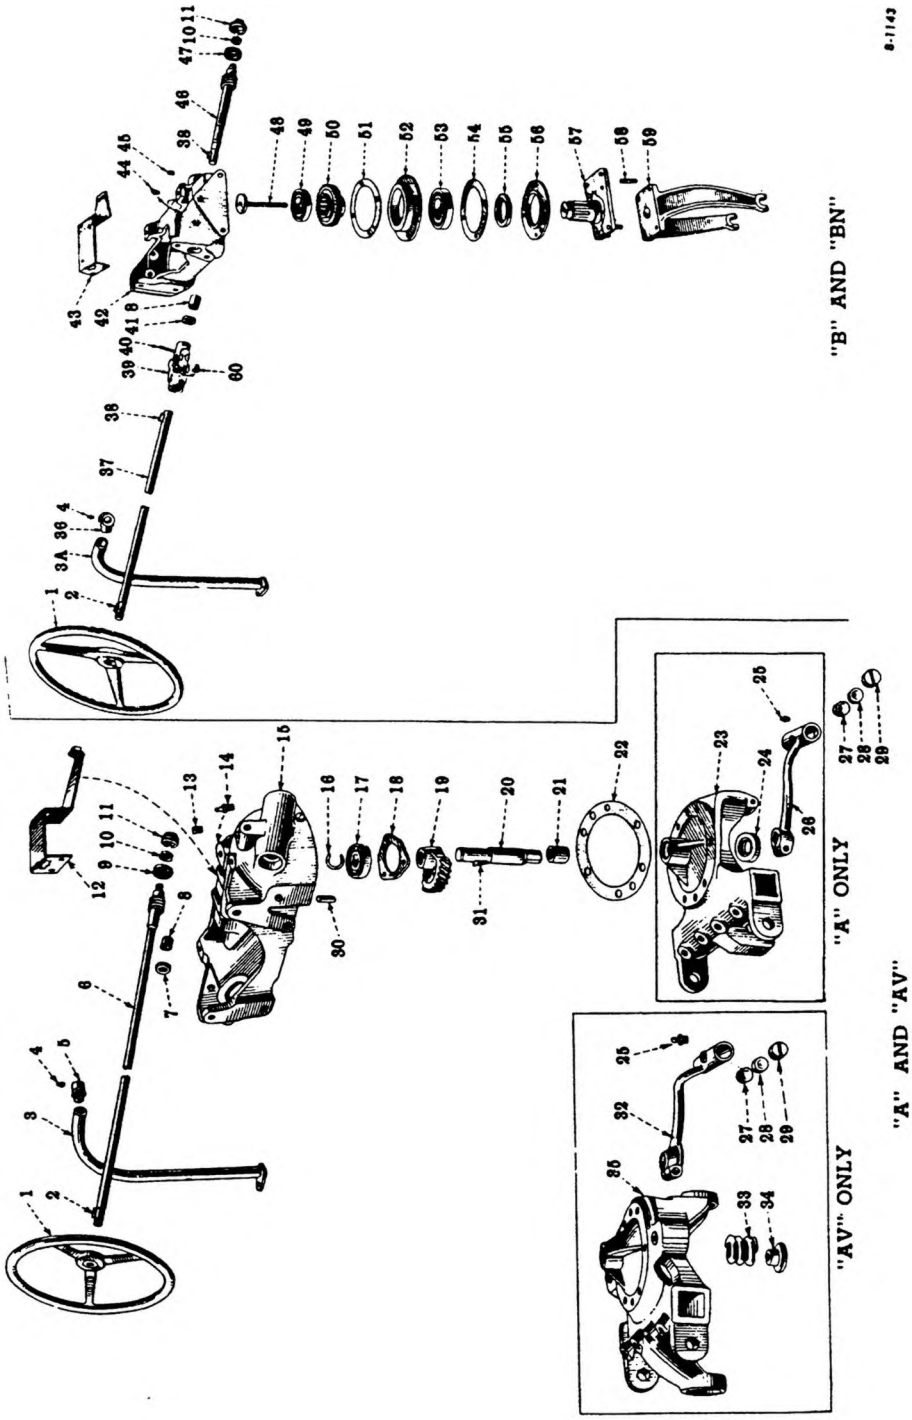

STEERING MECHANISM

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		STEERING MECHANISM		
46512 DA	1	STEERING WHEEL, 15" (OPTIONAL WITH 60069 D)		1
60069 D	1	STEERING WHEEL, 15" (OPTIONAL WITH 46512 DA)		1
112139	2	STEERING WHEEL KEY (WOODRUFF NO. "A" 1/4 x 7/8") (SAME AS 7235 T)		1
47956 DCX	3	STEERING SHAFT SUPPORT ARM WITH BASE ("A" AND "AV")		
		(ORDER 61086 DY)	501 TO 57283	1
		(ALSO "B" AND "BN" 501 TO 59627)(ORDER 60251 DX)		1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
179925		CAP SCREW, 5/8 x 1-1/4" N.C. HEX HEAD		1
103321		LOCKWASHER, 3/8"		1
103325		LOCKWASHER, 5/8"		1
61086 DX	3	STEERING SHAFT SUPPORT ARM ("A" AND "AV")	57284 UP	1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
179925		CAP SCREW, 5/8 x 1-1/4" N.C. HEX HEAD		1
103321		LOCKWASHER, 3/8"		1
103325		LOCKWASHER, 5/8"		1
61086 DY	3	STEERING SHAFT SUPPORT ARM WITH BRACKET, 6852 DX ("A" AND "AV")		
		(WILL WORK FOR 47956 DCX)	501 TO 57283	1
60251 DX	3A	STEERING SHAFT SUPPORT ARM ("B" AND "BN")		
		(WILL WORK FOR 47956 DCX)	59628 UP	1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
179925		CAP SCREW, 5/8 x 1-1/4" N.C. HEX HEAD		1
103321		LOCKWASHER, 3/8"		1
103325		LOCKWASHER, 5/8"		1
109461	4	STEERING SHAFT SUPPORT BRACKET LUBRICATOR (OPTIONAL WITH 119512)		1
119512	4	STEERING SHAFT SUPPORT BRACKET LUBRICATOR (OPTIONAL WITH 109461)		
		(SAME AS 14186 DA)		1
6852 DX	5	STEERING SHAFT SUPPORT BRACKET (NOT "B" OR "BN")		
		(ORDER 9442 DX)	501 TO 100767	1
181345		CAP SCREW, 5/16 x 1-3/4" N.F. HEX HEAD		1
103025		HEX NUT, 5/16"		1
103320		LOCKWASHER, 5/16"		1
9442 DX	5	STEERING SHAFT SUPPORT BRACKET WITH LUBRICATOR, 109461 OR 119512		
		(OPTIONAL WITH 365002 R11) (NOT "B" OR "BN") (WILL WORK		
		FOR 6852 DX)	100763 UP	1
365002 R11	5	STEERING SHAFT SUPPORT BRACKET WITH LUBRICATOR, 109461 OR 119512		
		(OPTIONAL WITH 9442 DX) (NOT "B" OR "BN")	100768 UP	1
181345		CAP SCREW, 5/16 x 1-3/4" N.F. HEX HEAD		1
103025		HEX NUT, 5/16"		1
103320		LOCKWASHER, 5/16"		1
351820 R91	6	STEERING SHAFT WITH WORM (NOT "B" OR "BN") (WILL WORK FOR 46511 DXB)		1
122403		HEX JAM NUT, 3/4" N.F.		1
108635		COTTER PIN, 1/8 x 1-1/8"		1
48956 D	7	STEERING WORM OIL SEAL (NOT "B" OR "BN")		1
41096 DBR	8	STEERING WORM BUSHING		1
ST 287	9	STEERING WORM BEARING (1H-C-320) (NOT "B" OR "BN")		1
43503 D	10	STEERING WORM NUT ("A" ONLY)(ORDER 69442 D)	501 TO 7013	1
69442 D	10	STEERING WORM NUT (WILL WORK FOR 43503 D)		1
6660 DA	11	STEERING WORM BEARING RETAINER	7014 UP	1
6660 DAX	11	STEERING WORM BEARING RETAINER ("A" AND "B" ONLY)		
		(WILL WORK FOR 6660 D)	501 TO 7013	1

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		STEERING MECHANISM—Continued		
58142 DX	12	STARTING CRANK BRACKET WITH WELDING NUT (NOT "B" OR "BN")	41330 UP	1
181413		CAP SCREW, 7/16 x 3-1/2" N.F. HEX HEAD		2
103027		HEX NUT, 7/16" N.F.		2
103322		LOCKWASHER, 7/16"		2
51005 DX	12	STARTING CRANK BRACKET, COMPLETE ("A" ONLY)	501 TO 41329	1
181413		CAP SCREW, 7/16 x 3-1/2" N.F. HEX HEAD		2
103027		HEX NUT, 7/16" N.F.		2
103322		LOCKWASHER, 7/16"		2
57735 DX	13	STEERING GEAR HOUSING VENT AND FILLER PLUG WITH FELT		
		(NOT "B" OR "BN") (ORDER 356569 R1)	36807 UP	1
356569 R1	13	STEERING GEAR HOUSING VENT AND FILLER PLUG (NOT "B" OR "BN")		
		(WILL WORK FOR 57735 DX)	36807 UP	1
109461	14	STEERING WORM WHEEL SHAFT BEARING LUBRICATOR (NOT "B" OR "BN") (SAME AS Q 3615)		
		(OPTIONAL WITH 119512) (USED WITH HOUSING, 6532 DCX)		1
119512	14	STEERING WORM WHEEL SHAFT BEARING LUBRICATOR (NOT "B" OR "BN")		
		(OPTIONAL WITH 109461) (SAME AS 14186 DA) (USED WITH HOUSING, 6532 DCX)		1
6532 DAX	15	STEERING GEAR HOUSING, COMPLETE ("A" ONLY) (ORDER 6532 DEY)	501 TO 36806	1
6532 DEX	15	STEERING GEAR HOUSING, COMPLETE (NOT "B" OR "BN")	36807 UP	1
181487		CAP SCREW, 5/8 x 2-3/4" N.F. HEX HEAD		2
181490		CAP SCREW, 5/8 x 3-1/2" N.F. HEX HEAD		2
103030		HEX NUT, 5/8" N.F.		4
103325		LOCKWASHER, 5/8"		4
103865		PIPE PLUG, 1/8" SQUARE HEAD		1
103867		PIPE PLUG, 3/8" SQUARE HEAD		1
6532 DEY	15	STEERING GEAR HOUSING, COMPLETE ("A" ONLY) (WILL WORK FOR 6532 DAX)	501 TO 36806	1
47679 D	16	STEERING WORM WHEEL SHAFT SNAP RING (NOT "B" OR "BN")		1
ST 288	17	STEERING WORM WHEEL SHAFT BEARING (IH-C-325) (NOT "B" OR "BN")		1
43500 D	18	STEERING WORM WHEEL SHAFT BEARING RETAINER (NOT "B" OR "BN")		1
179814		CAP SCREW, 5/16 x 5/8" N.C. HEX. HEAD		3
103320		LOCKWASHER, 5/16"		3
351815 R1	19	STEERING WORM WHEEL (28 TEETH) (NOT "B" OR "BN")		
		(WILL WORK FOR 47677 DA)		1
47683 DB	20	STEERING WORM WHEEL SHAFT (ORDER 356552 R91 FOR "A" ONLY)		
		(ORDER 356553 R91 FOR "AV" ONLY)		1
47676 DR	21	STEERING WORM WHEEL SHAFT BUSHING (NOT "B" OR "BN")		1
47675 D	22	STEERING GEAR HOUSING GASKET (NOT "B" OR "BN")		1
6530 DDX	23	STEERING GEAR HOUSING BASE WITH BUSHING AND OIL SEAL, 47703 D		
		("A" ONLY) (WILL WORK FOR 8796 D)		1
181407		CAP SCREW, 7/16 x 2-1/4" N.F. HEX HEAD		2
179883		CAP SCREW, 1/2 x 1-1/4" N.C. HEX HEAD		6
103027		HEX NUT, 7/16" N.F.		2
103322		LOCKWASHER, 7/16"		2
103323		LOCKWASHER, 1/2"		6

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		STEERING MECHANISM—Continued		
8796 D	23	Steering Gear Housing Base ("A" Only) (Order 6530 DDX)		1
47703 D	24	Steering Worm Wheel Shaft Oil Seal (Not "B" or "BN")		1
109461	25	Tie Rod Ball Seat Lubricator (not "B" or "BN") (Optional with 119512)		
		(Same as Q 3615)		1
119512	25	Tie Rod Ball Seat Lubricator (Not "B" or "BN") (Optional with 109461)		
		(Same as 14186 DA)		1
47684 DB	26	Steering Gear Arm ("A" only) (Order 356552 R91)	501 to 96389	1
181406		Cap Screw, 7/16 x 2" N.F. Hex Head		1
103027		Hex Nut, 7/16" N.F.		1
103322		Lockwasher, 7/16"		1
69438 D	26	Steering Gear Arm ("A" only) (Order 356552 R91)	96390 Up	1
181407		Cap Screw, 7/16 x 2-1/4" N.F. Hex Head		1
103027		Hex Nut, 7/16" N.F.		1
103322		Lockwasher, 7/16"		1
46347 D	27	Tie Rod Ball Seat, End ("A" Only) (Order 57874 D)		1
57874 D	27	Tie Rod Ball Seat, End (not "B" or "BN")		
		(will work for 46347 D)		1
46346 D	28	Tie Rod Ball Seat, Center ("A" Only) (Order 57873 D)		1
57873 D	28	Tie Rod Ball Seat, Center (not "B" or "BN")		
		(will work for 46346 D)		1
43470 D	29	Tie Rod Adjustable Ball Seat ("A" Only) (Order 57875 D)		1
103389		Cotter Pin, 1/8 x 2"		1
57875 D	29	Tie Rod Adjustable Ball Seat (not "B" or "BN") (will work for 43470 D)		1
103389		Cotter Pin, 1/8 x 2"		1
25086 DA	30	Steering Gear Housing Dowel Pin (Not "B" or "BN")		2
117989	31	Steering Worm Wheel Shaft Key (Woodruff No. 19 - 3/16 x 1-1/4")		
		(Not "B" or "BN") (Same as 47844 D)		1
60391 DA	32	Steering Gear Arm ("AV" only) (Order 356553 R91)	501 to 96389	1
181406		Cap Screw, 7/16 x 2" N.F. Hex Head		1
103027		Hex Nut, 7/16" N.F.		1
103322		Lockwasher, 7/16"		1
69439 D	32	Steering Gear Arm ("AV" Only) (Order 356553 R91)	96390 Up	1
181407		Cap Screw, 7/16 x 2-1/4" N.F., Hex Head		1
103027		Hex Nut, 7/16" N.F.		1
103322		Lockwasher, 7/16"		1
58574 D	33	Front Axle Stop Spring ("AV" Only)		2
60399 DA	34	Front Axle Stop Spring Retainer ("AV" Only)		2
117310		Screw, 3/8 x 1-1/2" N.C. Fillister Head		2
9061 DAX	35	Steering Gear Housing Base with Bushing and Oil Seal, 47703 D ("AV" Only)		1
179885		Cap Screw, 1/2 x 1-1/2" N.C. Hex Head		6
103323		Lockwasher, 1/2"		6

CHASSIS

PART NUMBER	REF NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		STEERING MECHANISM—Continued		
8329 DX	36	STEERING SHAFT SUPPORT BRACKET		
		("B" AND "BN" ONLY) (ORDER 9442 DX)	501 TO 11873	1
181345		CAP SCREW, 5/16 x 1-3/4" N.F. HEX HEAD		1
103025		HEX NUT, 5/16" N.F.		1
103320		LOCKWASHER, 5/16"		1
9442 DX	36	STEERING SHAFT SUPPORT BRACKET WITH LUBRICATOR, 109461		
		(OPTIONAL WITH 365002 R11) ("B" AND "BN" ONLY) (WILL WORK		
		FOR 8329 DX)	11874 UP	1
365002 R11	36	STEERING SHAFT SUPPORT BRACKET WITH LUBRICATOR, 109461		
		(OPTIONAL WITH 9442 DX)		1
181345		CAP SCREW, 5/16 x 1-3/4" N.F. HEX HEAD		1
103025		HEX NUT, 5/16"		1
103320		LOCKWASHER, 5/16"		1
52976 D	37	STEERING SHAFT (NOT "B" AND "BN")	11874 UP	1
114499		HEX JAM NUT, 3/4" N.F.		1
103462	38	STEERING SHAFT UNIVERSAL JOINT KEY (WOODRUFF NO. 13 - 3/16 x 1")		
		("B" AND "BN" ONLY) (SAME AS 13054 D)		2
52977 D	39	STEERING SHAFT UNIVERSAL JOINT ("B" AND "BN" ONLY) (ORDER 52977 DAX)	501 TO 19308	1
52977 DA	39	STEERING SHAFT UNIVERSAL JOINT ("B" AND "BN" ONLY) (ORDER 52977 DAX)	19309 UP	1
52977 DAX	39	STEERING SHAFT UNIVERSAL JOINT WITH TWO PINS, 4376 T ("B" AND "BN" ONLY)		
		(WILL WORK FOR 52977 D, 52977 DA)		1
4376 T	40	STEERING SHAFT UNIVERSAL JOINT PIN ("B" AND "BN")		
		(USE WITH JOINT, 52977 DA)		2
5526 T	40	STEERING SHAFT UNIVERSAL JOINT PIN ("B" AND "BN")(USE WITH JOINT, 52977 D)		2
43800 DA	41	STEERING WORM OIL SEAL ("B" AND "BN") (OPTIONAL WITH 359257 R91)		1
359257 R91	41	STEERING WORM OIL SEAL ("B" AND "BN") (OPTIONAL WITH 43800 DA)		1
8330 DCX	42	STEERING GEAR HOUSING, COMPLETE ("B" AND "BN" ONLY)		1
181487		CAP SCREW, 5/8 x 2-3/4" N.F. HEX HEAD		2
179935		CAP SCREW, 5/8 x 3" N.C. HEX HEAD		2
103030		HEX NUT, 5/8" N.F.		2
103325		LOCKWASHER, 5/8"		4
103866		PIPE PLUG, 1/4" SQUARE HEAD		1
103067		PIPE PLUG, 3/8" SQUARE HEAD		1
52980 DX	43	STARTING CRANK BRACKET, COMPLETE ("B" AND "BN")	501 TO 40192	1
179814		CAP SCREW, 5/16 x 5/8" N.C. HEX HEAD		4
103320		LOCKWASHER, 5/16"		4
58143 DX	43	STARTING CRANK BRACKET WITH WELDING NUT ("B" AND "BN")	40193 UP	1
179814		CAP SCREW, 5/16 x 5/8" N.C. HEX HEAD		4
103320		LOCKWASHER, 5/16"		4
Q 3673	44	STEERING WORM BUSHING LUBRICATOR ("B" AND "BN")		1
53218 DX	45	STEERING GEAR HOUSING VENT PLUG WITH FELT ("B" AND "BN") (ORDER 356568 R1)		
		(ALSO "A", 501 TO 36806)	5538 UP	1
356568 R1	45	STEERING GEAR HOUSING VENT PLUG ("B" AND "BN")		
		(WILL WORK FOR 53218 DX) (ALSO "A", 501 TO 36806)	5538 UP	1
53961 D	45	STEERING GEAR HOUSING VENT PLUG WITH FELT AND NUT ("B")	501 TO 5537	1

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		STEERING MECHANISM—Continued		
52978 DA	46	Steering Worm ("B" and "BN")		1
108635		Cotter Pin, 1/8 x 1-1/8"		1
ST 225 BT	47	Steering Worm Bearing IH-C-225-2 ("B" and "BN" Only)		
		(Will Work for ST 225)		1
52953 DX	48	Steering Worm Wheel Shaft Upper Bearing Washer with Stud		
		("B" and "BN" Only)		1
103028		Hex Nut, 1/2" N.F.		1
103323		Lockwasher, 1/2"		1
ST 278	49	Steering Worm Wheel Shaft Bearing, Upper (IH-L-250) ("B" and "BN")		1
52979 DB	50	Steering Worm Wheel (31 Teeth) ("B" and "BN")		1
52951 D	51	Steering Worm Wheel Shaft Lower Bearing Cage Gasket ("B" and "BN")		1
8324 D	52	Steering Worm Wheel Shaft Lower Bearing Cage ("B" and "BN" Only)		1
18511 D	53	Steering Worm Wheel Shaft Bearing, Lower (N.D. 3212)		
		("B" and "BN" Only)		1
52952 D	54	Steering Worm Wheel Shaft Lower Bearing Cage Cover Gasket		
		("B" and "BN" Only)		1
48776 D	55	Steering Worm Wheel Shaft Oil Seal ("B" and "BN")		1
8325 DX	56	Steering Worm Wheel Shaft Lower Bearing Cage Cover with Oil		
		Seal, 48776 D ("B" and "BN" Only)		1
179862		Cap Screw, 7/16 x 1-1/2" N.C. Hex Head		4
103322		Lockwasher, 7/16"		4
53001 DX	57	Steering Worm Wheel Shaft with Stud, 53002 D ("B" and "BN")		1
53002 D	58	Steering Worm Wheel Shaft Stud ("B" and "BN")		4
103028		Hex Nut, 1/2" N.F.		4
103323		Lockwasher, 1/2"		4
52950 DA	59	Front Wheel Fork ("B" and "BN" Only)		1
179849		Cap Screw, 3/8 x 2-1/2" N.C. Hex Head		2
13002 R1		Hex Nut, 3/8" N.C.		2
103321		Lockwasher, 3/8"		2
109462	60	Steering Shaft Universal Joint Lubricator ("B" and "BN")		
		(Optional with 109354) (Same as Q 3626)		1
109354	60	Steering Shaft Universal Joint Lubricator ("B" and "BN")		
		(Optional with 109462) (Same as HA 59603)		1
356552 R91		Steering Gear Arm with Shaft Service Package ("A" Only)		
		(Will Work for 47683 DB, 47684 DB and 69438 D)		1
356553 R91		Steering Gear Arm with Shaft Service Package ("AV" Only)		
		(Will Work for 47683 DB, 60391 DA and 69439 D)		1

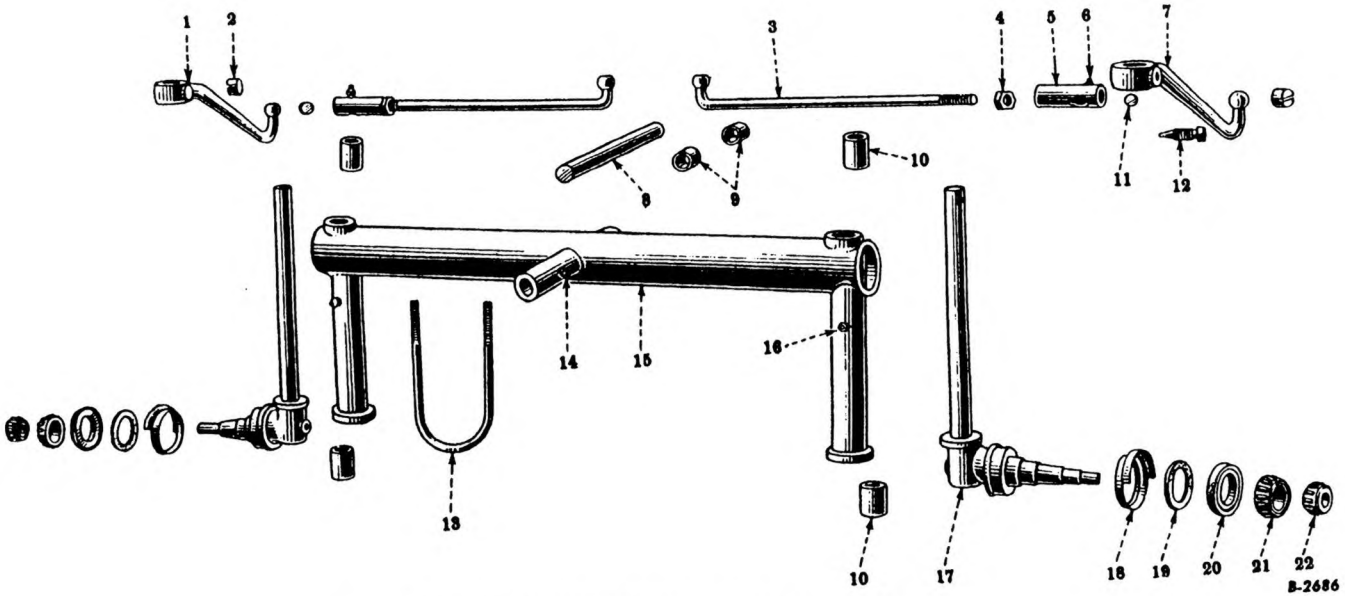

FRONT AXLE AND STEERING KNUCKLE—"A" ONLY

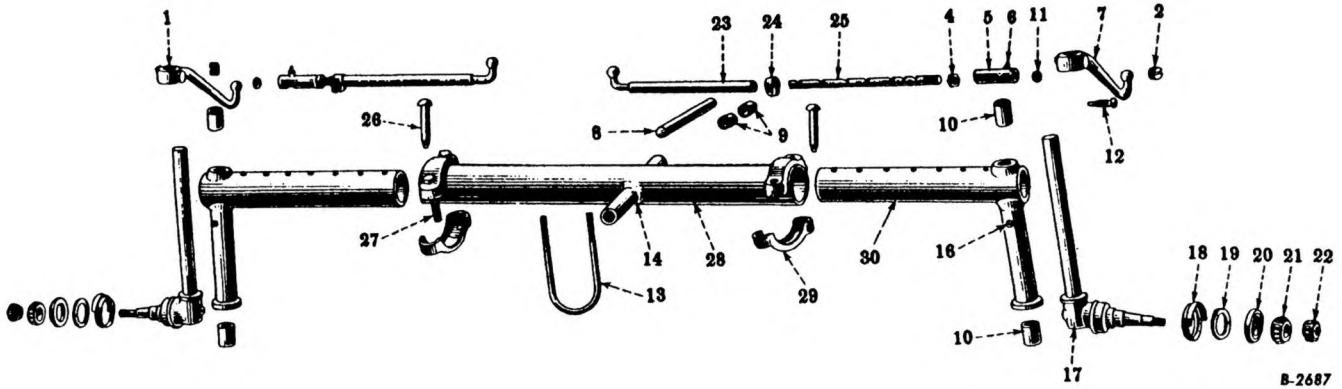

ADJUSTABLE FRONT AXLE ATTACHMENT—SPECIAL—"A" ONLY

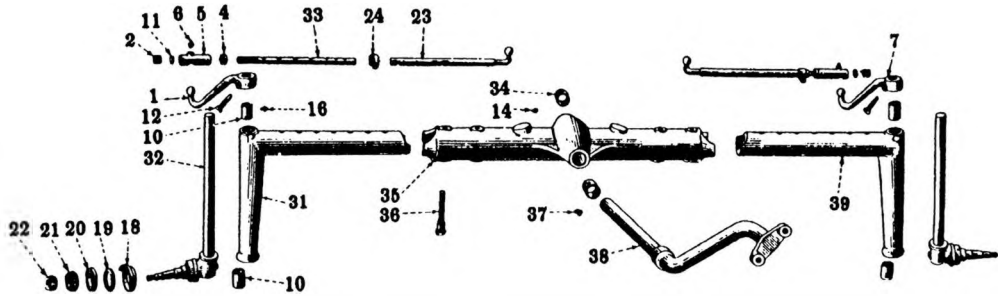

ADJUSTABLE FRONT AXLE AND STEERING KNUCKLE—"AV" ONLY

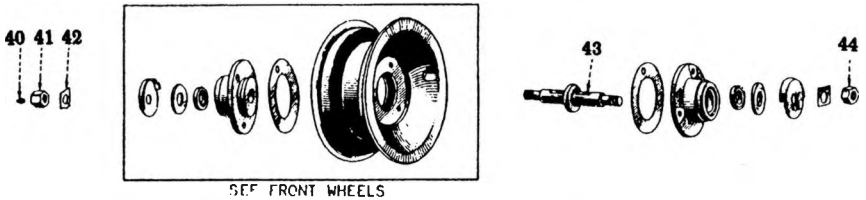

FRONT AXLE AND RELATED PARTS—"B" AND "BN" ONLY

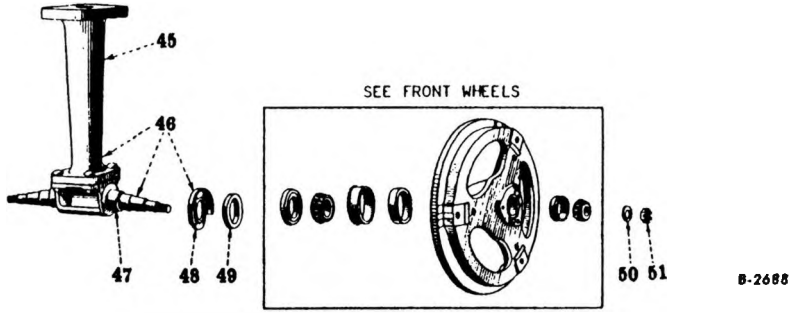

FRONT AXLE AND RELATED PARTS
FOR "B" AND "BN" EQUIPPED WITH DOUBLE FRONT WHEEL ATTACHMENT

FRONT AXLE AND STEERING KNUCKLE

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FRONT AXLE AND STEERING KNUCKLE		
43464 DC	1	Steering Knuckle Arm, L.H. (Not "B" or "BN")		1
43470 D	2	Tie Rod Adjustable Ball Seat (Order 57875 D) (Not "B" or "BN")		2
103389		Cotter Pin, 1/8 x 2"		2
57875 D	2	Tie Rod Adjustable Ball Seat (Will work for 43470 D)		2
103389		Cotter Pin, 1/8 x 2"		2
48279 DXB	3	Tie Rod ("A" only) (Not Adjustable Axle)		2
114499	4	Hex Jam Nut, 3/4" N.F.		2
48280 DB	5	Tie Rod End (Not "B" or "BN")		2
109461	6	Tie Rod Lubricator Fitting (Not "B" or "BN") (Same as Q 3615)		
		(Used with 48280 DA)		2
109454	6	Tie Rod Lubricator (Lincoln 5010) (Optional with 110347)		
		(Used with 48280 DB)		2
110347	6	Tie Rod Lubricator (Alemite 1641) (Optional with 109454)		
		(Used with 48280 DB)		2
43465 DC	7	Steering Knuckle Arm, R.H. (Not "B" or "BN")		1
351821 R1	8	Front Axle Pivot Shaft ("A" Only) (Will Work for 43456 DA)		1
43455 DR	9	Front Axle Pivot Bushing ("A" Only)		X
356609 R1	10	Steering Knuckle Post Bushing (Will Work for 46340 DR and 60385 DR)		
		(Not "B" or "BN")		X
43468 D	11	Tie Rod Ball Seat (Not "B" or "BN")		2
43466 DB	12	Steering Knuckle Arm Set Screw (Not "B" or "BN")		2
114498		Hex Jam Nut, 5/8" N.F.		2
48278 D	13	Front Axle Stop "U" Bolt ("A" only)		1
103028		Hex Nut, 1/2" N.F.		4
103323		Lockwasher, 1/2"		2
109454	14	Front Axle Pivot Lubricator Fitting, Front (Not "B" or "BN")		
		(Optional with 110347) (Will Work for 109461)		1
110347	14	Front Axle Pivot Lubricator Fitting, Front (Not "B" or "BN")		
		(Optional with 109454) (Will Work for 119512)		1
48274 DB	15	Front Axle with Bushing ("A" only) (Not Adjustable Axle)		1
109454	16	Steering Knuckle Post Lubricator Fitting (Not "B" or "BN")		
		(Optional with 110347) (Will Work for 109461)		See Note
110347	16	Steering Knuckle Post Lubricator Fitting (Not "B" or "BN")		
		(Optional with 109454) (Will Work for 119512)		See Note
				X-As Required

Note - 2 Required for "A", 4 Required for "AV" only

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FRONT AXLE AND STEERING KNUCKLE—Continued		
350603 R91	17	STEERING KNUCKLE, COMPLETE ("A" ONLY) (WILL WORK FOR 43460 DCXA)		2
102649		HEX SLOTTED NUT, 5/8" N.F.		2
103386		COTTER PIN, 1/8 x 1-1/4"		2
Q 1538		WASHER, 1-1/4" O.D. x 21/32" I.D. x No. 12 GAUGE		2
43462 D	18	STEERING KNUCKLE DUST DEFLECTOR (NOT "B" OR "BN")		2
49118 DA	19	FRONT WHEEL FELT WASHER (NOT "B" OR "BN")		2
43463 D	20	FRONT WHEEL OIL SEAL (NOT "B" OR "BN")		2
54631 H	21	FRONT WHEEL INNER BEARING CONE (TIMKEN 15118) (NOT "B" OR "BN")		
		(OPTIONAL WITH 352387 R91 AND 353517 R92)		2
352387 R91	21	FRONT WHEEL INNER BEARING CONE (BOWER BT-15118)		
		(NOT "B" OR "BN") (OPTIONAL WITH 54631 H AND 353517 R92)		2
353517 R92	21	FRONT WHEEL INNER BEARING CONE (TYSON 15118)		
		(NOT "B" OR "BN") (OPTIONAL WITH 54631 H AND 352387 R91)		2
13823 V	22	FRONT WHEEL OUTER BEARING CONE (NOT "B" OR "BN") (TIMKEN 09074)		
		(OPTIONAL WITH 352388 R91 AND 353518 R92)		2
352388 R91	22	FRONT WHEEL OUTER BEARING CONE (BOWER BT-09074)		
		(NOT "B" OR "BN") (OPTIONAL WITH 13823 V AND 353518 R91)		2
353518 R92	22	FRONT WHEEL OUTER BEARING CONE (TYSON 09074)		
		(NOT "B" OR "BN") (OPTIONAL WITH 13823 V AND 352388 R91)		2
48289 DXA	23	TIE ROD TUBE ("A" ONLY) (ADJUSTABLE AXLE) (ORDER 57869 DA)		2
57869 DA	23	TIE ROD TUBE, COMPLETE (WILL WORK FOR 48289 DXA) ("A" ONLY)		
		(ADJUSTABLE AXLE - SPECIAL)		2
57869 DA	23	TIE ROD TUBE, COMPLETE ("AV" ONLY)		2
43747 D	24	TIE ROD CLAMP ("AV" ONLY)		2
181403		CAP SCREW, 7/16 x 1-3/4" N.F. HEX HEAD		2
103027		HEX NUT, 7/16" N.F.		2
103322		LOCKWASHER, 7/16"		2
48288 D	25	TIE ROD ("A" ONLY) (ADJUSTABLE AXLE - SPECIAL)	501 TO 20703	2
57139 DA	25	TIE ROD ("A" ONLY) (ADJUSTABLE AXLE - SPECIAL)	20704 UP	2
59280 D	26	FRONT AXLE EXTENSION CLAMP PIN ("A" ONLY)(ADJUSTABLE AXLE-SPECIAL)		22
108630		COTTER PIN, 1/8 x 7/8"		2
48628 D	27	FRONT AXLE EXTENSION CLAMP BOLT ("A" ONLY) (ADJUSTABLE AXLE-SPECIAL)		4
103030		HEX NUT, 5/8" N.F.		4
103325		LOCKWASHER, 5/8"		4
354800 R92	28	FRONT AXLE CENTER, WITH 2 BUSHINGS ("A" ONLY)		
		(ADJUSTABLE AXLE - SPECIAL) (WILL WORK FOR 48285 DAX)		1

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		FRONT AXLE AND STEERING KNUCKLE—Continued			
48287 DX	29	Front Axle Extension Clamp ("A" only) (Adjustable Axle) (Order 59279 DX)		4	
59279 D	29	Front Axle Extension Clamp ("A" only) (Adjustable Axle - Special)		4	
59279 DX	29	Front Axle Extension Clamp with Pin, 59280 D ("A" only)			
		(Adjustable Axle - Special) (Will work for 48287 DX)		X	
48286 DAXA	30	Front Axle Extension, Horizontal, with 2 Bushings, 60385 DR			
		("A" only) (Adjustable Axle - Special)		2	
9058 DBX	31	Front Axle Extension, L.H. with 2 Bushings, 60385 DR ("AV" only)		1	
350604 R91	32	Steering Knuckle, Complete ("AV" only) (Will Work for 57868 DB)		2	
102649		Hex Slotted Nut, 5/8" N.F.		2	
103386		Cotter Pin, 1/8 x 1-1/4"		2	
Q 1538		Washer, 1-1/4 O.D. x 21/32" I.D. x No. 12 Gauge		2	
57871 D	33	Tie Rod ("AV" only)		2	
60386 DR	34	Front Axle Pivot Bushing ("AV" only)		X	
9057 DAX	35	Front Axle Center with 2 Bushings, 60386 DR ("AV" only)		1	
60387 D	36	Front Axle Clamp Bolt ("AV" only)		4	
103030		Hex Nut, 5/8" N.F.		4	
103325		Lockwasher, 5/8"		4	
117175	37	Front Axle Pivot Lubricator Fitting, Rear ("AV" only)			
		(Optional with 110309)		1	
110309	37	Front Axle Pivot Lubricator Fitting, Rear ("AV" only)			
		(Optional with 117175)		1	
60388 DX	38	Front Axle Pivot Shaft, Complete ("AV" only)		1	
179891		Cap Screw, 1/2 x 2-1/2" N.C. Hex Head		2	
103323		Lockwasher, 1/2"		2	
9059 DBX	39	Front Axle Extension, R.H. with 2 Bushings, 60385 DR ("AV" only)		1	
109461	40	Front Axle Lubricator ("B" and "BN" only)			
		(Optional with 119512)		1	
119512	40	Front Axle Lubricator ("B" and "BN" only)			
		(Optional with 109461)		1	
23742 D	41	Front Axle Nut (7/8" N.F.) ("B" and "BN" only)		1	
23743 D	42	Front Axle Nut Lockwasher ("B" and "BN" only)		2	
23740 D	43	Front Axle (Special) ("B" and "BN") for Front Wheel, 40833 D		1	
103032		Hex Nut, 7/8" N.F.		1	
52949 D	43	Front Axle ("B" and "BN" only)		1	
103032	44	Hex Nut, 7/8" N.F.		1	
8624 DCX	45	Front Wheel Bolster with 4 Rivets, 108685 ("B" and "BN")			
		(Double Front Wheel - Special)		1	
55461 DD	46	Front Axle and Bolster, Complete ("B" and "BN") (Double Front Wheel-Special)		1	

X-As Required

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		FRONT AXLE AND STEERING KNUCKLE—Continued		
55452 DAX	47	FRONT AXLE WITH RIVETS ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL)		1
Q 1538		WASHER, 21/32" I.D. x 1-1/4" O.D. x No. 12 GAUGE		2
108685		RIVET, 1/2 x 1-7/8" ROUND HEAD		4
102649		HEX SLOTTED NUT, 5/8" N.F.		2
103387		COTTER PIN, 1/8 x 1-1/2"		2
55454 D	48	FRONT AXLE DUST DEFLECTOR ("B" AND "BN") (DOUBLE FRONT WHEEL-SPECIAL)		2
55453 D	49	FRONT AXLE FELT WASHER ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL)		2
Q 1538	50	FOLLOWS REFERENCE NO. 47		
102649	51	FOLLOWS REFERENCE NO. 47		
43441 D		FRONT WHEEL OUTER BEARING (CONE, 13823 V WITH CUP, 43440 D)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 352381 R91 AND 353510 R92)		2
48290 DC		ADJUSTABLE FRONT AXLE ATTACHMENT-SPECIAL ("A" ONLY) (MACHINE ATTACHMENT)		1
70335 D8		HEAVY DUTY FRONT AXLE ATTACHMENT (SPECIAL) (FACTORY APPLICATION "A" ONLY)		
		CONSISTS OF PARTS ILLUSTRATED UNDER ADJUSTABLE FRONT AXLE AND STEERING		
		MECHANISM FOR "AV" TRACTORS ONLY		
		SEE DETAILS OF ASSEMBLES FOR LIST OF PARTS		1
54632 H		FRONT WHEEL INNER BEARING (CUP, 54630 H WITH CONE, 54631 H)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 352380 R91 AND 353509 R92)		2
352380 R91		FRONT WHEEL INNER BEARING (CONE, 352387 R91 AND CUP, 352394 R1)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 54632 H AND 353509 R92)		2
352381 R91		FRONT WHEEL OUTER BEARING (CONE, 352388 R91 AND CUP, 352395 R1)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 43441 D AND 353510 R92)		2
353509 R92		FRONT WHEEL INNER BEARING (CONE, 353517 R92 AND CUP, 353525 R1)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 54632 H AND 352380 R91)		2
353510 R92		FRONT WHEEL OUTER BEARING (CONE, 353518 R92 AND CUP, 353526 R91)		
		(NOT "B" OR "BN") (ALSO SEE FRONT WHEELS)		
		(OPTIONAL WITH 43441 D AND 352381 R91)		2
355001 R91		FRONT AXLE PIVOT TUBE REINFORCEMENT FIELD IMPROVEMENT PACKAGE		
		(FOR "A" TRACTORS EQUIPPED WITH ADJUSTABLE FRONT AXLE ATTACHMENT, 48290 DA)		1

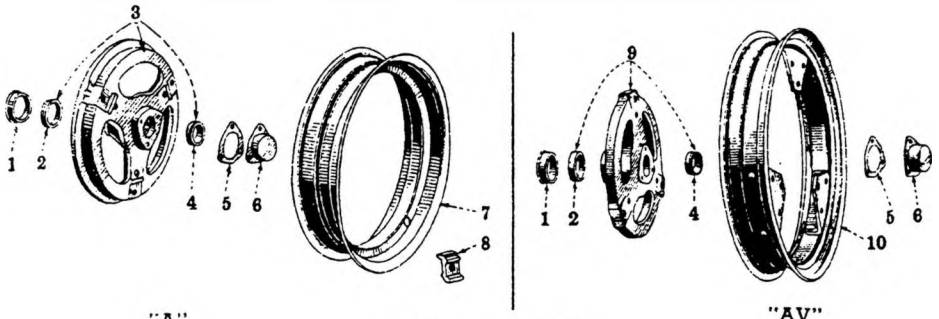

"A" "AV"

DOUBLE FRONT WHEEL

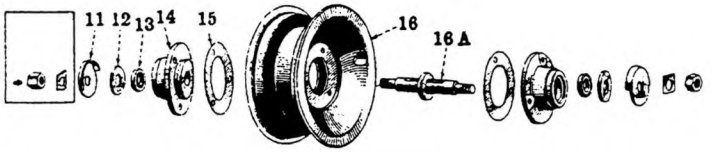

"B" AND "BN"
SINGLE FRONT WHEEL

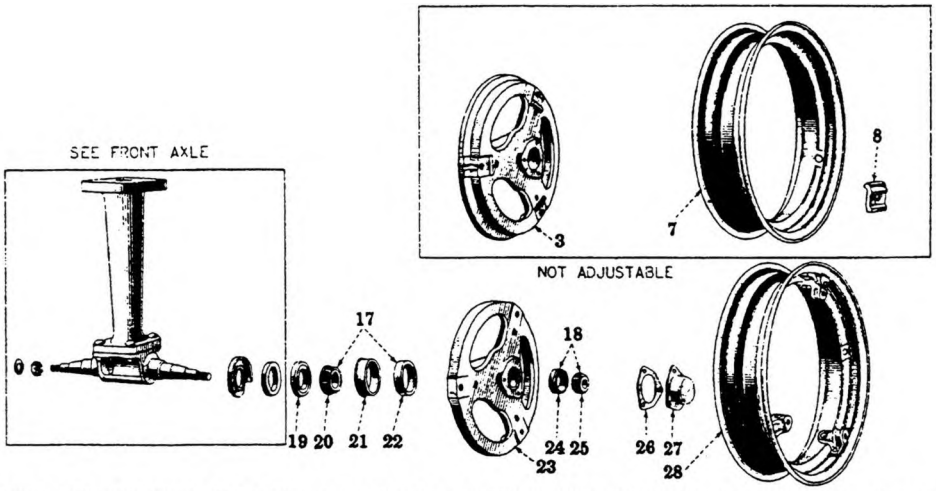

FRONT AXLE AND RELATED PARTS FOR "B" AND "BN" EQUIPPED WITH DOUBLE FRONT WHEEL ATTACHMENT
ADJUSTABLE AND NOT-ADJUSTABLE

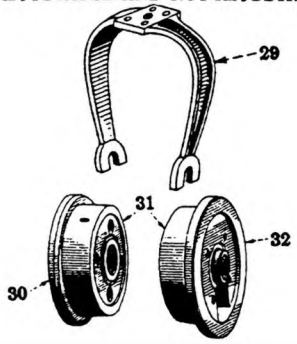

B-2689

SINGLE FRONT WHEEL ATTACHMENT (Special)
"B" AND "BN"

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
		FRONT WHEELS				
		(Pneumatic Tires and Tubes Should be ordered from the Tire Manufacturer)				
49117 D	1	Front Wheel Oil Seal Wear Ring				
		(Not "B" or "BN")				2
54630 H	2	Front Wheel Inner Bearing Cup				
		(Timken No. 15250) (Not "B" or "BN")				
		(Optional with 352394 R1 and 353525 R1)				2
352394 R1	2	Front Wheel Inner Bearing Cup (Bower No.				
		BT-15250) (Not "B" or "BN")				
		(Optional with 54630 H and 353525 R1)				2
353525 R1	2	Front Wheel Inner Bearing Cup (Tyson No.				
		15250) (Not "B" or "BN")				
		(Optional with 54630 H and 352394 R1)				2
6787 DEX	3	Front Wheel, Complete (Standard)				
		("A" only)	3.00 D x 15	4.00 x 15		
				5.00 x 15		2
6787 DEX	3	Front Wheel, Complete ("B" and "BN")				
		(Double Front Wheel - Special)	3.00 D x 15	4.00 x 15		
				5.00 x 15		2
43440 D	4	Front Wheel Outer Bearing Cup				
		(Timken No. 09196) (Not "B" or "BN")				
		(Optional with 352395 R1 and 353526 R1)				2
352395 R1	4	Front Wheel Outer Bearing Cup (Bower No.				
		BT-09196) (Not "B" or "BN")				
		(Optional with 43440 D or 353526 R1)				2
353526 R1	4	Front Wheel Outer Bearing Cup (Tyson No.				
		09196) (Not "B" or "BN")				
		(Optional with 43440 D or 352395 R1)				2
49116 D	5	Front Wheel Hub Cap Gasket				
		(Not "B" or "BN")				2
49115 D	6	Front Wheel Hub Cap (Not "B" and "BN")				2
179814		Cap Screw, 5/16 x 5/8" N.C. Hex Head				6
103320		Lockwasher, 5/16"				6
31453 D	7	Front Wheel Rim (Standard)				
		("A" only)	3.00 D x 15	4.00 x 15		
				5.00 x 15	501 to 194244	2
351556 R92	7	Front Wheel Rim	3.00 D x 15	4.00 x 15		
				5.00 x 15	194245 Up	2
31453 D	7	Front Wheel Rim ("B" and "BN")				
		(Double Front Wheel - Special)	3.00 D x 15	4.00 x 15		
				5.00 x 15	501 to 194244	2

FRONT WHEELS—Continued

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
48976 DA	8	Front Wheel Rim Clamp ("A" Only)				6
29821 B		Machine Bolt, 1/2 x 2-1/2"				
		(Order 351555 R1 and 120371)				6
220068		Hex Nut, 1/2" N.C.				
		(Order 351555 R1 and 120371)				6
48976 DA	8	Front Wheel Rim Clamp ("B" and "BN")				
		(Double Front Wheel-Special)				6
29821 B		Machine Bolt, 1/2 x 2-1/2"				
		(Order 351555 R1 and 120371)				6
220068		Hex Nut, 1/2" N.C.				
		(Order 351555 R1 and 120371)				6
8734 DX	9	Front Wheel, Complete ("AV" only)				
		(Standard)	3.00 D x 19	4.00 x 19		2
57382 D	10	Front Wheel Rim with Clamps ("AV" only)				
		(Standard)	3.00 x 19	4.00 x 19		2
29821 B		Machine Bolt, 1/2 x 2-1/2" (Order				
		Cap Screw, 181707 and Nut, 120371)				6
220068		Hex Nut, 1/2" N.C.				6
103323		Lockwasher, 1/2"				6
181707		Cap Screw, 1/2 x 2-1/4" N.F.				
		Hex Head (Cadmium Plated)				6
120371		Hex Nut, 1/2" N.F. (Cadmium Plated)				6
23762 DX	11	Front Wheel Hub Shield with Lock				
		("B" and "BN")				2
23760 D	12	Front Wheel Felt Washer ("B" and "BN")				2
42183 D	13	Front Wheel Bearing Oil Seal				
		("B" and "BN")				2
8331 D	14	Front Wheel Hub ("B" and "BN")				2
179893		Cap Screw, 1/2 x 3" N.C. Hex Head				3
114774		Hex Nut, 1/2" N.C.				3
103323		Lockwasher, 1/2"				3
52981 D	15	Front Wheel Hub Gasket ("B" and "BN")				2
8333 D	16	Front Wheel (Non-Demountable)				
		("B" and "BN") (Standard)		6.00 x 12		1
23740 D	16A	Front Axle - Special ("B" and "BN")				
		(For Front Wheel, 40833 D)				1
103032		Hex Nut, 7/8" N.F.				1

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
		FRONT WHEELS—Continued				
54632 H	17	FRONT WHEEL INNER BEARING (CUP, 54630 H WITH CONE, 54631 H) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 352380 R91 AND 353509 R92)				2
352380 R91	17	FRONT WHEEL INNER BEARING (CONE, 352387 R91 AND CUP, 352394 R1) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 353509 R91 AND 54632 H)				2
353509 R92	17	FRONT WHEEL INNER BEARING (CONE, 353517 R92 AND CUP, 353525 R1) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 54632 H AND 352380 R91)				2
43441 D	18	FRONT WHEEL OUTER BEARING (CUP, 43440 D WITH CONE, 13823 V) ("B" AND "BN") (DOUBLE FRONT WHEEL-SPECIAL) (OPTIONAL WITH 352381 R91 AND 353510 R92)				2
352381 R91	18	FRONT WHEEL OUTER BEARING (CUP, 352395 R1 AND CONE, 352388 R91) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 43441 D AND 353510 R92)				2
353510 R92	18	FRONT WHEEL OUTER BEARING (CUP, 353526 R91 AND CONE, 353518 R92) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 43441 D AND 352381 R91)				2
43463 D	19	FRONT WHEEL OIL SEAL ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL)				2
54631 H	20	FRONT WHEEL INNER BEARING CONE (TIMKEN NO. 15118) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 352387 R91 AND 353517 R92)				2
352387 R91	20	FRONT WHEEL INNER BEARING CONE (BOWER NO. BT 15118) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 54631 H AND 353517 R92)				2
353517 R92	20	FRONT WHEEL INNER BEARING CONE (TYSON NO. 15118) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 54631 H AND 352387 R91)				2
49117 D	21	FRONT WHEEL OIL SEAL WEAR RING ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL)				2
54630 H	22	FRONT WHEEL INNER BEARING CUP (TIMKEN NO. 15250) ("B" AND "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 352394 R1 AND 353525 R1)				2
352394 R1	22	FRONT WHEEL INNER BEARING CUP (BOWER NO. BT-15250) ("B" OR "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 54630 H AND 353525 R1)				2
353525 R1	22	FRONT WHEEL INNER BEARING CUP (TYSON NO. 15250) ("B" OR "BN") (DOUBLE FRONT WHEEL - SPECIAL) (OPTIONAL WITH 54630 H AND 352394 R1)				2

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
		FRONT WHEELS—Continued				
8734 DX	23	Adjustable Front Wheel, Complete	3.00 D x 15	4.00 x 15		
		(Special) (Not "AV")		5.00 x 15	501 to 78999	2
9350 DX	23	Adjustable Front Wheel, Complete				
		(Special) (Not "AV")	3.00 D x 15	4.00 x 15	79000 Up	2
43440 D	24	Front Wheel Outer Bearing Cup (Timken No.				
		09196) ("B" and "BN") (Double Front Wheel				
		Special) (Optional with 352395 R1 and				
		353526 R1)				2
352395 R1	24	Front Wheel Outer Bearing Cup (Bower BT-				
		09196) ("B" and "BN") (Double Front Wheel				
		Special) (Optional with 43440 D and				
		353526 R1)				2
353526 R1	24	Front Wheel Outer Bearing Cup (Tyson No.				
		09196) ("B" and "BN") (Double Front Wheel				
		Special) (Optional with 43440 D and				
		352395 R1)				2
13823 V	25	Front Wheel Outer Bearing Cone (Timken No.				
		09074) ("B" and "BN") (Double Front Wheel -				
		Special) (Optional with 352388 R91 and				
		353516 R92)				2
352388 R91	25	Front Wheel Outer Bearing Cone (Bower No. BT				
		09074) ("B" and "BN") (Double Front Wheel -				
		Special) (Optional with 13823 V and				
		353516 R92)				2
353518 R92	25	Front Wheel Outer Bearing Cone (Tyson No.				
		09074) ("B" and "BN") (Double Front Wheel -				
		Special) (Optional with 13823 V and				
		352388 R91)				2
49116 D	26	Front Wheel Hub Cap Gasket ("B" and "BN")				
		(Double Front Wheel - Special)				2
49115 D	27	Front Wheel Hub Cap ("B" and "BN")				
		(Double Front Wheel - Special)				2
179814		Cap Screw, 5/16 x 5/8" N.C. Hex Head				6
103320		Lockwasher, 5/16"				6
57095 D	28	Adjustable Front Wheel Rim with Clamps				
		(Special) (Not "AV")	3.00 D x 15	4.00 x 15		2
350522 R1		Machine Bolt, 1/2 x 2-1/4" (Order				
		Cap Screw, 181707 and Nut, 120371)				6
220068		Hex Nut, 1/2" N.C.				6
103323		Lockwasher, 1/2"				6
181707		Cap Screw, 1/2 x 2-1/4" N.F. Hex Head				
		(Cadmium Plated)				6
120371		Hex Nut, 1/2" N.F. (Cadmium Plated)				6
57895 D	29	Front Wheel Fork - Special ("B" and "BN")				
		(For Front Wheel, 40833 D)				1
179849		Cap Screw, 3/8 x 2-1/2" N.C. Hex Head				2
13002 R1		Hex Nut, 3/8" N.C.				2
103028		Hex Nut, 1/2" N.F.				4
103321		Lockwasher, 3/8"				2
103323		Lockwasher, 1/2"				4

CHASSIS

FRONT WHEELS—Continued

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
5630 DX	30	Front Wheel, Male Half with Oil Seal,				
		42183 D (Non-Demountable) (Special)				
		("B" and "BN")		7.50 x 10		1
16154 R1		Cap Screw, 5/8 x 7" Hex Head				4
220080		Hex Nut, 5/8" N.C.				4
103325		Lockwasher, 5/8"				4
40833 D	31	Front Wheel, 2 Halves, 5630 DX and				
		5631 DX with Bolts (Non-Demountable)				
		("B" and "BN") (Special)		7.50 x 10		1
5631 DX	32	Front Wheel, Female Half with Oil Seal,				
		42183 D (Non-Demountable) (Special)				
		("B" and "BN")		7.50 x 10		1
55460 DC		Double Front Wheel Attachment - Special				
		("B" and "BN")				1
57097 DD		Adjustable Double Front Wheel Attachment-				
		Special (For "B" and "BN" Tractors				
		Equipped with Single Front Wheel)				1
57098 DB		Adjustable Front Wheel Attachment-				
		Special (For "B" and "BN" Tractors				
		Equipped with Double Front Wheel				
		Attachment) (Also for "A" Tractors				
		Having Adjustable Front Axle Attachment)				1
57894 D		Single Front Wheel Attachment-				
		Special ("B" and "BN")				1
58282 D		Single Front Wheel Attachment - Special				
		("B" and "BN") (For Tractors Equipped				
		with Double Front Wheels)				1
351555 R1		Front Wheel Rim Bolt (Will Work for				
		1/2 x 2-1/2" Machine Bolt)				6
120371		Hex Nut, 1/2" N.F.				6

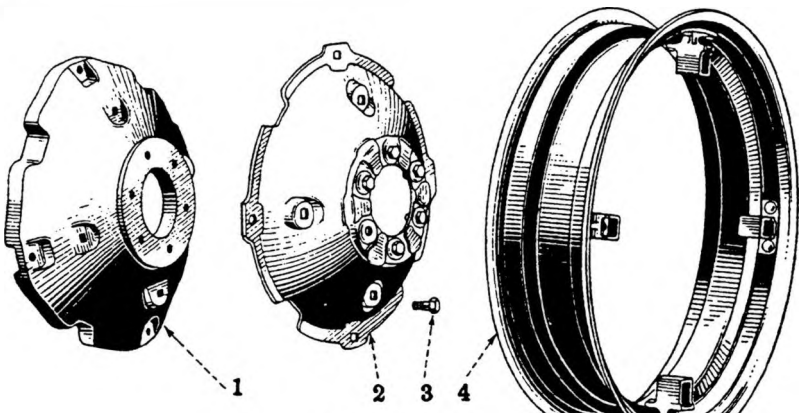

REAR WHEEL "A" ONLY

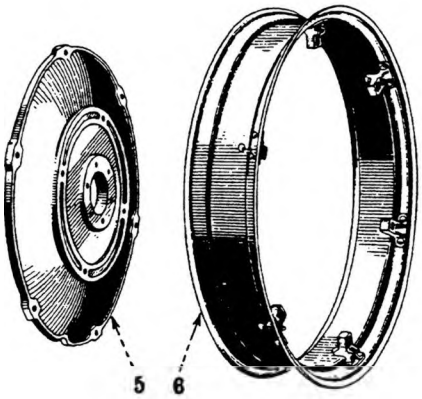

REAR WHEEL "AV" ONLY

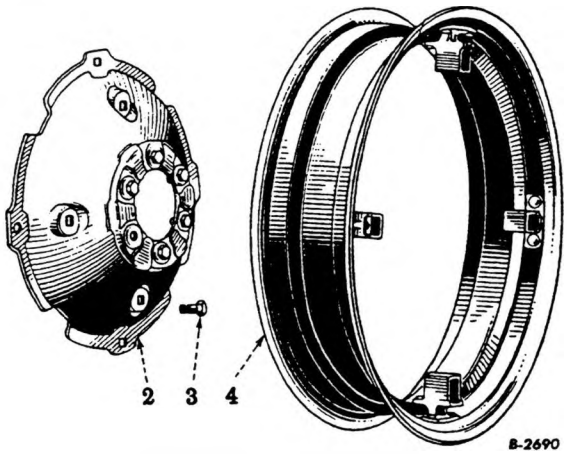

REAR WHEEL "B" AND "BN"

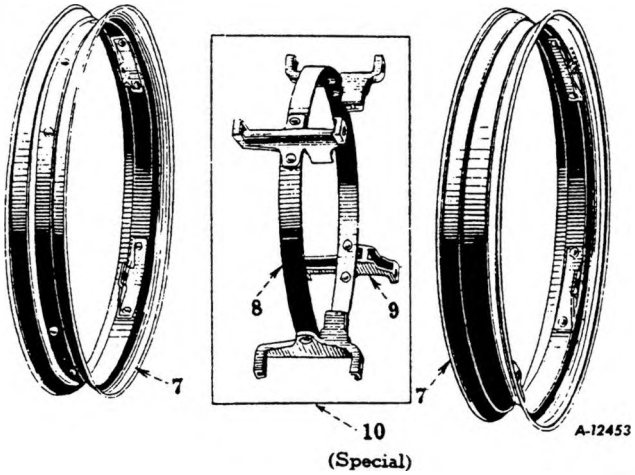

(Special)

DUAL REAR WHEELS—REAR WHEELS "A" "B" AND "BN"

CHASSIS

REAR WHEELS

(Pneumatic Tires and Tubes Should be ordered from the Tire Manufacturer)

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
8529 D	1	REAR WHEEL, R.H. (STANDARD)				
		(ORDER 8529 DAX)("A" ONLY)	W7-24		5564 TO 35598	1
181461		CAP SCREW, 9/16 x 2-1/2" N.F. HEX HEAD				6
103324		LOCKWASHER, 9/16"				6
8529 DA	1	REAR WHEEL, R.H. (STANDARD)("A" ONLY)	W7-24		35599 UP	1
181461		CAP SCREW, 9/16 x 2-1/2" N.F. HEX HEAD			5564 UP	6
103324		LOCKWASHER, 9/16"				6
8529 DA	1	HEAVY REAR WHEEL (SPECIAL) ("B" AND "BN")	W7-24		35599 UP	2
181461		CAP SCREW, 9/16 x 2-1/2" N.F. HEX HEAD				12
13400 R1		MACHINE BOLT, 5/8 x 2-3/4" (RIM TO WHEEL				8
220080		HEX. NUT, 5/8" N.C. (RIM TO WHEEL)				8
103324		LOCKWASHER, 9/16"				12
103325		LOCKWASHER, 5/8" (RIM TO WHEEL)				8
8529 DAX	1	REAR WHEEL, R.H., COMPLETE (STANDARD)				
		("A" ONLY) (WILL WORK FOR 8529 D)	W7-24		5564 TO 35598	1
8529 DAX	1	HEAVY REAR WHEEL, COMPLETE (SPECIAL)				
		("B" AND "BN")(WILL WORK FOR 8529 D)	W7-24		5564 TO 35598	2
52630 D	2	REAR WHEEL (DISC TYPE)(STANDARD)				
		("B" AND "BN")	W7-24			2
52630 D	2	REAR WHEEL, L.H.(DISC TYPE)(STANDARD)				
		("A" ONLY) RIGHT HAND	W7-24		501 TO 5563	1
51485 D	3	REAR WHEEL HUB BOLT ("A" ONLY)				(A) 6
51485 D	3	REAR WHEEL HUB BOLT ("B" AND "BN")				12
51280 DA	4	REAR WHEEL RIM WITH CLAMPS (STANDARD)				
		(NOT "AV")(WILL WORK FOR 52873 DA)	W7-24	8-24		2
350523 R1		MACHINE BOLT, 5/8 x 2-1/4" ("A" ONLY)			5564 UP	(X) 4
PO 16481		MACHINE BOLT, 5/8 x 2-3/4" ("A" ONLY)			5564 UP	4
PO 16481		MACHINE BOLT, 5/8 x 2-3/4"				
		("B" AND "BN")(HEAVY WHEEL - SPECIAL)				8
350523 R1		MACHINE BOLT, 5/8 x 2-1/4"("B" AND "BN"				8
220080		HEX NUT, 5/8" N.C.				8
103325		LOCKWASHER, 5/8"				8
103345		WASHER, 21/32 I.D. x 1-5/16" O.D. x				
		No. 13 GA.				8
51281 DA	4	REAR WHEEL RIM WITH CLAMPS (SPECIAL)				
		(NOT "AV") (OPTIONAL WITH 354873 RS2)	W8-24	9-24		2
354873 RS2	4	REAR WHEEL RIM WITH CLAMPS (SPECIAL)				
		(NOT "AV") (OPTIONAL WITH 51281 DA)	W8-24	9-24		2
350523 R1		MACHINE BOLT, 5/8 x 2-1/4"				8
PO 16481		MACHINE BOLT, 5/8 x 2-3/4"				
		(HEAVY WHEELS ONLY)				x
220080		HEX NUT, 5/8" N.C.				8
103325		LOCKWASHER, 5/8"				8
103345		WASHER, 21/32 I.D. x 1-5/16" O.D. x				
		No. 13 GA.				8

(X) - 8 USED 501 TO 5563

(A) - 12 USED - 501 TO 5563

X - AS REQUIRED

X - AS REQUIRED

CHASSIS

REAR WHEELS—Continued

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
52873 DA	4	Rear Wheel Rim with Clamps (Special)				
		("A", "B" and "BN") (Order 51280 DA)	5.50R-24	7.00-24		2
350523 R1		Machine Bolt, 5/8 x 2-1/4"				8
PO 16481		Machine Bolt, 5/8 x 2-3/4"				
		(Heavy Wheels only)				X
220080		Hex Nut, 5/8" N.C.				8
103325		Lockwasher, 5/8"				8
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				8
56205 DA	4	Rear Wheel Rim with Clamps (Special)				
		(Not "AV") (Optional with 354274 R92)	W9-24	10-24		2
354874 R92	4	Rear Wheel Rim with Clamps (Special)				
		(Not "AV") (Optional with 56205 DA)	W9-24	10-24		2
350523 R1		Machine Bolt, 5/8 x 2-1/4"				8
PO 16481		Machine Bolt, 5/8 x 2-3/4"				8
		(Heavy Wheels only)				X
220080		Hex Nut, 5/8" N.C.				8
103325		Lockwasher, 5/8"				8
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				8
56206 DA	4	Rear Wheel Rim with Clamps (Special)				
		("A", "B" and "BN")	W10-24	11-24		2
350523 R1		Machine Bolt, 5/8 x 2-1/4"				8
PO 16481		Machine Bolt, 5/8 x 2-3/4"				
		(Heavy Wheels only)				X
220080		Hex Nut, 5/8" N.C.				8
103325		Lockwasher, 5/8"				8
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				8
8793 D	5	Rear Wheel (Standard) ("AV" only)	W7-36			2
181461		Cap Screw, 9/16 x 2-1/2" N.F. Hex Head				12
103324		Lockwasher, 9/16"				12
57885 DA	6	Rear Wheel Rim with Clamps (Standard)				
		("AV" only)	W7-36	8-36		2
PO 16480		Machine Bolt, 5/8 x 2-1/2"				12
220080		Hex Nut, 5/8" N.C.				12
103325		Lockwasher, 5/8"				12
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				12
64983 D	6	Rear Wheel Rim with Clamps (Special)				
		("AV" only)	W8-36	9-36		2
PO 16480		Machine Bolt, 5/8 x 2-1/2"				12
220080		Hex Nut, 5/8" N.C.				12
103325		Lockwasher, 5/8"				12
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				12

X - As Required

CHASSIS

REAR WHEELS —Continued

PART NUMBER	REF. NO.	DESCRIPTION	RIM SIZE	TIRE SIZE	SERIAL NUMBER	NO. REQ'D
58539 DA	7	Dual Rear Wheel Rim with Clamps (Special				
		("A", "B" and "BN")	W3-30	4-30		4
350596 R1		Machine Bolt, 5/8 x 1-3/4"				16
220080		Hex Nut, 5/8" N.C.				16
103325		Lockwasher, 5/8"				16
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				16
58590 DA	7	Dual Rear Wheel Rim with Clamps (Special)				
		("A", "B" and "BN")	W4-30	5-30		4
350596 R1		Machine Bolt, 5/8 x 1-3/4"				16
220080		Hex Nut, 5/8" N.C.				16
103325		Lockwasher, 5/8"				16
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				16
58592 D	8	Dual Rear Wheel Rim Bracket Support Band				
		(Special)("A", "B" and "BN")				2
58591 DA	9	Dual Rear Wheel Rim Bracket (Special)				
		("A", "B" and "BN")				8
350597 R1		Machine Bolt, 5/8" x 2"				8
PO 16480		Machine Bolt, 5/8" x 2-1/2"				
		(Heavy Wheels only)				X
220080		Hex Nut, 5/8" N.C.				8
103325		Lockwasher, 5/8"				8
103345		Washer, 21/32" I.D. x 1-5/16" O.D. x				
		No. 13 Ga.				8
104285		Rivet, 3/8 x 1-1/2" (Flat Head)				16
58593 DA	10	Dual Rear Wheel Rim Bracket,				
		58591 DA with Support Band, 58592 D and				
		Rivets (Special)("A", "B" and "BN")				2
52889 D		Rear Wheel Rim Attachment - Special				
		(Not "AV")	W8-24	9.00-24		1
				9-24		
54141 D		Rear Wheel, R.H. Field Change Package				
		(Wheel R.H., 8529 DA and Rear Axle Shaft				
		54126 D)("A" only)	W7-24		501 to 5563	1
56106 DA		Heavy Rear Wheel Attachment - Special				
		("B" and "BN")	W7-24			1
56203 D		Rear Wheel Rim Attachment - Special				
		(Not "AV")	W9-24	10-24		1
56204 D		Rear Wheel Rim Attachment - Special				
		("A", "B" and "BN")	W10-24	11-24		1
58587 D		Dual Rear Wheel Rim Attachment -				
		Special ("A", "B" and "BN")	W3-30	4-30		1
58588 D		Dual Rear Wheel Rim Attachment -				
		Special ("A", "B" and "BN")	W4-30	5-30		1
64982 D		Rear Wheel Rim Attachment (Special)				
		("AV" only)	W8-36	9-36		1

X - As Required

CHASSIS

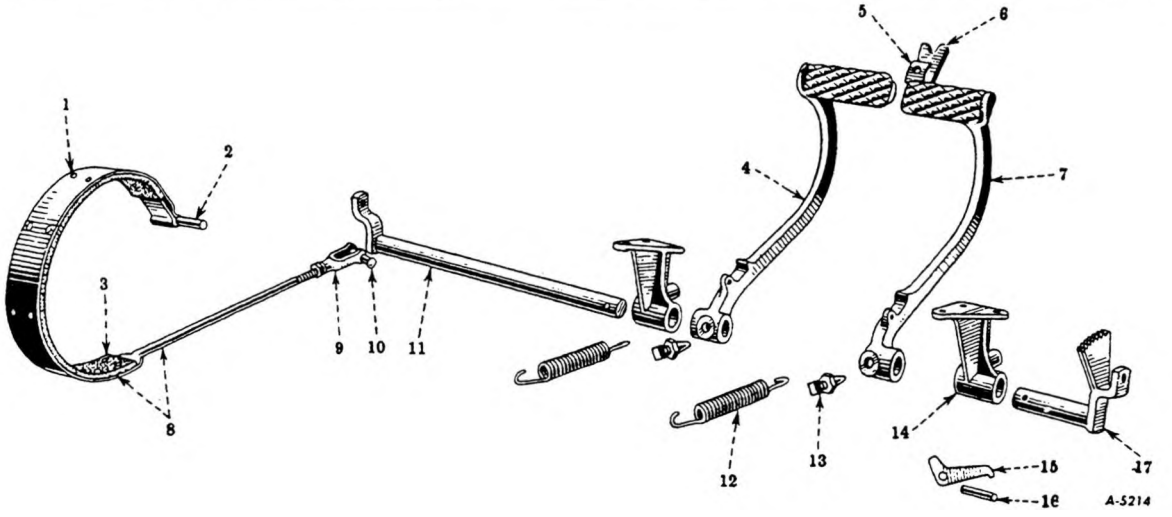

FOOT BRAKES

355775 R1	1	Brake Band Lining Rivet (Will Work for 57323 D)	24
43539 DA	2	Brake Band Anchor Pin	2
47851 DA	3	Brake Band Lining (Woven) (Order 352606 R93)	2
352606 R93	3	Brake Band Lining (Woven) with 12 Rivets, 355775 R1 (Optional with 68927 DA)	
		(Will Work for 47851 DA)	2
68927 DA	3	Brake Band Lining (Moulded) with 12 Rivets, 355775 R1	
		(Set of 2) (Optional with 352606 R93)	1
6569 D	4	Brake Pedal, L.H.	1
51293 D	5	Brake Pedal Lock Plate Tension Spring	1
43533 DA	6	Brake Pedal Lock Plate	1
6570 DX	7	Brake Pedal, R.H. with Lock Plate, 43533 DA and Spring, 51293 D	1
104086		Rivet, 1/4 x 1-1/8" Round Head	1
51582 DBX	8	Brake Band, Complete (Woven) (Optional with 68925 DXA)	2
103026		Hex Nut, 3/8" N.F.	2
68925 DX[A]	8	Brake Band, Complete (Moulded) (Optional with 51582 DBX)	2
104038	9	Brake Rod Adjustable Yoke (Will Work for 10764 V) (Same as 250259 R1)	2
103496	10	Brake Rod Adjustable Yoke Pin (Same as 10765 V)	2
103373		Cotter Pin, 3/32 x 3/4"	2
51425 DX	11	Brake Shaft, L.H. with Lever	1
Q 3479		Steel Washer, 29/32" I.D. x 1-3/8" O.D. x No. 14 Ga.	2
103387		Cotter Pin, 1/8 x 1-1/2"	2
47845 DA	12	Brake Pedal Return Spring	2
43528 D	13	Brake Pedal Locking Screw	2
218440		Hex Jam Nut, 1/2" N.C.	2
8116 DC	14	Brake Shaft Bracket	2 ⊙
181339		Cap Screw, 5/16 x 1" N.F. Hex Head	5
101341		Cap Screw, 5/16 x 1-1/4" N.F. Hex Head	1
103025		Hex Nut, 5/16" N.F.	6
103320		Lockwasher, 5/16"	6
127800		Straight Lubricator Fitting, 1/8"	2
47859 DA	15	Brake Ratchet Pawl	1
49005 D	16	Brake Ratchet Pawl Pivot Pin	1
103373		Cotter Pin, 3/32 x 3/4"	1
51507 D	17	Brake Shaft, R.H. with Lever and Pedal Ratchet (Not "B")	1
52961 D	17	Brake Shaft, R.H. with Lever and Pedal Ratchet ("B" only)	1

"B" only-3 Required ⊙

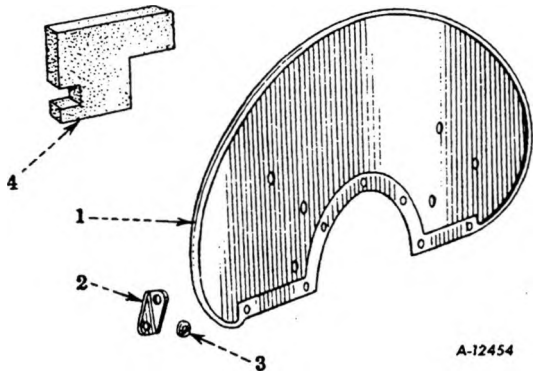

FENDER

51179 DX	1	Rear Fender with Reinforcement Strip	2
179838		Cap Screw, 3/8 x 7/8" N.C. Hex Head (not "B" or "BN")	6
181360		Cap Screw, 3/8 x 3/4" N.F. Hex Head	2
181364		Cap Screw, 3/8 x 1" N.F. Hex Head	11
181370		Cap Screw, 3/8 x 1-1/4" N.F. Hex Head	6
181425		Cap Screw, 1/2 x 3/4" N.F. Hex Head (not "B")	1
103026		Hex Nut, 3/8" N.F.	19
114496		Hex Jam Nut, 1/2" N.F. (not "B")	1
103321		Lockwasher, 3/8"	25
103323		Lockwasher, 1/2"	1
13002 R1		Hex Nut, 3/8" N.C. (not "B" or "BN")	1
43514 D	2	Left Hand Fender Support Clip (not "B" or "BN")	1
24523 D	3	Right Hand Fender Spacer (Not "B") (Will Work for 22828 D)	1
55788 DA	4	Fender to Transmission Case Felt Pad (not "B" or "BN") (Used on Left Fender only)	1

CHASSIS

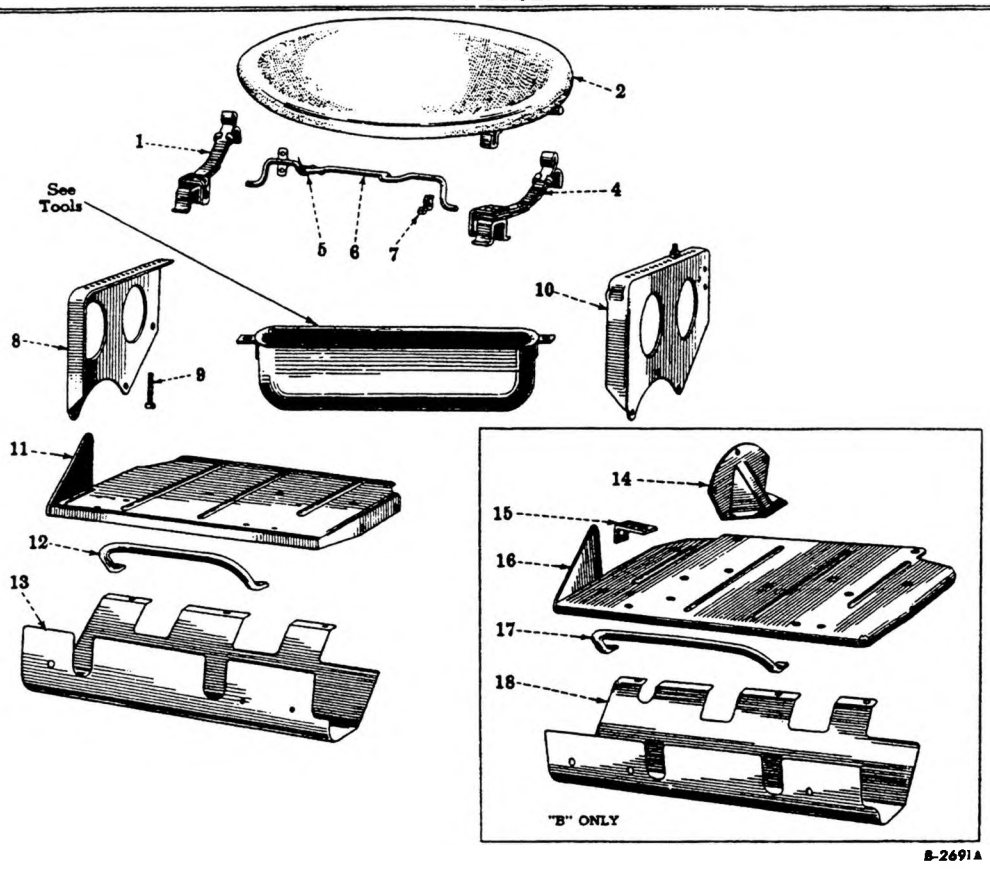

SEAT AND PLATFORM

50587 D	1	SEAT SPRING, R.H. (2 LEAVES)			
		(ORDER 50587 DB, R.H. AND 50586 DB, L.H.)	501 TO 38162	1	
50587 DB	1	SEAT SPRING, COMPLETE, R.H. (3 LEAVES)	38163 UP	1	
181361		CAP SCREW, 3/8 x 7/8" N.F. HEX. HEAD		4	
103026		HEX NUT, 3/8" N.F.		4	
103321		LOCKWASHER, 3/8"		4	
104102		RIVET, 5/16 x 1-3/8" ROUND HEAD		2	
50570 DC	2	SEAT		1	
103385		COTTER PIN, 1/8 x 1"		2	
350515 R1		WASHER, 21/32 I.D. x 1" O.D. x NO. 16 GAUGE		2	
50586 D	4	SEAT SPRING, L.H. (2 LEAVES)			
		(ORDER 50586 DB, L.H. AND 50587 DB, R.H.)	501 TO 38162	1	
50586 DB	4	SEAT SPRING, COMPLETE, L.H. (3 LEAVES)	38163 UP	1	
181361		CAP SCREW, 3/8 x 7/8" N.F. HEX. HEAD		4	
103026		HEX NUT, 3/8" N.F.		4	
103321		LOCKWASHER, 3/8"		4	
104102		RIVET, 5/16 x 1-3/8" ROUND HEAD		2	
50582 D	5	SEAT LOCK ROD SPRING		1	
69752 DA	6	SEAT LOCK ROD (WILL WORK FOR 50580 D)		1	
50581 D	7	SEAT LOCK ROD CLIP		2	
103025		HEX NUT, 5/16" N.F.		4	
103320		LOCKWASHER, 5/16"		4	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		SEAT AND PLATFORM —Continued		
51182 D	8	SEAT SUPPORT BRACKET, R.H.		1
50583 D	9	SEAT SPRING ADJUSTING BOLT		2
103026		HEX NUT, 3/8" N.F.		4
350007 R1	10	SEAT SUPPORT BRACKET L.H. (WILL WORK FOR 51181 D)		1
179839		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		3
103321		LOCKWASHER, 3/8"		3
48699 DX	11	PLATFORM WITH BRACE AND BRACKET ("A" AND "AV")		1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		4
181360		CAP SCREW, 3/8 x 3/4" N.F. HEX HEAD		1
103026		HEX. NUT, 3/8" N.F.		1
103321		LOCKWASHER, 3/8"		5
58845 DX	11	PLATFORM WITH BRACE AND BRACKET ("BN" ONLY)		1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		4
103321		LOCKWASHER, 3/8"		4
51261 D	12	FOOT REST (NOT "B")		1
181336		CAP SCREW, 5/16 x 3/4" N.F. HEX HEAD		1
103025		HEX. NUT, 5/16" N.F.		1
103320		LOCKWASHER, 5/16"		1
48697 DB	13	PEDAL GUARD (NOT "B")		1
179812		CAP SCREW, 5/16 x 1/2" N.C. HEX HEAD		2
12282 R1		OVENHEAD BOLT, 5/16 x 1/2" N.C.		3
13001 R1		HEX NUT, 5/16" N.C.		3
103320		LOCKWASHER, 5/16"		5
49369 D	14	SEAT SUPPORT BRACKET, R.H. BASE ("B" ONLY)		1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		6
179839		CAP SCREW, 3/8 x 1" N.C. HEX HEAD		1
13002 R1		HEX NUT, 3/8" N.C.		3
103321		LOCKWASHER, 3/8"		7
55417 D	15	PLATFORM FASTENING CLIP ("B" ONLY)	6773 UP	1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		1
13002 R1		HEX NUT, 3/8" N.C.		1
103321		LOCKWASHER, 3/8"		1
49370 DAX	16	PLATFORM WITH BRACE AND BRACKET WITH CLIP, 55417 D ("B" ONLY)		
		(WILL WORK FOR 49370 DX)		1
179837		CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD		3
181360		CAP SCREW, 3/8 x 3/4" N.F. HEX HEAD		1
103026		HEX NUT, 3/8" N.F.		1
103321		LOCKWASHER, 3/8"		4
52965 D	17	FOOT REST ("B" ONLY)		1
49371 DA	18	PEDAL GUARD ("B" ONLY)		1
179812		CAP SCREW, 5/16 x 1/2" N.C. HEX HEAD		3
12282 R1		OVENHEAD BOLT, 5/16 x 1/2" N.C.		4
13001 R1		HEX NUT, 5/16" N.C.		4
103320		LOCKWASHER, 5/16"		7

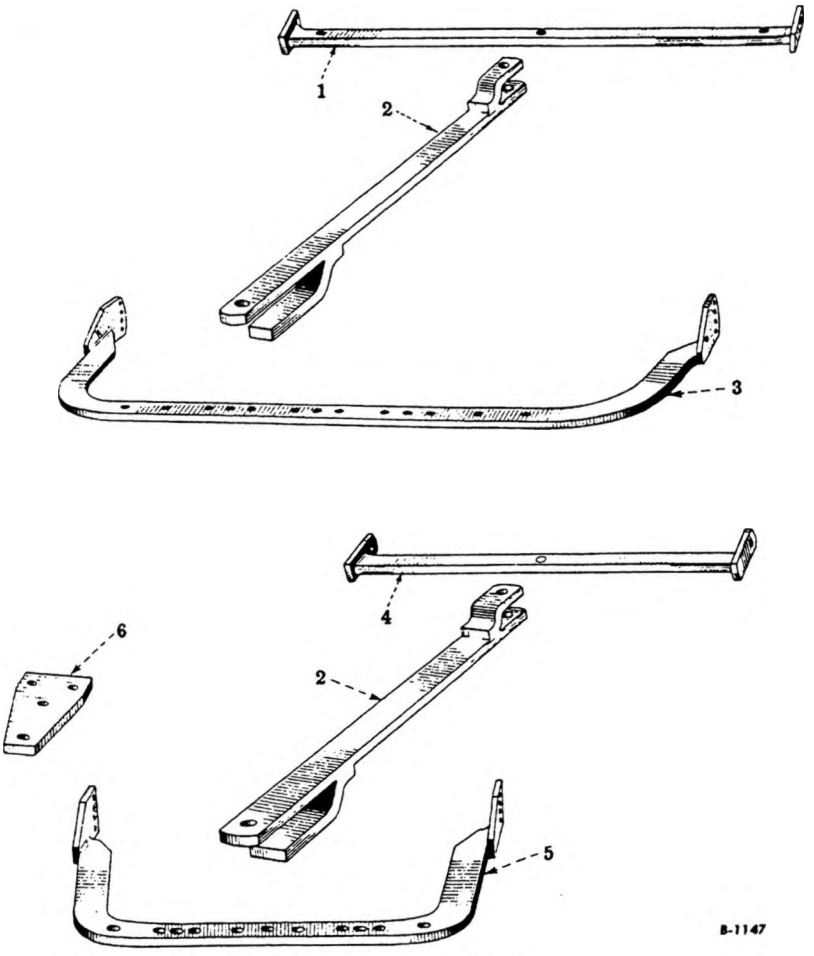

DRAWBAR "BN" ONLY

DRAWBARS—FOR "B" AND "BN" TRACTORS

52989 DA		SWINGING DRAWBAR ATTACHMENT (SPECIAL)("B" ONLY)	1	
58849 D		SWINGING DRAWBAR ATTACHMENT (SPECIAL)("BN" ONLY)	1	
52992 DX	1	SWINGING DRAWBAR ANCHOR BAR WITH PLATES (SPECIAL)("B" ONLY) 501 TO 11487	1	
181488		CAP SCREW, 5/8 x 3" N.F. HEX HEAD	2	
103030		HEX NUT, 5/8" N.F.	2	
103325		LOCKWASHER, 5/8"	2	
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 12 GA.	X	
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 18 GA.	X	
55245 DX	1	SWINGING DRAWBAR ANCHOR BAR WITH PLATES (SPECIAL)("B" ONLY) 11488 UP	1	
181488		CAP SCREW, 5/8" x 3" N.F. HEX HEAD	2	
103030		HEX NUT, 5/8" N.F.	2	
103325		LOCKWASHER, 5/8"	2	
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 12 GA.	X	
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 18 GA.	X	
			X - AS REQUIRED	

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		DRAWBARS FOR "B" AND "BN" TRACTORS—Continued		
52990 DX	2	SWINGING DRAWBAR WITH CLIPS (SPECIAL)	501 TO 11487	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		1
13296 R1		MACHINE BOLT, 3/4 x 1-1/2"		2
103030		HEX. NUT, 5/8" N.F.		1
114821		HEX. NUT, 3/4" N.C.		2
103325		LOCKWASHER, 5/8"		1
103326		LOCKWASHER, 3/4"		2
55242 DX	2	SWINGING DRAWBAR WITH CLIPS (SPECIAL)	11488 UP	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		1
13296 R1		MACHINE BOLT, 3/4 x 1-1/2"		2
103030		HEX. NUT, 5/8" N.F.		1
114821		HEX. NUT, 3/4" N.C.		2
103325		LOCKWASHER, 5/8"		1
103326		LOCKWASHER, 3/4"		2
49372 DBXA	3	DRAWBAR, COMPLETE, L.H. AND R.H. (STANDARD)("B" ONLY)		1
179885		CAP SCREW, 1/2 x 1-1/2" N. C. HEX. HEAD		2
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103323		LOCKWASHER, 1/2"		2
103325		LOCKWASHER, 5/8"		2
58847 DX	4	SWINGING DRAWBAR ANCHOR BAR WITH PLATES (SPECIAL)("BN" ONLY)		1
181488		CAP SCREW, 5/8" x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103325		LOCKWASHER, 5/8"		2
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 12 GA.		X
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 18 GA.		X
58846 DXA	5	DRAWBAR, COMPLETE, L.H. AND R.H. (STANDARD)("BN" ONLY)		1
179885		CAP SCREW, 1/2 x 1-1/2" N.C. HEX. HEAD		2
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103323		LOCKWASHER, 1/2"		2
103325		LOCKWASHER, 5/8"		2
66185 D	6	DRAWBAR EXTENSION		1
179954		CAP SCREW, 3/4 x 2-1/2" N.C. HEX HEAD		2
114821		HEX NUT, 3/4" N.C.		2
103326		LOCKWASHER, 3/4"		2

X - AS REQUIRED

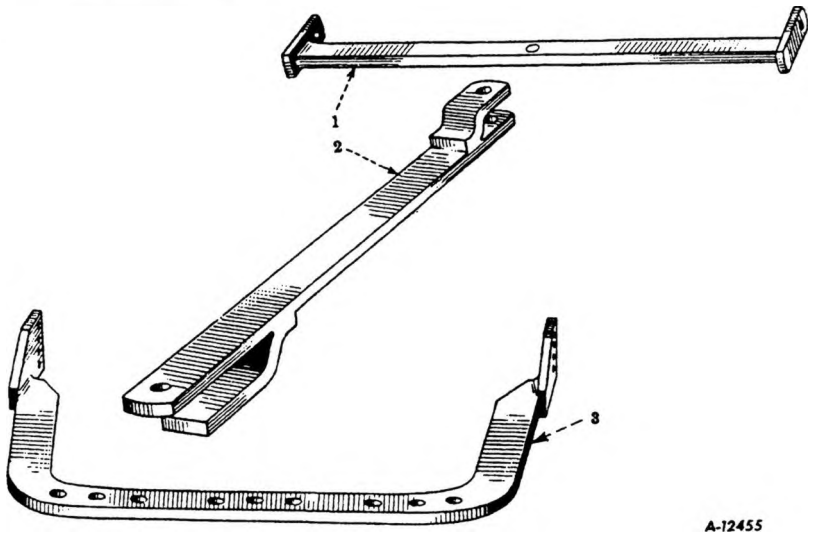

DRAWBAR "A" ONLY

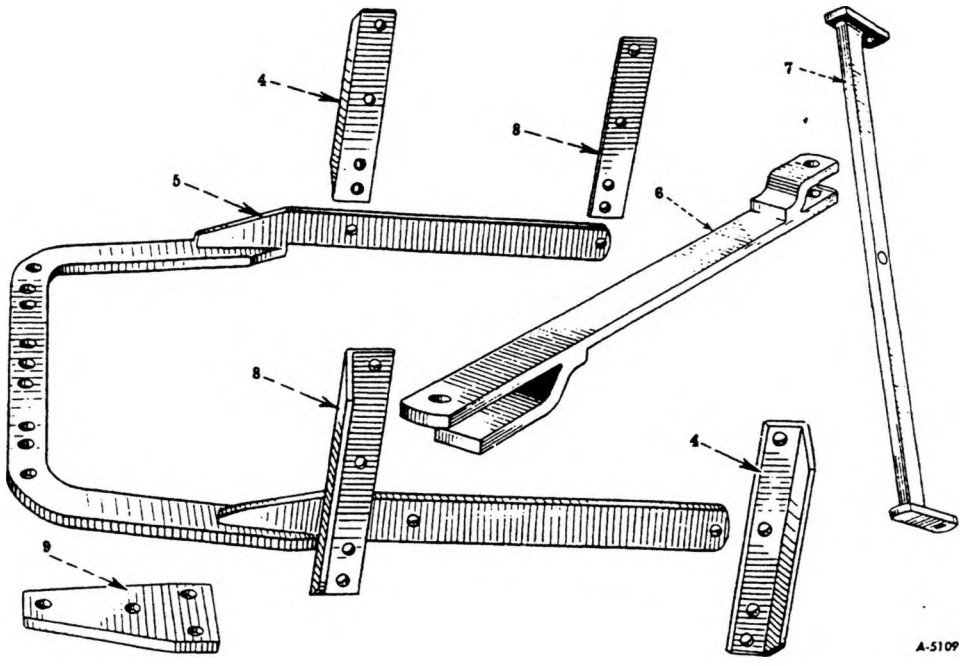

DRAWBAR "AV" ONLY

CHASSIS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		DRAWBARS—FOR "A", AND "AV" TRACTORS		
43919 DA		SWINGING DRAWBAR ATTACHMENT (SPECIAL) ("A" ONLY)		1
		(MACHINE ATTACHMENT)		
57892 D		SWINGING DRAWBAR ATTACHMENT (SPECIAL) ("AV" ONLY)		1
		(MACHINE ATTACHMENT)		
43922 DAX	1	SWINGING DRAWBAR ANCHOR BAR WITH CLIP AND PLATE (SPECIAL)		
		("A" ONLY)	501 TO 13393	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103325		LOCKWASHER, 5/8"		2
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 12 GAUGE		X
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 18 GAUGE		X
55246 DX	1	SWINGING DRAWBAR ANCHOR BAR WITH PLATES (SPECIAL)		
		("A" ONLY)	13394 UP	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103325		LOCKWASHER, 5/8"		2
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 12 GAUGE		X
Q 1538		WASHER, 21/32 I.D. x 1-1/4" O.D. x No. 18 GAUGE		X
55242 DX	2	SWINGING DRAWBAR WITH CLIPS (SPECIAL) (NOT "AV")	13394 UP	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		1
13296 R1		MACHINE BOLT, 3/4 x 1-1/2"		2
103030		HEX NUT, 5/8" N.F.		1
114821		HEX. NUT, 3/4" N.C.		2
103325		LOCKWASHER, 5/8"		1
103326		LOCKWASHER, 3/4"		2
43920 DAX	2	SWINGING DRAWBAR WITH CLIP (SPECIAL) ("A" ONLY)	501 TO 13393	1
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		1
13296 R1		MACHINE BOLT, 3/4 x 1-1/2"		2
103030		HEX. NUT, 5/8" N.F.		1
114821		HEX. NUT, 3/4" N.C.		2
103325		LOCKWASHER, 5/8"		1
103326		LOCKWASHER, 3/4"		2
43525 DAXA	3	DRAWBAR, COMPLETE, L.H. AND R.H. (STANDARD) ("A" ONLY)		1
179885		CAP SCREW, 1/2 x 1-1/2" N.C. HEX. HEAD		2
181488		CAP SCREW, 5/8 x 3" N.F. HEX. HEAD		2
103030		HEX. NUT, 5/8" N.F.		2
103323		LOCKWASHER, 1/2"		2
103325		LOCKWASHER, 5/8"		2

X - AS REQUIRED

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		DRAWBARS—FOR "A" AND "AV" TRACTORS—Continued			
60423 D	4	Drawbar Bracket (Standard) ("AV" only)		2	
181482		Cap Screw, 5/8 x 1-3/4" N.F. Hex. Head		2	
181487		Cap Screw, 5/8 x 2-3/4" N.F. Hex. Head		4	
103030		Hex. Nut, 5/8" N.F.		6	
103325		Lockwasher, 5/8"		6	
57877 D	5	Drawbar with Extension, L.H. and R.H. (Standard) ("AV" only)		1	
57890 DX	6	Swinging Drawbar with Clips ("AV" only) (Special)		1	
181488		Cap Screw, 5/8 x 3" N.F. Hex. Head		1	
13296 R1		Machine Bolt, 3/4" x 1-1/2"		2	
103030		Hex. Nut, 5/8" N.F.		1	
114821		Hex. Nut, 3/4" N.C.		2	
103325		Lockwasher, 5/8"		1	
103326		Lockwasher, 3/4"		2	
57891 DX	7	Swinging Drawbar Anchor Bar with Plates (Special) ("AV" only)		1	
181486		Cap Screw, 5/8 x 2-1/2" N.F. Hex. Head		2	
103030		Hex. Nut, 5/8" N.F.		2	
103325		Lockwasher, 5/8"		2	
60424 D	8	Drawbar Bracket (Standard) ("AV" only)		2	
181482		Cap Screw, 5/8 x 1-3/4" N.F. Hex. Head		2	
181487		Cap Screw, 5/8 x 2-3/4" N.F. Hex. Head		4	
103030		Hex. Nut, 5/8" N.F.		6	
103325		Lockwasher, 5/8"		6	
66185 D	9	Drawbar Extension		1	
179954		Cap Screw, 3/4 x 2-1/2 N.C. Hex Head		2	
114821		Hex Nut, 3/4" N.C.		2	
103326		Lockwasher, 3/4"		2	

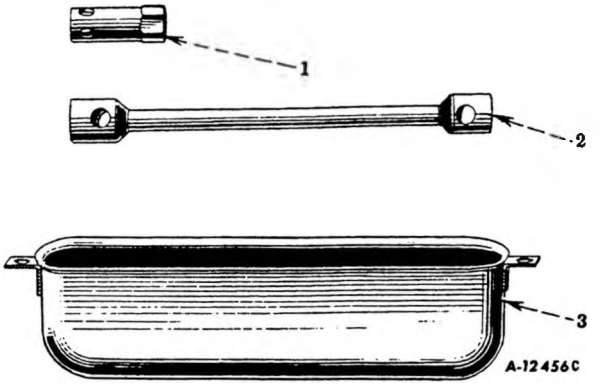

TOOLS AND TOOL BOX

46190 DC	1	Spark Plug Wrench	1	
51298 D	2	Double End Socket Wrench	1	
43527 DAX	3	Tool Box	1	
179837		Cap Screw, 3/8" N.C. x 3/4"	2	
13002 R1		Hex Nut, 3/8" N.C.	2	
103321		Lockwasher, 3/8"	2	

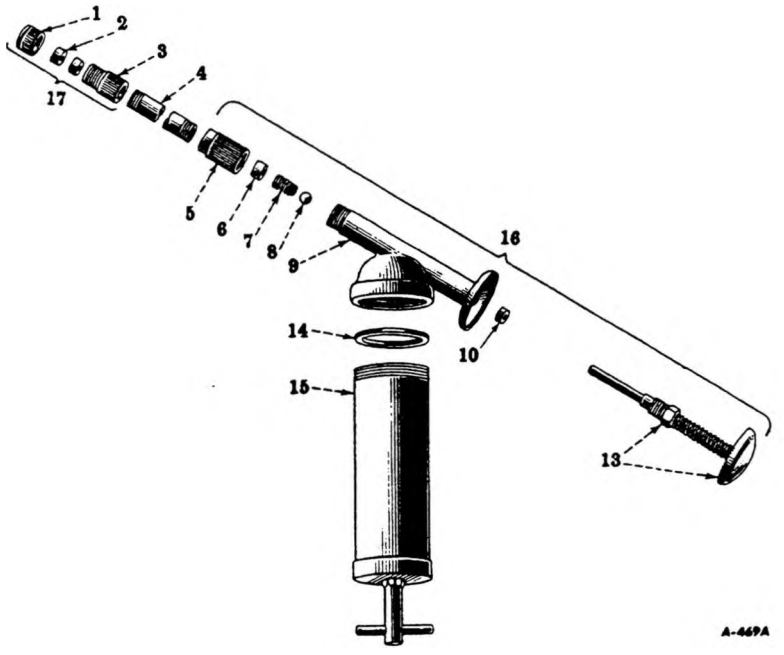

HAND LUBRICATOR (Lincoln Engineering Company)

Q 3803		5956	LUBRICATOR (3 OUNCE CAPACITY) (ORDER QA 3803)	1	
39653 D	1	10-733	CAP	1	
39656 DX	2	34-050	SET OF 2 WASHERS	1	
39652 D	3	10-539	NOZZLE BODY	1	
	4	67-15[illegible]	FOLLOWS REFERENCE NO. 9		
40555 DA	5	A-11541	ADAPTER	1	
40546 D	6	34-019	ADAPTER PACKING	1	
40553 D	7	56-022	SPRING	1	
39659 D	8	66-011	CHECK BALL	1	
56173 D	9	41-121	BODY CASTING	1	
		67-158	PIPE, 1/8 x 3" (STANDARD)	1	
39665 D	10	34-034	PLUNGER PACKING	1	
56164 D	13	89-961	PLUNGER	1	
40542 D	14	32-032	GASKET	1	
52034 DA	15	81097	CONTAINER	1	
40541 DA	16	89-995	HEAD	1	
39800 D	17	5804	NOZZLE WITH CAP AND WASHERS	1	

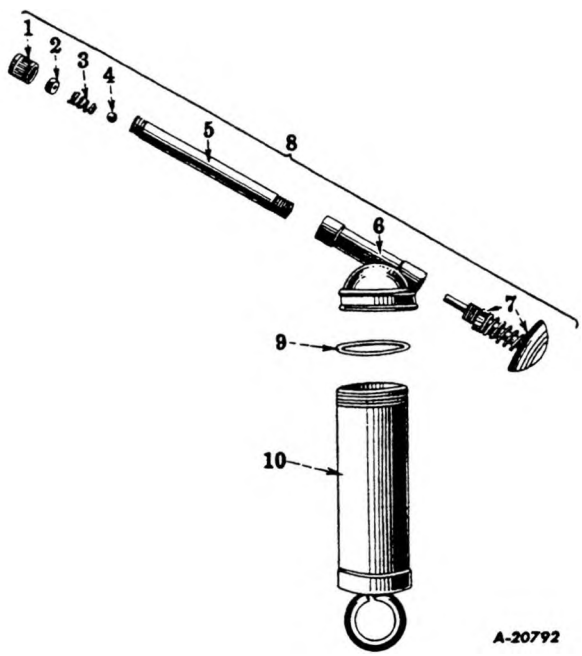

HAND LUBRICATOR (Lincoln Engineering Company)

QA 3803		5948	LUBRICATOR (3 OUNCE CAPACITY)	1	
353867 R1	1	12152	NOZZLE CAP	1	
39656 D	2	34050-1	NOZZLE PACKING	1	
353863 R1	3	56041	CHECK BALL SPRING	1	
39659 D	4	66011	CHECK BALL, 7/32"	1	
353864 R1	5	12154	NOZZLE EXTENSION	1	
353862 R1	6	41168	HEAD	1	
353861 R91	7	90773	PLUNGER	1	
353858 R91	8	89951	HEAD, COMPLETE	1	
353855 R1	9	33063	HEAD GASKET	1	
52 034 DA	10	81097	CONTAINER TUBE	1	

PACKAGE ASSORTED GASKETS

PART NUMBER	DESCRIPTION	NUMBER REQUIRED
53628 DA	ENGINE GASKET PACKAGE	
13728 D	OIL FILTER CASE GASKET	1
24425 D	CRANKCASE REAR OIL SEAL (FELT)	2
24520 D	CARBURETOR GASKET	1
43294 D	FAN BRACKET GASKET	1
43353 DD	CYLINDER HEAD GASKET	1
43378 DB	VALVE LEVER HOUSING GASKET	1
43413 D	OIL PUMP BODY COVER GASKET	2
43445 D	OIL SEAL RETAINER PLATE FELT	4
43446 D	OIL SEAL RETAINER PLATE GASKET	4
43447 D	CRANKCASE REAR OIL SEAL RETAINER GASKET, CENTER	2
43448 D	CRANKCASE REAR OIL SEAL RETAINER GASKET	1
43458 D	CRANKCASE PAN GASKET	1
43482 D	GOVERNOR ROCKSHAFT SEAL (FELT)	1
45875 D	GOVERNOR HOUSING GASKET	1
46168 DB	MAGNETO FLANGE GASKET	1
46179 D	CRANKCASE FRONT COVER GASKET	1
46871 D	WATER INLET ELBOW GASKET	1
46949 D	GOVERNOR SPEED CHANGE LEVER SHAFT SEAL	1
352014 R1	INTAKE AND EXHAUST MANIFOLD GASKET	2
53617 D	CHASSIS GASKET PACKAGE ("A" AND "AV")	
23977 DA	FUEL TANK FILLER CAP GASKET	1
43245 D	REAR AXLE HOUSING PAN GASKET	2
43984 D	RADIATOR CAP GASKET	1
46503 D	TRANSMISSION SPLINE SHAFT BEARING RETAINER GASKET	1
47279 DA	TRANSMISSION CASE COVER GASKET	1
47283 D	COUNTERSHAFT BEARING CAGE GASKET	1
47675 D	STEERING GEAR HOUSING GASKET	1
47954 D	REAR AXLE HOUSING BEARING CAP GASKET	2
48009 D	REAR AXLE BEARING RETAINER GASKET	2
48009 D	DIFFERENTIAL SHAFT BEARING COVER GASKET	2
49116 D	FRONT WHEEL HUB CAP GASKET	2
[illegible] D	TRANSMISSION CASE REAR COVER PLATE GASKET	1
53618 D	CHASSIS GASKET PACKAGE ("B" AND "BN")	
23977 DA	FUEL TANK FILLER CAP GASKET	1
43245 D	REAR AXLE HOUSING PAN GASKET	2
43984 D	RADIATOR CAP GASKET	1
46503 D	TRANSMISSION SPLINE SHAFT BEARING RETAINER GASKET	1
47279 DA	TRANSMISSION CASE COVER GASKET	1
47283 D	COUNTERSHAFT BEARING CAGE GASKET	1
47954 D	REAR AXLE HOUSING BEARING CAP GASKET	2
48009 D	REAR AXLE BEARING RETAINER GASKET	2
48009 D	DIFFERENTIAL SHAFT BEARING COVER GASKET	2
52951 D	FRONT WHEEL FORK LOWER BEARING CAGE GASKET	1
52952 D	FRONT WHEEL FORK LOWER BEARING CAGE COVER GASKET	1
52984 D	FRONT WHEEL HUB GASKET	2
60589 D	TRANSMISSION CASE REAR COVER PLATE GASKET	1

PACKAGE ASSORTED DECALS

PART NUMBER	DESCRIPTION	NUMBER REQUIRED
353149 R93	Decal Package ("A")	
1000658 R2	"A" Symbol	2
1000689 R3	Cooling System Drain	1
1000690 R3	"Made in U.S.A."	1
1000693 R3	"I.H.C. of Canada, Ltd."	1
1000704 R4	Brake Warning	1
1000798 R1	Lighting Switch Transfer	1
1000919 R3	Patent Marking	1
1000987 R2	Cylinder Head Breather Instructions	1
1001012 R3	Oil Filter Instructions	1
1001013 R2	Oil Filter Instructions	1
1001181 R3	Air Cleaner Instructions	1
1001318 R1	"McCormick - Farmall"	2
353150 R93	Decal Package ("AV")	
	Same as 353149 R93 Except -	
1000872 R1	"AV" Symbol	2
	In Place Of	
1000658 R2	"A" Symbol	2
353155 R93	Decal Package ("B")	
1000689 R3	Cooling System Drain	1
1000690 R3	"Made in U.S.A."	1
1000693 R3	"I.H.C. of Canada, Ltd."	1
1000704 R4	Brake Warning	1
1000706 R1	"B" Symbol	2
1000798 R1	Lighting Switch Transfer	1
1000936 R2	Patent Marking	1
1000987 R2	Cylinder Head Breather Instructions	1
1001012 R3	Oil Filter Instructions	1
1001013 R2	Oil Filter Instructions	1
1001181 R3	Air Cleaner Instructions	1
1001318 R1	"McCormick" - Farmall	2
353156 R93	Decal Package ("BN")	
	Same as 353155 R93 Except -	
1000873 R1	"BN" Symbol	2
	In Place Of	
1000706 R1	"B" Symbol	2

OVERHAUL AND IMPROVEMENT PACKAGES

PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
	ENGINE		
6866 DAX	Manifold Heat Valve Shaft Field Change Package		
	(Kerosene or Distillate)	501 to 47260	1
43286 DA	Set of Four Cylinder Sleeves with Pistons, 43287 DA		
	(Gasoline-Standard) (Used with Crankcase, §251069 R1)		1
51188 D	Set of Four Cylinder Sleeves with Pistons, 51362 D		
	(Gasoline, 8000 Ft. Altitude - Special)		
	(Used with Crankcase, §251069 R1)		1
51189 D	Set of Four Cylinder Sleeves with Pistons, 51361 D		
	(Gasoline, 5000 Ft. Altitude - Special)		
	(Used with Crankcase, §251069 R1)		1
51778 DA	Set of Four Cylinder Sleeves with Pistons, 51777 DA		
	(Kerosene or Distillate) (Used with Crankcase, §251069 R1)		1
53077 D	Set of Four Cylinder Sleeves with Pistons, 54282 D		
	(Kerosene, 5000 Ft. Altitude - Special)		
	(Used with Crankcase, §251069 R1)		1
53078 D	Set of Four Cylinder Sleeves with Pistons, 54281 D		
	(Kerosene, 8000 Ft. Altitude - Special)		
	(Used with Crankcase, §251069 R1)		1
53628 D	Engine Gasket Package		1
69791 D	Piston Ring Replacement Kit (Perfect Circle)		1
69792 D	Piston Ring Replacement Kit (Wilkening)		1
70356 D	Piston Ring Replacement Kit (Wilkening)		1
70357 D	Piston Ring Replacement Kit (Perfect Circle)		1
357676 R91	Piston Ring Replacement Kit (Perfect Circle)		1
357677 R91	Piston Ring Replacement Kit (Perfect Circle)		1
69557 D	Carburetor Gasket Package (Marvel-Schebler) (Gasoline)		1
69561 D	Carburetor Repair Kit Package (Marvel-Schebler) (Gasoline)		1
69562 D	Carburetor Repair Kit Package (Marvel-Schebler)		
	(Kerosene or Distillate)		1
69564 D	Carburetor Gasket Package (Marvel-Schebler)		
	(Kerosene or Distillate)		1
354474 R91	Valve Grinding Gasket Package		1
354763 R91	Carburetor Overhaul Package (For Zenith Carburetors)		1
356315 R91	Set of Four Cylinder Sleeves with Pistons, 356316 R91		
	(Gasoline or Distillate) (Used with Crankcase, §354879 R2)		1
356637 R91	Set of Four Cylinder Sleeves with Pistons, 356642 R91		
	(Gasoline 5000 Ft. Altitude - Special)		
	(Used with Crankcase, §354898 R2)		1
356639 R91	Set of Four Cylinder Sleeves with Pistons, 356643 R91		
	(Distillate 5000 Ft. Altitude - Special)		
	(Used with Crankcase, §354898 R2)		1
356641 R91	Set of Four Cylinder Sleeves with Pistons, 356647 R91		
	(Kerosene 5000 Ft. Altitude - Special)		
	(Used with Crankcase, §354898 R2)		1
359036 R91	Set of Four Cylinder Sleeves with Pistons, 359037 R91		
	(Kerosene) (Used with Crankcase, §354898 R2)		1

§ - Not Supplied Separately

OVERHAUL AND IMPROVEMENT PACKAGES

PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
	ENGINE —Continued		
356649 R91	SET OF FOUR CYLINDER SLEEVES WITH PISTONS, 356654 R91		
	(GASOLINE 5000 FT. ALTITUDE - SPECIAL)		
	(USED WITH CRANKCASE, § 354898 R2)		1
356651 R91	SET OF FOUR CYLINDER SLEEVES WITH PISTONS, 356655 R91		
	(DISTILLATE 5000 FT. ALTITUDE - SPECIAL)		
	(USED WITH CRANKCASE, § 354898 R2)		1
356653 R91	SET OF FOUR CYLINDER SLEEVES WITH PISTONS, 356656 R91		
	(KEROSENE 5000 FT. ALTITUDE - SPECIAL)		
	(USED WITH CRANKCASE, § 354898 R2)		1
356655 R91	CYLINDER SLEEVE WITH PISTON, COMPLETE (DISTILLATE 5000 FT. ALTITUDE - SPECIAL) (USED WITH CRANKCASE, § 354898 R2)		4
356747 R91	GOVERNOR, ASSEMBLY PACKAGE		1
	CHASSIS		
50986 R91	DIFFERENTIAL SIDE AND PINION GEAR PACKAGE	1723 UP	1
53617 D	CHASSIS GASKET PACKAGE ("A" AND "AV")		1
53618 D	CHASSIS GASKET PACKAGE ("B" AND "BN")		1
54141 D	REAR WHEEL, R.H. AND REAR AXLE SHAFT FIELD CHANGE PACKAGE ("A" ONLY)	501 TO 5563	1
57581 DA	CLUTCH HOUSING DUST SEALS FIELD CHANGE PACKAGE	501 TO 35350	1
60321 D	EXHAUST LIFT FIELD CHANGE PACKAGE	501 TO 42736	1
63781 D	PULLEY HOUSING OIL SEALING FIELD CHANGE PACKAGE	66671 UP	1
66191 D	POWER TAKE-OFF STANDARDIZATION FIELD CHANGE PACKAGE (TO CONVERT TRACTORS WITH 1-1/8" POWER TAKE-OFF SPLINE SHAFT TO 1-3/8" SPLINE SHAFT)	501 TO 96389	1
69904 DX	CLUTCH LEVER PACKAGE (IMPROVED CLUTCH LEVER FOR ATWOOD CLUTCH)	87001 TO 87996	1
15350 EX	MANIFOLD SEALS IMPROVEMENT PACKAGE (FOR LIFT-ALL ON DISTILLATE OR KEROSENE BURNING ENGINES)		1
355001 R1	FRONT AXLE PIVOT TUBE REINFORCEMENT FIELD IMPROVEMENT PACKAGE (FOR "A" TRACTORS EQUIPPED WITH ADJUSTABLE FRONT AXLE ATTACHMENT, 40290 DA)		1
356552 R91	STEERING GEAR ARM AND SHAFT SERVICE PACKAGE ("A" ONLY) (WILL WORK FOR 47683 DB, 47684 DB AND 69438 D)		1
356553 R91	STEERING GEAR ARM AND SHAFT SERVICE PACKAGE ("AV" ONLY) (WILL WORK FOR 47683 DB, 60391 DA AND 69439 D)		1

§ - NOT SUPPLIED SEPARATELY

MEMORANDA

ATTACHMENTS

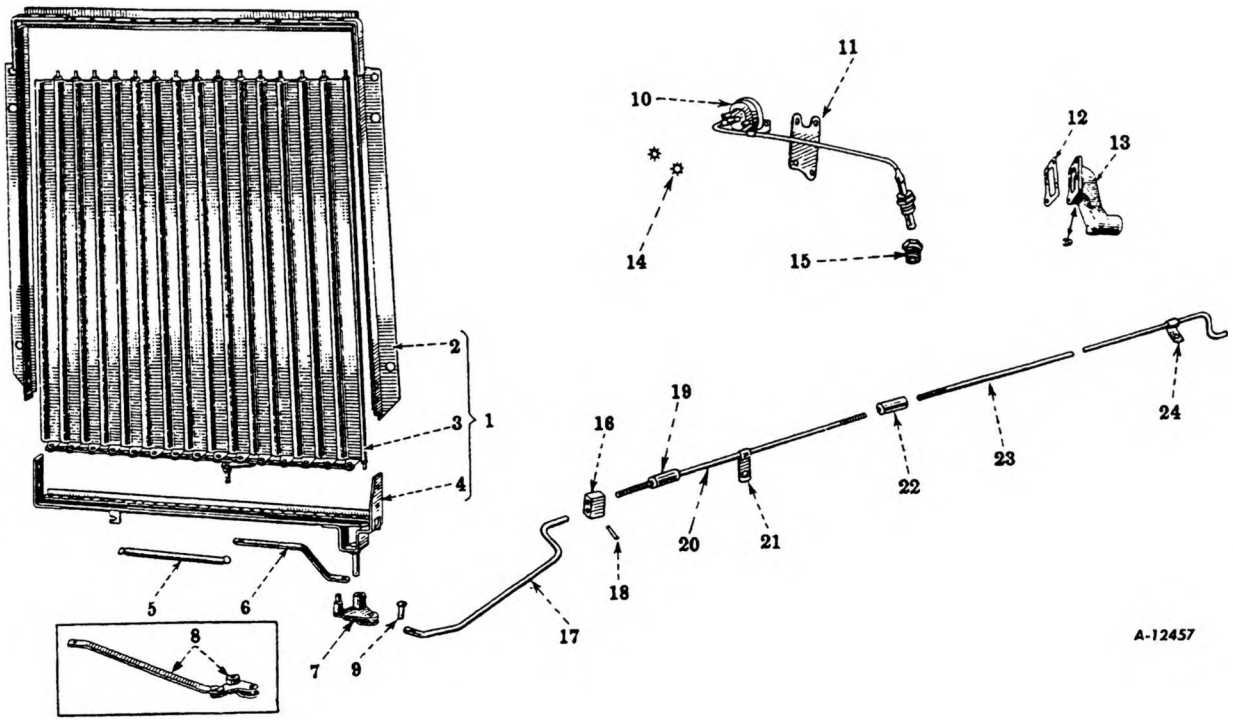

RADIATOR SHUTTER, CONTROLS AND HEAT INDICATOR

51419 DC			Radiator Shutter Attachment	1
51420 DA			Shutter and Connections, Complete	1
65429 D	1	18362	Shutter Unit (Hardy Type)	1
53003 DA	2	70066	Frame and Bearing Bar (Defiance Type)	1
65423 D	2	18361	Frame and Bearing Bar (Hardy Type)	1
53005 D	3	70055	Shutter and Operating Bar (Defiance Type)	1
65421 D	3	18354	Shutter and Operating Bar (Hardy Type)	1
53006 D	4	70053	Bottom Tie Bar and Bearing Bar (Defiance Type)	1
65426 D	4	18359	Bottom Tie Bar and Bearing Bar (Hardy Type)	1
124060			Machine Screw, 1/4 - 20 x 1/2" Round Head	4
131395			Hex Nut, 1/4" - 20 N.C.	4
115109			Lockwasher, 1/4"	4
37730 D	5	3173	Bell Crank and Operating Link Spring (Hardy Type)	1
53004 D	5	70067	Spring (Defiance Type)	1
65430 D	6	13342	Operating Link (Hardy Type)	1

ATTACHMENTS

RADIATOR SHUTTER, CONTROLS AND HEAT INDICATOR—Continued

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
65423 D	7	18356	Bellcrank, Bushing and Stud (Hardy Type)		1
53007 D	8	70063	Bellcrank and Operating Link (Defiance Type)		1
51427 D	9		Radiator Shutter Control Rod Pin, 1/4" (Order 65431 D)		1
65431 D	9	18347	Bell Crank and Operating Link Pin, 1/4"		
			(Will Work for 51427 D) (Hardy Type)		1
49039 DB	10		Heat Indicator (Order 53619 DC with Bracket 53620 D)		1
53619 DC	10		Heat Indicator (Will Work for 49039 DB)		1
50495 D	11		Heat Indicator Bracket	501 to 11091	1
53620 D	11		Heat Indicator Bracket	11092 up	1
179812			Cap Screw, 5/16 x 1/2" N.C. Hex Head		1
103320			Lockwasher, 5/16"		1
46871 D	12		Water Inlet Elbow Gasket		1
6764 DAX	13		Water Inlet Elbow with Plug, 103869		
			(Will Work for 6501 DA)		1
125750	14		Washer, No. 12 External-Tooth		2
51510 D	15		Reducing Bushing		1
3161 D	16		Radiator Shutter Control Rod Carrier		1
51421 D	17		Radiator Shutter Control Rod, Front		1
142485	18		Radiator Shutter Control Rod Coupling Pin (Same as 38146 D)		1
60596 D	19		Radiator Shutter Control Rod Center Stop		1
52506 DAX	20		Radiator Shutter Control Rod, Center with Stop, 60596 D		1
103373			Cotter Pin, 3/32 x 3/4"		1
51423 D	21		Radiator Shutter Control Rod Bracket, Front		1
179837			Cap Screw, 3/8 x 3/4" N.C. Hex Head		1
103321			Lockwasher, 3/8"		1
52507 D	22		Radiator Shutter Control Rod Coupling		1
13001 R1			Hex Nut, 5/16" N.C.		2
51422 D	23		Radiator Shutter Control Rod, Rear		1
103373			Cotter Pin, 3/32 x 3/4"		2
Q 243			Washer, 21/64" I.D. x 3/4" O.D. x No. 16 Gauge		2
51424 DA	24		Radiator Shutter Control Rod Bracket, Rear		1
179793			Cap Screw, 1/4 x 5/8" N.C. Hex Head		1
13000 R1			Hex Nut, 1/4" N.C.		1
103319			Lockwasher, 1/4"		1
103869			Pipe Plug, 1/2" Square Head		1

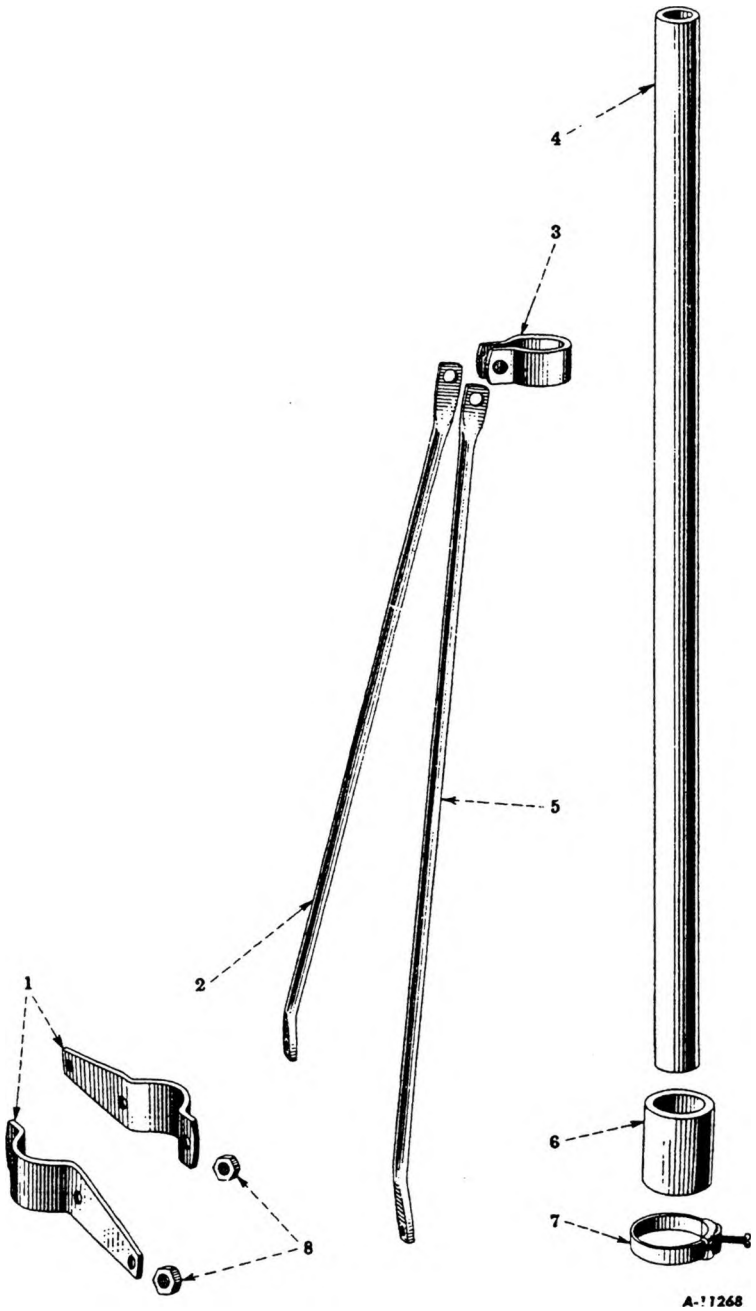

AIR PIPE EXTENSION (Special)
(For Air Cleaner)

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
		AIR PIPE EXTENSION (Special) (For Air Cleaner)			
63258 D		AIR PIPE EXTENSION ATTACHMENT		1	
63264 D	1	AIR PIPE EXTENSION BRACE CLAMP, LOWER		2	
181364		CAP SCREW, 3/8 X 1" N.F. HEX HEAD		2	
103321		LOCKWASHER, 3/8"		2	
63261 D	2	AIR PIPE EXTENSION BRACE, L.H.		1	
179816		CAP SCREW, 5/16 X 3/4" N.C. HEX HEAD		1	
13001 R1		HEX NUT, 5/16" N.C.		1	
103320		LOCKWASHER, 5/16"		1	
63263 D	3	AIR PIPE EXTENSION BRACE CLAMP, UPPER		1	
179818		CAP SCREW, 5/16 X 1" N.C. HEX HEAD		1	
13001 R1		HEX NUT, 5/16" N.C.		1	
103320		LOCKWASHER, 5/16		1	
63259 D	4	AIR PIPE EXTENSION		1	
63262 D	5	AIR PIPE EXTENSION BRACE, R.H.		1	
179816		CAP SCREW, 5/16 X 3/4" N.C. HEX HEAD		1	
13001 R1		HEX NUT, 5/16" N.C.		1	
103320		LOCKWASHER, 5/16"		1	
63260 D	6	AIR PIPE EXTENSION HOSE, 1-3/8" I.D. x 2-1/4" LONG, 3 PLY		1	
39142 H	7	AIR PIPE EXTENSION HOSE CLAMP		2	
93082 H	8	AIR PIPE EXTENSION BRACE CLAMP LOWER NUT (WILL WORK FOR 37684 H)		2	

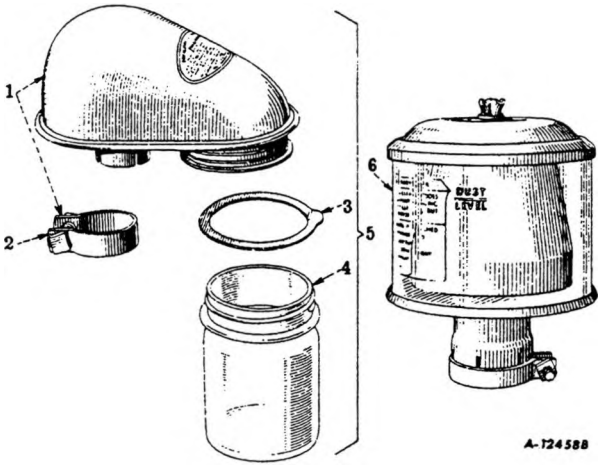

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D	
			PRE-CLEANER (Collector Type) (Special)			
356254 R91			PRE-CLEANER, 1-3/8" ATTACHMENT			
			(COLLECTOR TYPE) (DONALDSON)		1	
359320 R91			PRE-CLEANER, 1-3/8" ATTACHMENT			
			(DETACHABLE TYPE) (UNITED SPECIALTIES)		1	
59423 D	1	X-1596	PRE-CLEANER BODY, WITH CLAMP, 66774 D		1	
66774 D	2	P-4539	PRE-CLEANER CLAMP, WITH BOLT, 13269 R1			
			AND NUT, 13001 R1		1	
13269 R1			BOLT, 5/16-18NC x 1-1/4", SQUARE HEAD		1	
13001 R1			HEX NUT, 5/16"-18NC		1	
64177 D	3	P-2734	GASKET		1	
64178 D	4	P-2647	DUST JAR		1	
59206 D	5	X-1596-A	PRE-CLEANER, 1-3/8" (COLLECTOR TYPE)		1	
			PRE-CLEANER (Detachable Sleeve Type) (Special)			
356248 R91	6	S 50-B-16810	PRE-CLEANER (DETACHABLE SLEEVE TYPE)			
			(UNITED SPECIALTIES)		1	

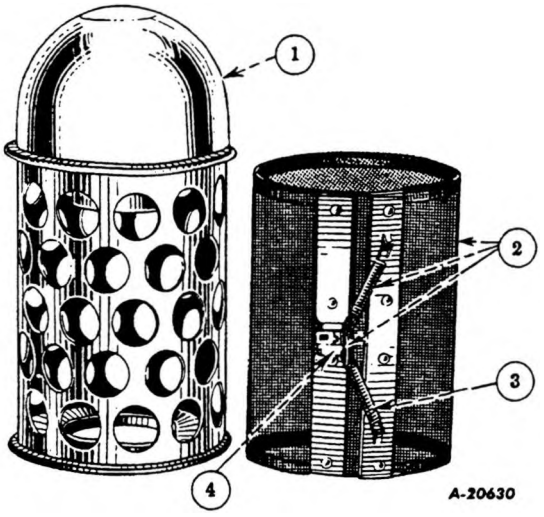

I H C PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			PRE-SCREENER (Special) (Donaldson Manufacturing Company)		
353609 R91			AIR CLEANER PRE-SCREENER		
353632 R91	1	P-6970	PRE-SCREENER BODY ASSEMBLY		1
353637 R91	2	P-7761	PRE-SCREENER SCREEN WITH 2 SPRINGS, 353639 R1 AND 1 CLIP, 353758 R1		1
353639 R1	3	P-8515	SCREEN LOCK TENSION SPRING		2
353758 R1	4	P-8516	SCREEN LOCK SPRING CLIP		1

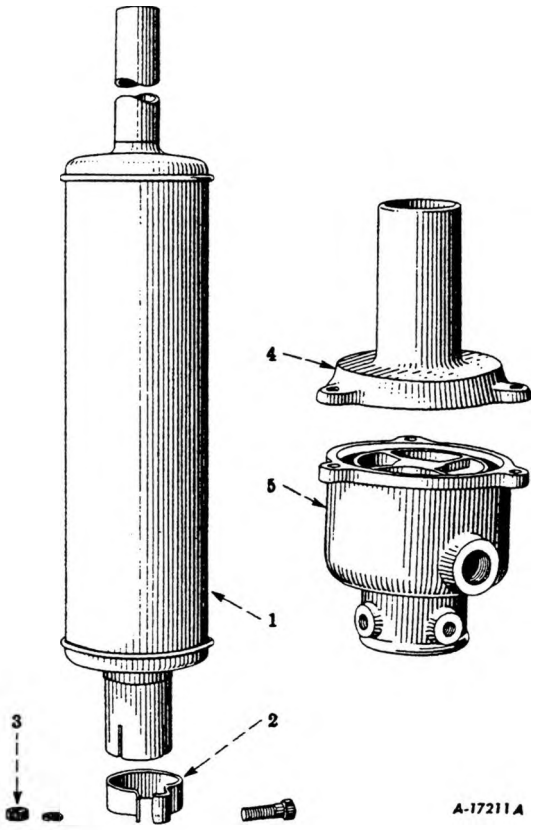

EXHAUST MUFFLER AND SPARK ARRESTER (Special)

48831 DB		Exhaust Muffler Attachment		1
55348 D		Spark Arrester Attachment		1
48832 DB	1	Exhaust Muffler (Optional with 356004 R91)		1
356004 R91	1	Exhaust Muffler (Optional with 48832 DB)		1
48889 DA	2	Exhaust Muffler Clamp		1
179821		Cap Screw, 5/16 X 1-3/8" N.C. Hex Head	501 to 151867	1
181374		Cap Screw, 3/8 x 1-1/2" N.F. Hex Head	151868 Up	1
13001 R1		Hex Nut, 5/16" N.C.	501 to 151867	1
103320		Lockwasher, 5/16"	501 to 151867	1
103321		Lockwasher, 3/8"	151868 Up	1
93082 H	3	Exhaust Muffler Clamp Nut	151868 Up	1
8616 D	4	Spark Arrester Top		1
13254 R1		Machine Bolt, 5/16 x 1" Square Head		3
13001 R1		Hex Nut, 5/16" N.C.		3
103320		Lockwasher, 5/16"		3
5125 D	5	Spark Arrester Body		1
		Set Screw, 3/8 X 7/8" N.C. Square Head (Oval Point)		2
218438		Hex Jam Nut, 3/8" N.C.		2
103868		Pipe Plug, 1/2"		1
107317		Groov-Pin, 3/16 x 1/2"		2

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		PNEUMATIC "LIFT-ALL" (Special)		
15 264 EDX		PNEUMATIC LIFT-ALL, COMPLETE WITH CYLINDER, 15 100 EAX (GASOLINE)		
15 264 EEX		PNEUMATIC LIFT-ALL, COMPLETE WITH CYLINDER, 15 100 EAX (DISTILLATE OR KEROSENE)		
15 100 EAX		CYLINDER, COMPLETE, 7 x 13-1/8"		
ⓘ 15 200 EX		EXHAUST PRESSURE VALVE UNIT, COMPLETE (GASOLINE)		
ⓘ 15 200 ECX		EXHAUST PRESSURE VALVE UNIT, COMPLETE (GASOLINE)		
ⓘ 15 250 EX		EXHAUST PRESSURE VALVE UNIT, COMPLETE (DISTILLATE OR KEROSENE)		
ⓘ 15 250 EDX		EXHAUST PRESSURE VALVE UNIT, COMPLETE (DISTILLATE OR KEROSENE)		

ⓘ INCLUDES CONTROL VALVE HOUSING, PRESSURE VALVE, PRESSURE VALVE ROD, MANIFOLD SEALS, OPERATOR'S CONTROL ROD, AND AUTOMATIC PRESSURE RELEASE UNITS

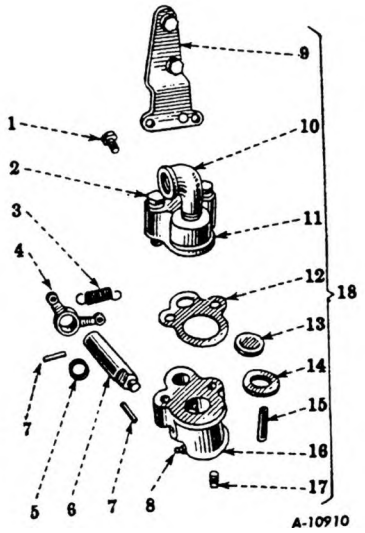

PNEUMATIC "LIFT-ALL" CONTROL VALVE HOUSING

179 837	1	Cap Screw, 3/8 x 3/4"	2	
179 847	2	Cap Screw, 3/8 x 2"	2	
15 219 E	3	Control Valve Spring	1	
5 055 E	4	Control Valve Lever	1	
15 230 E	5	Control Valve Shaft Seal	1	
15 212 E	6	Control Valve Shaft	1	
27 485 H	7	Groov Pin, 3/16 x 1"	2	
15 232 E	8	Lubricating Fitting	2	
15 216 E	9	Control, Valve Bracket	1	
102 680	10	Street Elbow, 1/2", 90 Degrees	1	
5 054 E	11	Control Valve Housing Cover	1	
15 217 E	12	Control Valve Housing Gasket	1	
15 213 E	13	Control Valve Disc	1	
15 214 E	14	Control Valve Seat	1	
15 215 E	15	Control Valve Pin, 5/16 x 1-7/16"	1	
5 053 EA	16	Control Valve Housing	1	
103 865	17	Pipe Plug, 1/8"	2	
15 [illegible] EX	18	Control Valve Housing, Complete	1	

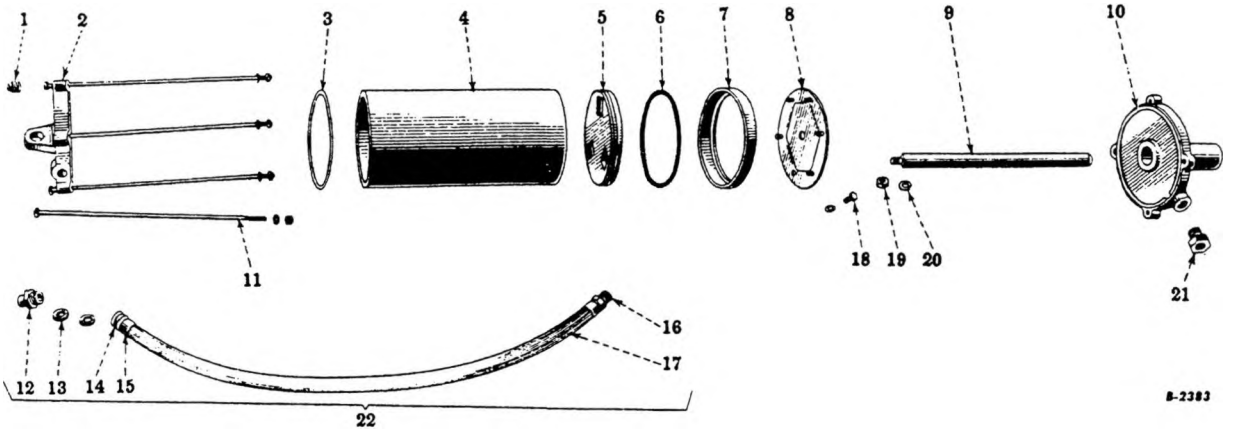

PNEUMATIC "LIFT-ALL" CYLINDER, 7 x 13¼"

15 180 EAX		Cylinder, Complete, 7 x 13-1/4"	1
103 868	1	Pipe Plug, 1/2", Square Head	2
5 050 E	2	Cylinder Head, Rear	1
15 186 E	3	Cylinder Head Gasket	1
15 181 E	4	Cylinder Tube	1
5 051 E	5	Piston Head	1
15 185 E	6	Piston Cup Expansion Spring	1
15 184 E	7	Piston Cup	1
15 183 E	8	Piston Disk	1
15 182 E	9	Piston Rod	1
5 049 E	10	Cylinder Head, Front	1
12 876 R1	11	Machine Bolt, 5/16 x 16-7/8" (Same as 494025 R1)	4
103 320		Lockwasher, 5/16"	4
13 001 R1		Hex Nut, 5/16"	4
15 193 E	12	Hose Nipple	1
15 192 E	13	Hose Coupling Washer	2
15 191 E	14	Hose Half Coupling	1
15 188 E	15	Hose Clamp	2
15 189 E	16	Hose Coupling Insert	1
15 187 E	17	Cylinder Hose	1
179 793	18	Cap Screw, 1/4 x 5/8"	6
103 319		Lockwasher, 1/4"	6
103 028	19	Hexagon Nut, 1/2"	1
103 323	20	Lockwasher, 1/2"	1
15 245 E	21	Cylinder Brace Bushing	1
15 190 EX	22	Cylinder Hose, Complete with End Fittings	1

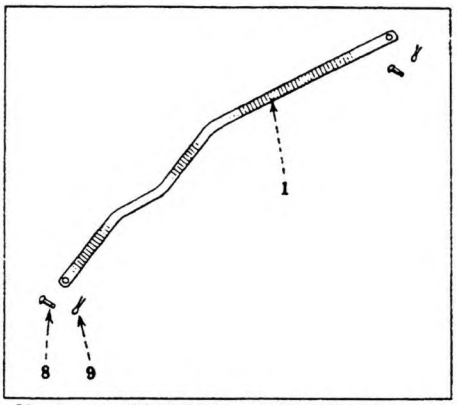

Used with 15200ECX and 15250EDX only.

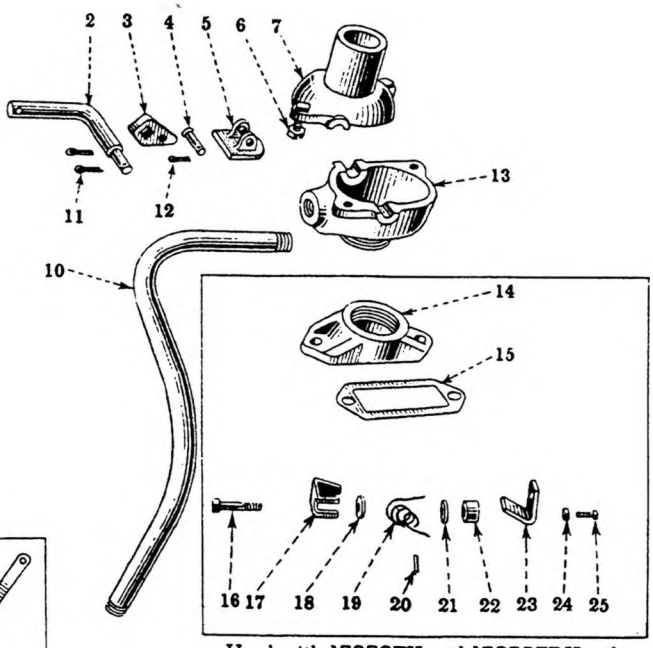

Used with 15250EX and 15250EDX only.

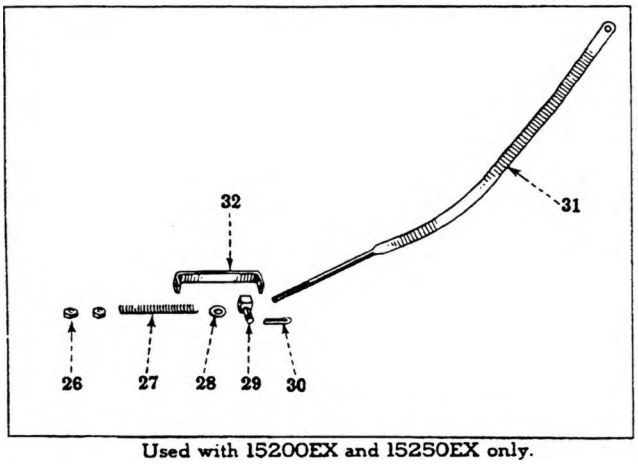

Used with 15200EX and 15250EX only.

A-10924

PNEUMATIC "LIFT-ALL" PRESSURE VALVE ROD, PRESSURE VALVE, AND MANIFOLD SEALS

ATTACHMENTS

PNEUMATIC "LIFT-ALL" PRESSURE VALVE ROD, PRESSURE VALVE, AND MANIFOLD SEALS

KEY TO LETTERS IN CAPTION -

A - 15 200 EX Exhaust Pressure Valve Unit, Complete (Gasoline)

B - 15 200 ECX Exhaust Pressure Valve Unit, Complete (Gasoline)

C - 15 250 EX Exhaust Pressure Valve Unit, Complete (Distillate or Kerosene)

D - 15 250 EDX Exhaust Pressure Valve Unit, Complete (Distillate or Kerosene)

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	UNIT USED ON A	B	C	D
15 271 E	1	Valve Rod (Will work for 15 235 EAX)			1		1
15 243 E	2	Valve Shaft		1	1	1	1
5 063 E	3	Valve Link		1	1	1	1
U 5 349	4	Pin, 5/16 x 1-5/16". Drilled		1	1	1	1
5 064 E	5	Valve		1	1	1	1
13 234 R1	6	Machine Bolt, 5/16 x 1"		2	2	2	2
13 001 R1		Hex Nut, 5/16"		2	2	2	2
5 062 EA	7	Valve Housing Cover		1	1	1	1
Q 5 013	8	Pin, 1/4 x 15/16", Drilled		2	2	2	2
103 383	9	Cotter Pin, 1/8 x 1/2"		2	2	2	2
15 210 E	10	Valve Pipe		1	1	1	1
103 385	11	Cotter Pin, 1/8 x 1"		2	2	2	2
103 383	12	Cotter Pin, 1/8 x 1/2"		1	1	1	1
5 061 EA	13	Pressure Valve Housing		1	1	1	1
5 060 E	14	Valve Adapter				1	1
15 234 E	15	Adapter Gasket				1	1
71 913 H	16	Re[illegible]tor Screw, 3/8 x 1-3/4"				1	1
15 351 E	17	Packing Clamp				1	1
15 354 E	18	Packing Washer				1	1
353 076 R1	19	Braided Asbestos Yarn, 1/16 x 21" Long (Garlock 1700)				1	1
15 241 E	20	Pin, No. 2 (.193) x 3/4", Tapered		1	1	1	1
15 355 E	21	Heat Shaft Gasket				1	1
15 353 E	22	Heat Shaft Gasket Caps				1	1
15 352 E	23	Heat Shaft Gasket Clamp				1	1
13 000 R1	24	Hex Nut, 1/4" N.C. (on set screw)				1	1
102 874	25	Set Screw, 1/4 x 1" N.C. (Cup Point)				1	1
13 000 R1	26	Hex Nut, 1/4" N.C.		2		2	
15 205 E	27	Pressure Valve Rod Spring		1		1	
Q 103	28	Washer, 17/64" I.D. x 5/8" O.D. x No. 18 Ga.		1		1	
15 211 E	29	Rock Shaft Swivel		1		1	
103 372	30	Cotter Pin, 3/32 x 1/2"		1		1	
15 206 EA	31	Pressure Valve Rod		1		1	
15 231 E	32	Pressure Valve Rod Clip Adjustment		1		1	
15 236 EAX		Pressure Valve, Complete		1	1	1	1
15 266 EX		Valve Adapter and Gasket, Complete				1	1
15 350 EX		Manifold Seals Improvement Package				1	1

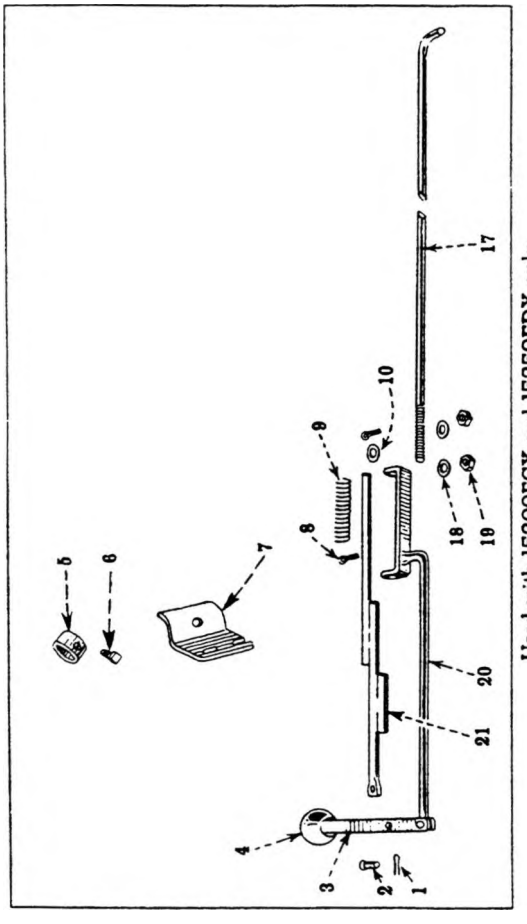

Used with 15200ECX and 15250EDX only.

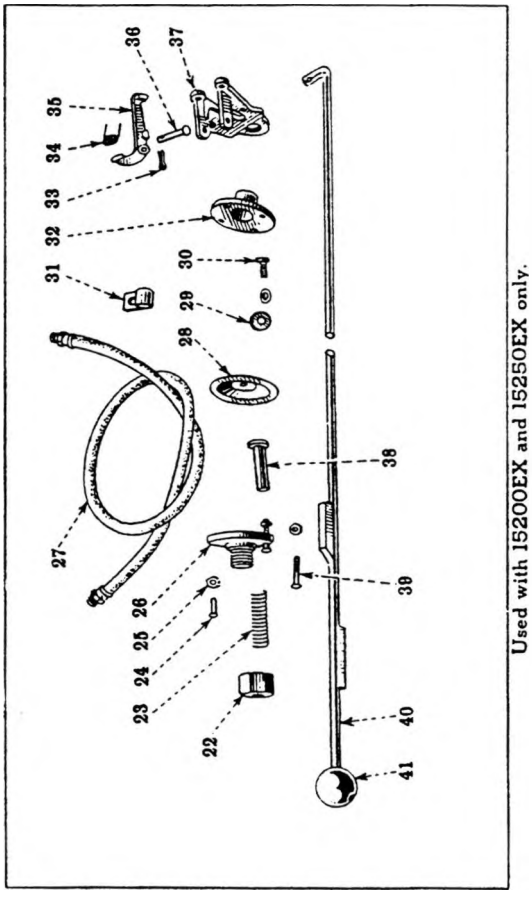

Used with 15200EX and 15250EX only.
PNEUMATIC "LIFT-ALL" OPERATOR'S CONTROL ROD AND AUTOMATIC PRESSURE RELEASE

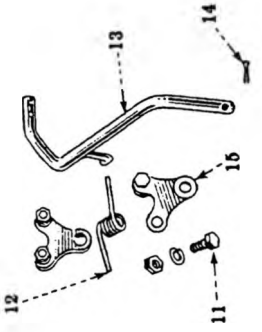

B-2385

ATTACHMENTS

PNEUMATIC "LIFT-ALL" OPERATOR'S CONTROL ROD AND AUTOMATIC PRESSURE RELEASE

KEY TO LETTERS IN CAPTION –

A - 15 200 EX Exhaust Pressure Valve Unit, Complete (Gasoline)

B - 15 200 ECX Exhaust Pressure Valve Unit, Complete (Gasoline)

C - 15 250 EX Exhaust Pressure Valve Unit, Complete (Distillate or Kerosene)

D - 15 250 EDX Exhaust Pressure Valve Unit, Complete (Distillate or Kerosene)

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	UNIT USED ON A	B	C	D
103 [illegible]	1	Cotter Pin, 3/32 x 1/2"			1		1
15 [illegible] E	2	Control Lever Pin, 3/16 x 5/8". Drilled			1		1
15 [illegible] E	3	Lever			1		1
5 [illegible] E	4	Lever Ball			1		1
15 [illegible] E	5	Steering Column Set Collar			1		1
10[illegible] [illegible]	6	Set Screw, 3/8 x 1/2", Square Head, Cup Point			1		1
15 [illegible] E	7	Operator's Control Rod Bracket			1		1
103 383	8	Cotter Pin, 1/8 x 1/2"			2		2
15 [illegible] E	9	Operator's Control Rod Spring			1		1
[illegible] V	10	Washer, 21/64" I.D. x 5/8" O.D. x No. 18 Ga.			1		1
181 364	11	Cap Screw, 3/8 x 1" N.F.		4	4	4	4
103 321		Lockwasher, 3/8"		4	4	4	4
103 026		Hex Nut, 3/8"		4	4	4	4
15 [illegible] E	12	Rock Shaft Spring		1	1	1	1
15 [illegible] EAX	13	Rock Shaft, Complete		1	1	1	1
103 [illegible]	14	Cotter Pin, 1/8 x 1"		2	2	2	2
15 [illegible] E	15	Rock Shaft Bracket		2	2	2	2
15 [illegible] E	16	Control Valve Rod		1	1	1	1
15 [illegible] E	17	Pressure Valve Adjusting Rod			1		1
103 025	18	Hex Nut, 5/16" N.F.			2		2
103 320	19	Lockwasher, 5/16"			2		2
15 278 EX	20	Lever Rod and Adjustment Strap			1		1
15 344 EX	21	Pressure Spring Rod			1		1
15 224 E	22	Diaphragm Spring Adjuster		1		1	
15 222 E	23	Diaphragm Spring		1		1	
100 765	24	Machine Screw, No. 10 - 32 x 5/8". Round Head		2		2	
103 068	25	Hex Nut, No. 10 - 32, Type F		2		2	
5 057 E	26	Diaphragm Housing, Rear		1		1	
15 [illegible] E	27	Pressure Release Hose, Complete		1		1	
15 220 E	28	Diaphragm		1		1	
15 221 E	29	Diaphragm Washer		1		1	
179 791	30	Cap Screw, 1/4 x 1/2" N.C.		1		1	
103 319		Lockwasher, 1/4"		1		1	
15 220 E	31	Hose Clip		1		1	
5 056 E	32	Diaphragm Housing, Front		1		1	
103 383	33	Cotter Pin, 1/8 x 1/2"		1		1	
15 225 E	34	Pressure Release Lever Spring		1		1	
5 059 E	35	Pressure Release Lever		1		1	
Q 1 329	36	Pin, 1/4 x 1-3/4". Drilled		1		1	
5 058 E	37	Diaphragm Bracket		1		1	
15 223 E	38	Diaphragm Spring Guide		1		1	
100 767	39	Machine Screw, No. 10 - 32 x 7/8" (Round Head)		2		2	
103 088		Hex Nut, No. 10 - 32 (Type F)		2		2	
15 209 EX	40	Control Rod, Complete		1		1	
5 065 E	41	Control Rod Ball		1		1	
15 237 EX		Automatic Pressure Release, Complete		1		1	
15 281 EX		Lever and Ball, Complete			1		1
15 262 EAX		Operator's Control Rod Improvement Package, Complete (For Replacing Automatic Pressure Release, 15 237 EX and Operator's Control Rod, 15 209 EX)		1		1	

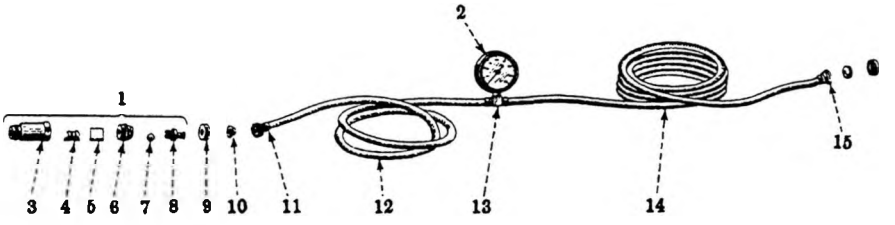

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
			PNEUMATIC TIRE PUMP (Enginair) (Special)		
39604 DA		18-G	TIRE PUMP, COMPLETE - WITH GAUGE		
			(OPTIONAL WITH SCHRAEDER PUMP, 39622 D)		1
40617 DA	1	18 PE-UNIV	PUMPING ELEMENT, COMPLETE (LESS HOSE AND AIR CHUCK)		1
69912 D		SNA	SWIVEL NUT		1
37895 DA	2	AG	AIR GAUGE (SPECIAL)		1
61560 D	3	18 BN	BARREL - 18 M.M.		1
61563 D	4	SN	SPOOL (2 HALVES) (ORDER 70313 D)		1
70313 D	4	VCN	VALVE CAGE (2 HALVES) (WILL WORK FOR 61563 D)		1
61564 D	5	VN	FLAP VALVE (2 HALVES)		1
40613 D	6	HS	HEAD (ORDER 69911 DX)		1
69911 D	6	HS AT	HEAD		1
69911 DX	6	HSAT-UNIV	HEAD WITH UNIVERSAL NIPPLE, 70312 D		
			(WILL WORK FOR 40613 D)		1
37886 D	7	ALL-2	STAINLESS STEEL BALL, 5/16"		1
40616 D	8	ALL-1	HOSE NIPPLE (USED WITH HEAD, 40613 D)		1
70312 D	3	UNIV	UNIVERSAL NIPPLE (USED WITH HEAD, 69911 D)		1
61566 D	9	ACCN	AIR CHUCK CAP, 3/4" (USED WITH 61565 D)		2
61567 D	10	182 CR	AIR CHUCK RUBBER, 11/16" (USED WITH 61565 D)		2
37890 D	11	HCR	HOSE CLAMP RING		4
37892 D	12	4 H	HOSE, 4 FT.		1
37893 D	13	GC	GAUGE CONNECTION		1
37891 D	14	12 H	HOSE, 12 FT.		1
357375 R91	15	ACBN	AIR CHUCK, 3/4" (WILL WORK FOR 61565 D)		2
37396 D4		ALL-3	CLOTH BAG WITH INSTRUCTIONS		1

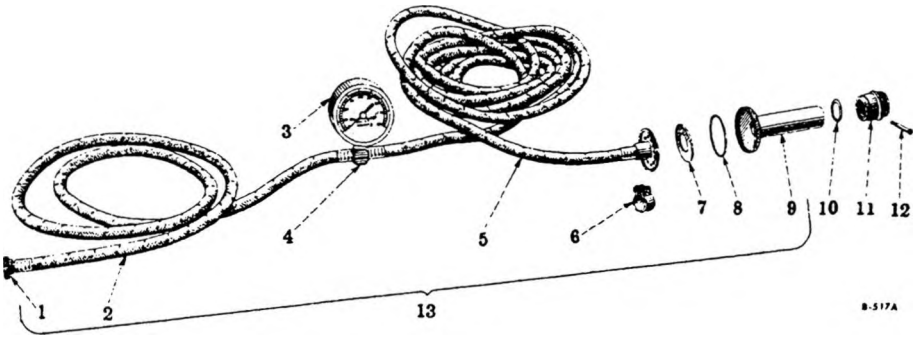

PNEUMATIC TIRE PUMP (Schrader) (Special)

KEY TO LETTERS IN CAPTION -

A - 39622 D 3333-CG Pneumatic Tire Pump, 350489 R91 with Adapter (For 18MM Thread Spark Plug Hole) (Optional with Enginair Pump, 35004 DA)

B - 350342 R91 3333-TGK Pneumatic Tire Pump, 350489 R91 with Adapters (For 10, 14, 18 MM, 1/2" and 7/8" - 18 Thread Spark Plug Hole)

I H PART NUMBER	REF. NO.	MFR'S. NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D A	NO. REQ'D B
42313 D	1	2615-D	Pump Connector		1	1
42303 D	2	3336-9	Hose - 4 Ft. Long		1	1
42309 D	3	3336-11	Dial Gauge		1	1
42306 D	4	3333-7	Gauge Connector		1	1
42307 D	5	3389-3	Hose - 12 Ft. Long		1	
62602 D	6	3380	Hose Clamp		4	4
42302 D	7	3333-2	Rubber Disc		1	1
42312 D	8	3333-17	Fibre Washer - under Perforated Plate		1	1
42300 D	9	3333-1	Shell, Long		1	1
42311 D	10	3333-16	Rubber Washer - in Adapter		1	1
⊙ 39620 D	11	3333-18	Adapter, 18 MM		1	1
⊙ 39623 D	11	3333-73	Adapter, 7/8"-18			1
⊙ 39627 D	11	3333-14	Adapter, 14 MM			1
⊙ 350490 R1	11	3333-12	Adapter, 1/2"			1
⊙ 350491 R1	11	3333-10	Adapter, 10 MM			1
42310 D	12	3333-15	Screw - for Adapter		1	1
350489 R91	13	3333-G	Tire Pump with Gauge, Complete		1	1
66314 D		3954-A	Air-Water Adapter			1
140249 H		4000-MBS-5	Valve Cores (Set of 5)			1
350423 R91		330-MBS-5	Valve Caps (Set of 5)			1
350434 R1		3263	Valve Repair Tool			1
350435 R1		3104	Valve Fishing Tool			1
350436 R91		9251-BR	Air-Water Tire Valve			1
350433 R1		9350	Tire Pressure Gauge			1
			⊙ - Adapters are Interchangeable on each of the Above Attachments			

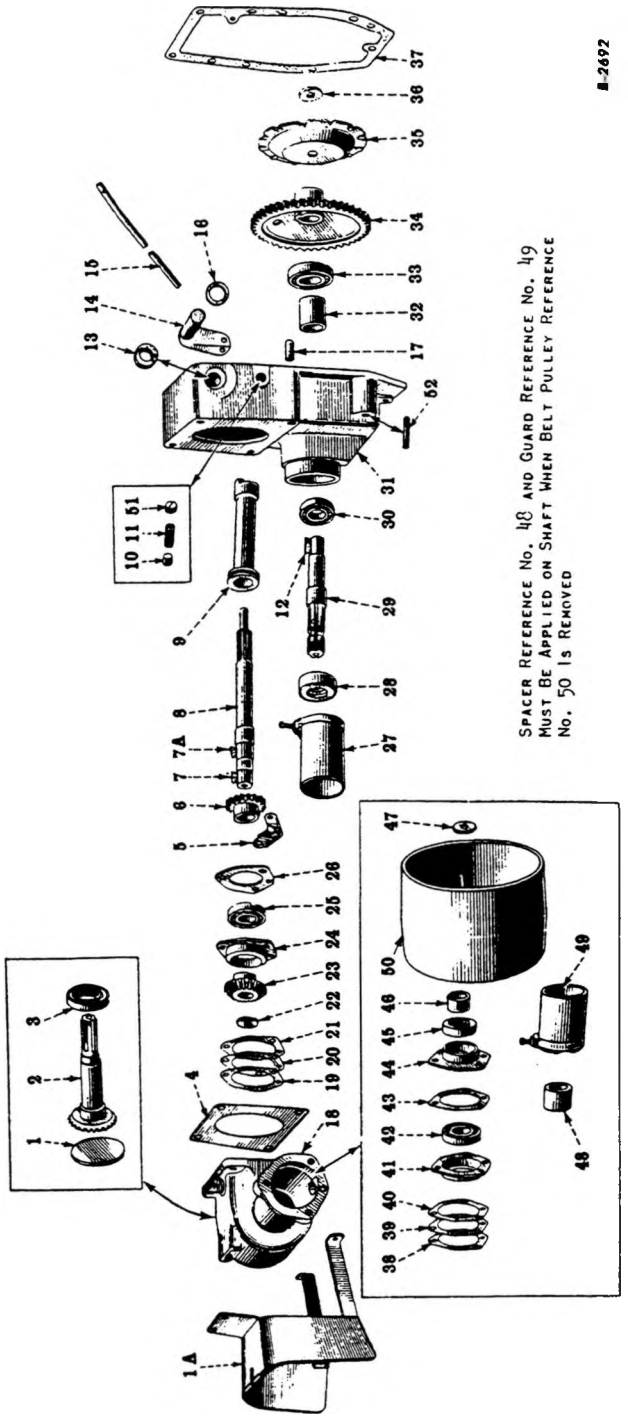

BELT PULLEY AND POWER TAKE-OFF (Special)
Tractors Numbered 801 to 66670

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY AND POWER TAKE-OFF (Special)		
48104 DA		Belt Pulley and Power Take-off Attachment		
		(Order 66186 D)		1
66186 D		Belt Pulley and Power Take-Off Attachment		
		(Will work for 48104 DA)	501 to 66670	1
		Note - When the complete attachment is ordered, 66186 D is furnished for tractors numbered 501 to 66670 whereas service parts with higher serial numbers are listed to cover previous field attachment 48104 DA which is the same as attachment 66186 D except the power take-off shaft (reference no. 29)		
355408 D		Power Take-off Safety Shield Attachment (Special with Belt Pulley and Power Take-off Attachment, 48104 D)	501 to 15334	1
66191 D		Power Take-Off Standardization Field Change Package		
		(To Convert Tractors with 1-1/8" P.T.O. Spline Shaft to 1-3/8" Spline Shaft)	501 to 96389	1
43670 D	1	Belt Pulley Drive Housing End Plug		1
55398 DA	1A	Power Take-off Safety Shield (Standard Equipment)	15335 up	1
179838		Cap Screw, 3/8 x 7/8" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
52632 D	2	Belt Pulley Shaft, 23 Teeth (Order 353329 R91)	501 to	1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
351627 R1	2	Belt Pulley Shaft, 23 Teeth	up	1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
63441 H	3	Belt Pulley Shaft Bearing, Inner (Hyatt 1207) (Optional with 350500 R91)		1
350500 R91	3	Belt Pulley Shaft Bearing, Inner (Bower M-1207-EL)		
		(Optional with 63441 H)		1
48084 D	4	Belt Pulley Drive Housing Gasket		1
48089 DA	5	Power Take-off Drive Shaft Oil Trough		1
351975 R1	6	Power Take-Off Drive Pinion, 17 Teeth (Will Work for 43624 DA)		1
7225 T	7	Belt Pulley Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
7225 T	7A	Power Take-off Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
52666 D	8	Power Take-off Drive Shaft		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
52668 D	9	Power Take-off Shifter, Complete		1
48102 D	10	Power Take-off Shifter Poppet		1
48103 D	11	Power Take-off Shifter Poppet Spring		1
66984 D	12	Power Take-off Gear Key (Woodruff No. 126, 3/16 x 2-1/8")		
		(Will Work for 13552 D)		1

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY AND POWER TAKE-OFF (Special)—Continued		
43645 D	13	Power Take-off Shifter Lever Felt Washer		1
53517 DAX	14	Power Take-off Shifter Lever Shaft, Complete		
		(Will Work for 48098 D)	501 to 5907	1
53517 DA	14	Power Take-off Shifter Lever Shaft, Complete	5908 up	1
3-78		Washer, 25/32" I.D. x 1-1/4" O.D. x No. 14 Gauge		1
25397		Cotter Pin, 5/32 x 1-1/4"		1
43642 D	15	Power Take-off Shifter Lever	501 to 5907	1
53515 D	15	Power Take-off Shifter Lever	5908 up	1
3-78	16	Follows Reference No. 14		
17381 D	17	Power Take-off Drive Housing Dowel Pin		2
6614 DAX	18	Belt Pulley Drive Housing, Complete		1
10629		Cap Screw, 7/16 x 4-1/4" N.C. Hex Head		4
103322		Lockwasher, 7/16"		4
103865		Pipe Plug, 1/8"		1
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 10[illegible])		1
[illegible]		Pipe Plug, 1" Countersunk Head (Cast Iron) (Optional with 144000)		1
47284 D	19	Power Take-off Drive Shaft Bearing Cage Shim, Light		X
47285 D	20	Power Take-off Drive Shaft Bearing Cage Shim, Medium		X
47286 D	21	Power Take-off Drive Shaft Bearing Cage Shim, Heavy		X
43262 DA	22	Power Take-off Drive Shaft Washer		1
43631 D	23	Belt Pulley Drive Bevel Pinion, 19 Teeth (Order 353329 R91)	501 to	1
351626 R1	23	Belt Pulley Drive Bevel Pinion, 19 Teeth	up	1
47281 D	24	Power Take-off Drive Shaft Bearing Cage		1
ST 213	25	Power Take-off Drive Shaft Bearing (IH-C-230)		
		(Will Work for ST 212)		1
48094 D	26	Power Take-off Drive Shaft Bearing Retainer	501 to 82578	1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
51484 DX	27	Power Take-off Shaft Guard with Clamp		1
48114 D	28	Power Take-off Shaft Oil Seal		1
43091 DA	29	Power Take-off Shaft (1-1/8" Spline) (Used with Attachment 48104 DA)		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
66184 D	29	Power Take-off Shaft (1-3/8" Spline) (Used with Attachment 66186 D)		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
ST 213	30	Power Take-off Shaft Bearing (IH-C-230)		1
6615 DX	31	Power Take-off Drive Housing, Complete		1
179860		Cap Screw, 7/16 x 1-1/4" N. C. Hex Head		1
103322		Lockwasher, 7/16"		1
103384		Pipe Plug, 1/4" Slotted Head		1
				X - As Required

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY AND POWER TAKE-OFF (Special)—Continued		
48092 D	32	Power Take-off Shaft Bearing Spacer		1
ST 213	33	Power Take-off Shaft Bearing (IH-C-230)		1
351822 R1	34	Power Take-off Gear, 44 Teeth (Will Work for 48090 D)		1
48093 D	35	Power Take-off Shaft Oil Slinger	501 to 39021	1
43262 DA	36	Belt Pulley Shaft Washer		1
46061 DA	37	Power Take-off Drive Housing Gasket (Optional with 60589)	501 to 39021	1
60589 D	37	Power Take-off Drive Housing Gasket (Will Work for 46061 DA)	39022 up	1
47284 D	38	Belt Pulley Shaft Bearing Cage Shim, Light		X
47285 D	39	Belt Pulley Shaft Bearing Cage Shim, Medium		X
47286 D	40	Belt Pulley Shaft Bearing Cage Shim, Heavy		X
47281 D	41	Belt Pulley Shaft Bearing Cage		1
ST 213	42	Belt Pulley Shaft Bearing, Outer (IH-C-230)		
		(Will Work for ST 212)		1
47283 D	43	Belt Pulley Shaft Bearing Cage Gasket		1
48085 DBX	44	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D		
		(Optional with 365003 R11)		1
365003 R11	44	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D		
		(Optional with 48085 DBX)		1
179841		Cap Screw, 3/8 X 1-1/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
48954 D	45	Belt Pulley Shaft Oil Seal		1
43630 D	46	Belt Pulley Shaft Spacer		1
43262 DA	47	Power Take-off Shaft Washer		1
48087 D	48	Belt Pulley Spacer		1
48086 DX	49	Belt Pulley Shaft Guard With Clamp	501 to 5848	1
54001 DX	49	Belt Pulley Shaft Guard with Clamp	5849 up	1
8257 D	50	Belt Pulley (8-1/2" Dia. - 6" Face)		1
58517 D	50	Belt Pulley (10-1/2" Dia. X 6-1/2" Face)		
		(Optional with 358392 R91)		1
358392 R91	50	Belt Pulley (10-1/2" Dia. x 6-1/2" Face)		
		(Optional with 58517 D)		1
103834	51	Follows Reference No. 31		
55402 D	52	Power Take-off Drive Housing Stud		2
220067		Hex Nut, 7/16" N.C.		4
103322		Lockwasher, 7/16"		4
353329 R91		Belt Pulley Shaft and Drive Bevel Pinion Service Package		
		(Consists of Pinion 351626 R1 and Shaft 351627 R1)		
		(Will Work for 43631 D and 52632 D)		1

X - As Required

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY (Special)		
		For Illustrations of parts, see page 152		
35408 D		POWER TAKE-OFF SAFETY SHIELD ATTACHMENT (SPECIAL		
		WITH BELT PULLEY AND POWER TAKE-OFF ATTACHMENT, 48104 D)	501 TO 15334	1
36082 D		BELT PULLEY ATTACHMENT (FOR TRACTORS EQUIPPED WITH POWER TAKE-OFF)		
			501 TO 66670	1
43670 D	1	BELT PULLEY DRIVE HOUSING END PLUG		1
35398 DA	1A	POWER TAKE-OFF SAFETY SHIELD (STANDARD EQUIPMENT)	15335 UP	1
179838		CAP SCREW, 3/8 X 7/8" N.C. HEX HEAD		2
103321		LOCKWASHER, 3/8"		2
52632 D	2	BELT PULLEY SHAFT, 23 TEETH (ORDER 353329 R91)	501 TO	1
181395		CAP SCREW, 7/16 X 1" N.F. HEX HEAD		1
103322		LOCKWASHER, 7/16"		1
351627 R1	2	BELT PULLEY SHAFT, 23 TEETH	UP	1
181395		CAP SCREW, 7/16 x 1" N.F. HEX HEAD		1
103322		LOCKWASHER, 7/16"		1
350500 R91	3	BELT PULLEY SHAFT BEARING, INNER (BOWER M-1207 EL)		
		(OPTIONAL WITH 6344 H)		1
6344 H	3	BELT PULLEY SHAFT BEARING, INNER (HYATT 1207) (OPTIONAL WITH 350500 R91)		1
48084 D	4	BELT PULLEY DRIVE HOUSING GASKET		1
48089 DA	5	POWER TAKE-OFF DRIVE SHAFT OIL TROUGH		1
6614 DAX	18	BELT PULLEY DRIVE HOUSING, COMPLETE		1
186292		CAP SCREW, 7/16 X 4-1/4" N.C. HEX HEAD		4
103322		LOCKWASHER, 7/16"		4
103865		PIPE PLUG, 1/8"		1
144000		PIPE PLUG, 1" COUNTERSUNK HEAD (STEEL) (OPTIONAL WITH 103870)		1
103870		PIPE PLUG, 1" COUNTERSUNK HEAD (CAST IRON) (OPTIONAL WITH 144000)		1
47284 D	19	POWER TAKE-OFF DRIVE SHAFT BEARING CAGE SHIM, LIGHT		X
47285 D	20	POWER TAKE-OFF DRIVE SHAFT BEARING CAGE SHIM, MEDIUM		X
47286 D	21	POWER TAKE-OFF DRIVE SHAFT BEARING CAGE SHIM, HEAVY		X
43631 D	23	BELT PULLEY DRIVE BEVEL PINION, 19 TEETH (ORDER 353329 R91)	501 TO	1
351626 R1	23	BELT PULLEY DRIVE BEVEL PINION, 19 TEETH	UP	1
47281 D	24	POWER TAKE-OFF DRIVE SHAFT BEARING CAGE		1

X - AS REQUIRED

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY (Special)—Continued		
47238 D	38	Belt Pulley Shaft Bearing Cage Shim, Light		X
47238 D	39	Belt Pulley Shaft Bearing Cage Shim, Medium		X
47238 D	40	Belt Pulley Shaft Bearing Cage Shim, Heavy		X
47281 D	41	Belt Pulley Shaft Bearing Cage		1
ST 213	42	Belt Pulley Shaft Bearing, Outer (IH-C-230)		
		(Will Work for ST 212)		1
47283 D	43	Belt Pulley Shaft Bearing Cage Gasket		1
48085 DBX	44	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D		1
		(Optional with 365003 R1)		
365003 R1	44	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D		
		(Optional with 48085 DBX)		1
179841		Cap Screw, 3/8 X 1-1/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
48954 D	45	Belt Pulley Shaft Oil Seal		1
43630 D	46	Belt Pulley Shaft Spacer		1
43262 DA	47	Belt Pulley Shaft Washer		1
48087 D	48	Belt Pulley Spacer		1
48086 DX	49	Belt Pulley Shaft Guard with Clamp	501 to 5848	1
54001 DX	49	Belt Pulley Shaft Guard with Clamp	5849 up	1
8237 D	50	Belt Pulley (8-1/2" Dia. - 6" Face)		1
58517 D	50	Belt Pulley (10-1/2" Dia. X 6-1/2" Face)		
		(Optional with 358392 R91)		1
358392 R91	50	Belt Pulley (10-1/2" Dia. x 6-1/2" Face)		
		(Optional with 58517 D)		1
55402 D	52	Power Take-Off Drive Housing Stud		2
220067		Hex Nut 7/16" N.C.		4
103322		Lockwasher 7/16"		4
353329 R91		Belt Pulley Shaft and Drive Bevel Pinion Service Package		
		Consists of Pinion 351626 R1 and Shaft 351627 R1		
		(Will Work for 43631 D and 52632 D)		1

X — As Required

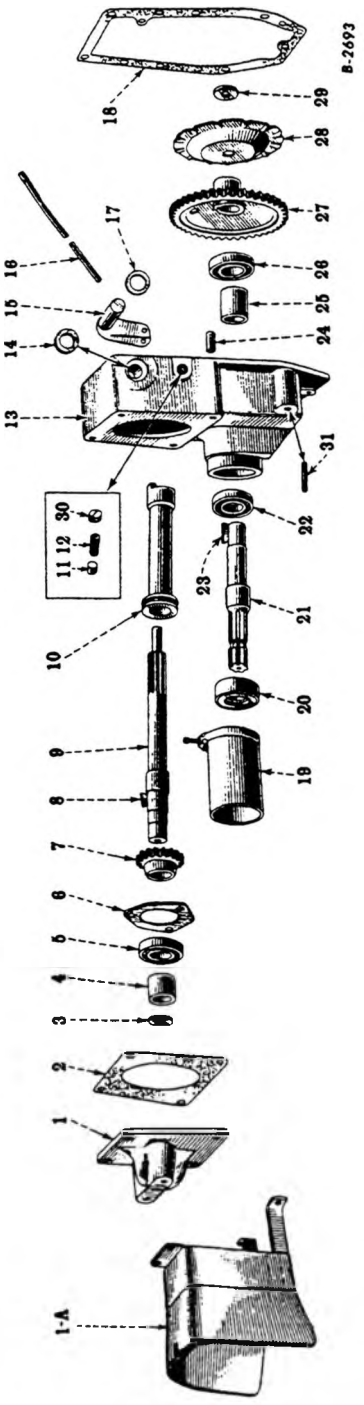

POWER TAKE-OFF (Special)
Tractors Numbered 801 to 66670

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		POWER TAKE-OFF (Special)		
48153 DA		Power Take-Off Attachment		
		(Order 66187 D)		1
66187 D		Power Take-Off Attachment		
		(Will Work for 48153 DA)	501 to 66670	1
		Note - When the complete attachment is ordered, 66187 D is furnished for tractors numbered 501 to 66670, whereas service parts with higher serial numbers are listed to cover previous field attachment 48153 DA which is the same as attachment 66187 D except the power take-off shaft (reference no. 21).		
55409 D		Power Take-Off Safety Shield Attachment (Special)		
		(With Power Take-Off Attachment, 48153 D)	501 to 19974	1
66191 D		Power Take-Off Standardized Field Change Package		
		(To Convert Tractors with 1-1/8" Spline Shaft to 1-3/8" Spline Shaft)	501 to 96389	1
6629 DA	1	Power Take-Off Cover		1
186292		Cap Screw, 7/16 X 4-1/4" N.C. Hex Head		4
103322		Lockwasher, 7/16"		4
55403 DA	1A	Power Take-Off Safety Shield	19975 up	1
179838		Cap Screw, 3/8 X 7/8" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
48084 D	2	Power Take-Off Cover Gasket		1
43262 DA	3	Power Take-Off Drive Shaft Washer		1
48152 D	4	Power Take-Off Drive Shaft Spacer		1
ST 213	5	Power Take-Off Drive Shaft Bearing (IH-C-230)		
		(Will Work for ST 212)		1
48094 D	6	Power Take-Off Drive Shaft Bearing Retainer	501 to 82578	1
179837		Cap Screw, 3/8 X 3/4" N.C. Hex Head		3
103321		Lockwasher, 3/8"		3
43624 DA	7	Power Take-Off Drive Pinion, 17 Teeth		1
7225 T	8	Power Take-Off Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
52666 D	9	Power Take-Off Drive Shaft		1
181395		Cap Screw, 7/16 X 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
52668 D	10	Power Take-Off Shifter		1
48102 D	11	Power Take-Off Shifter Poppet		1
48103 D	12	Power Take-Off Shifter Poppet Spring		1
6615 DX	13	Power Take-Off Drive Housing, Complete		1
179860		Cap Screw, 7/16 X 1-1/4" N.C. Hex Head		1
103322		Lockwasher, 7/16"		1
103884		Pipe Plug, 1/4" Slotted Head		1
43645 D	14	Power Take-Off Shifter Lever Felt Washer		1

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		POWER TAKE-OFF (Special)—Continued		
53517 DA	15	Power Take-off Shifter Lever Shaft, Complete	5908 up	1
103397		Cotter Pin, 5/32 x 1-1/4"		1
Q 3478		Washer, 25/32" I.D. x 1-1/4" O.D. x No. 14 Gauge		1
53517 DAX	15	Power Take-off Shifter Lever Shaft, Complete		
		(Will Work for 48098 D)	501 to 5907	1
43642 D	16	Power Take-off Shifter Lever	501 to 5907	1
53515 D	16	Power Take-off Shifter Lever	5908 up	1
Q 3478	17	Follows Reference No. 15		
46061 DA	18	Power Take-off Drive Housing Gasket (Optional with 60589 D)	501 to 39021	1
60589 D	18	Power Take-off Drive Housing Gasket (Will Work for 46061 DA)	39022 up	1
51484 DX	19	Power Take-off Shaft Guard with Clamp		1
48114 D	20	Power Take-off Shaft Oil Seal		1
48091 DA	21	Power Take-off Shaft (1-1/8" Spline)		
		(Used with Attachment 48153 DA)		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
66184 D	21	Power Take-off Shaft (1-3/8" Spline)		
		(Used with Attachment 66187 D)		1
ST 213	22	Power Take-off Shaft Bearing (IH-C-230)		1
66984 D	23	Power Take-off Gear Key (Woodruff No. 126 - 3/16 x 2-1/8")		
		(Will Work for 13552 D)		1
17581 D	24	Power Take-off Drive Housing Dowel Pin		2
48092 D	25	Power Take-off Shaft Bearing Spacer		1
ST 213	26	Power Take-off Shaft Bearing (IH-C-230)		1
351822 R1	27	Power Take-off Gear, 44 Teeth (Will Work for 48090 D)		1
48093 D	28	Power Take-off Shaft Oil Slinger	501 to 39021	1
43262 DA	29	Power Take-off Shaft Washer		1
103034	30	Follows Reference No. 13		
55402 D	31	Power Take-off Drive Housing Stud		2
220067		Hex Nut, 7/16" N.C.		4
103322		Lockwasher, 7/16"		4

MEMORANDA

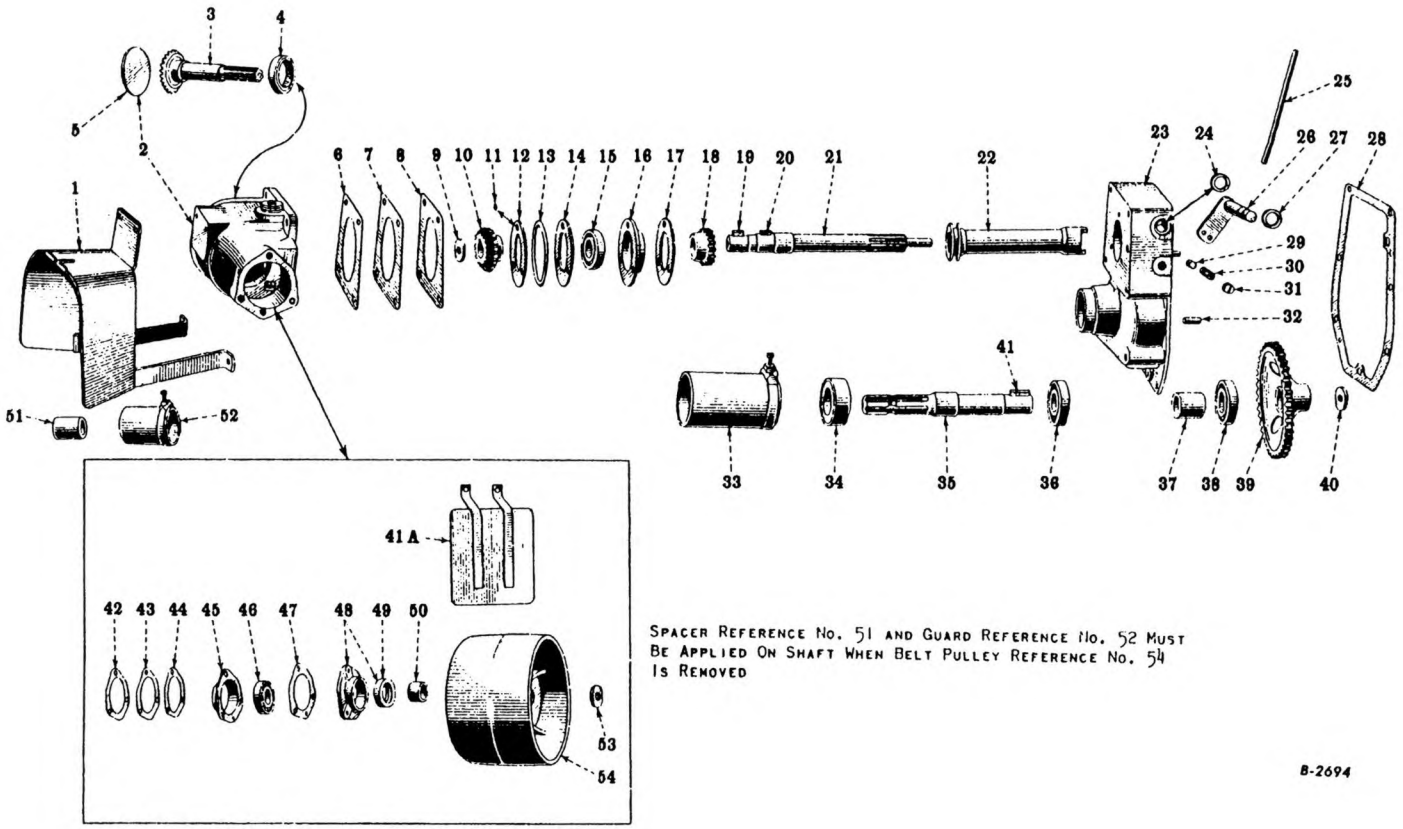

SPACER REFERENCE No. 51 AND GUARD REFERENCE No. 52 MUST BE APPLIED ON SHAFT WHEN BELT PULLEY REFERENCE No. 54 IS REMOVED

B-2694

BELT PULLEY AND POWER TAKE-OFF (Special)
Tractors Numbered 66671 up

ATTACHMENTS

BELT PULLEY AND POWER TAKE-OFF (Special)

KEY TO LETTERS IN CAPTION -

A - 60600 D Belt Pulley and Power Take-off Attachment (Order 66188 D)

A - 66188 D Belt Pulley and Power Take-off Attachment (Will Work for 60600 D) 66671 up

B - 60603 D Power Take-off Attachment (For Tractors Equipped with Belt Pulley Attachment) (Order 66190 D)

B - 66190 D Power Take-off Attachment (For Tractors Equipped with Belt Pulley Attachment) (Will Work for 60603 D) 66171 up

C - 60604 D Belt Pulley Attachment (For Tractors Equipped with Power Take-off Attachment) 66671 up

NOTE - When the Complete Attachment is ordered, 66188 D or 66190 D is furnished for tractors numbered 66671 up, whereas service parts with higher serial numbers are listed to cover previous field attachment 60600 D or 60603 D which is the same as attachment 66188 D and 66190 D except the power take-off shaft (Reference No. 35)

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQUIRED A	B	C
55398 DA	1	Power Take-off Safety Shield		1	1	1
179838		Cap Screw, 3/8 x 7/8" N.C. Hex Head		2	2	2
103321		Lockwasher 3/8"		2	2	2
9C9C DX	2	Belt Pulley Drive Housing with Plugs, 43670 D, 103865 and 144000 or 103876		1		1
186292		Cap Screw, 7/16 x 4-1/4" N.C. Hex Head		4		
103322		Lockwasher, 7/16"		4		
52632 D	3	Belt Pulley Shaft, 23 Teeth (Order 353329 R91)	501 to	1		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1		1
103322		Lockwasher, 7/16"		1		1
351627 R1	3	Belt Pulley Shaft, 23 Teeth	up	1		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1		1
103322		Lockwasher, 7/16"		1		1
63441 H	4	Belt Pulley Shaft Bearing, Inner (Hyatt 1207-TS)				
		(Optional with 350500 R91)		1		1
350500 R91	4	Belt Pulley Shaft Bearing, Inner (Bower-M-1207 EL)				
		(Optional with 63441 H)		1		1
43670 D	5	Belt Pulley Drive Housing End Plug		1		1
60582 D	6	Belt Pulley Drive Housing Shim, Light		X		X
60583 D	7	Belt Pulley Drive Housing Shim, Medium		X		X
60584 D	8	Belt Pulley Drive Housing Shim, Heavy		X		X
43262 DA	9	Power Take-off Drive Shaft Washer		1		
43631 D	10	Belt Pulley Drive Bevel Pinion, 19 Teeth				
		(Order 353329 R91)	501 to	1		1
351626 R1	10	Belt Pulley Drive Bevel Pinion, 19 Teeth	up	1		1
114606	11	Power Take-off Drive Shaft Bearing Retainer Cap Screw Washer				
		(Same as 21491 H)	82579 up	3		
63780 D	12	Belt Pulley Drive Housing Sealing Ring Retainer		1		1
358208 R1	13	Belt Pulley Drive Housing Sealing Ring (Will Work for 58419 D)	82579 up	1		1
48094 D	14	Power Take-off Drive Shaft Bearing Retainer	501 to 82578	1		
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		3		
103321		Lockwasher, 3/8"		3		
63778 D	14	Power Take-off Drive Shaft Bearing Retainer	82579 up	1		
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		3		

X - As Required

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQUIRED A	B	C
		BELT PULLEY AND POWER TAKE-OFF (Special)—Continued				
ST 212	15	Power Take-off Drive Shaft Bearing (IH-L-230)		1		
60588 D	16	Power Take-off Drive Shaft Bearing Cage		1		
63779 D	17	Power Take-off Drive Shaft Bearing Cage Gasket	82579 up	1		
351975 R1	18	Power Take-off Drive Pinion, 17 Teeth (Will Work for 43624 DA)		1	1	
7223 T	19	Belt Pulley Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1		1
7223 T	20	Power Take-off Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1	1	
52666 D	21	Power Take-off Drive Shaft		1		
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1		
103322		Lockwasher, 7/16"		1		
52668 D	22	Power Take-off Shifter		1		
9091 DCX	23	Power Take-off Drive Housing with Two Dowels, 17581 D and Plug, 103004		1		
179060		Cap Screw, 7/16 x 1-1/4" N.C. Hex Head		1		
179073		Cap Screw, 7/16 x 3-3/4" N.C. Hex Head		2		
103322		Lockwasher, 7/16"		3		
43645 D	24	Power Take-off Shifter Lever Felt Washer		1		
53515 D	25	Power Take-off Shifter Lever		1		
53517 DA	26	Power Take-off Shifter Lever Shaft		1		
Q 3476	27	Washer, 25/32" I.D. x 1-1/4" O.D. x No. 14 Gauge		1		
103397		Cotter Pin, 5/32 x 1-1/4"		1		
46061 DA	28	Power Take-off Drive Housing Gasket (Optional with 60589 D)	501 to 39021	1		
60589 D	28	Power Take-off Drive Housing Gasket (Will Work for 46061 DA)	39022 up	1		
48102 D	29	Power Take-off Shifter Poppet		1		
48103 D	30	Power Take-off Shifter Poppet Spring		1		
103004	31	Pipe Plug, 1/4" Slotted Head		1		
357215 R1	32	Power Take-off Drive Housing Dowel Pin (Will Work for 17581 D)		2		
51484 DX	33	Power Take-off Shaft Guard with Clamp		1	1	
48114 D	34	Power Take-off Shaft Oil Seal		1	1	
48091 DA	35	Power Take-off Shaft (1-1/8" Spline)				
		(Used with Attachments 60600 D and 60603 D)		1		
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1		
103322		Lockwasher, 7/16"		1		
66184 D	35	Power Take-off Shaft (1-3/8" Spline)				
		(Used with Attachments 66188 D and 66190 D)		1		
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1		
103322		Lockwasher, 7/16"		1		
ST 213	36	Power Take-off Shaft Bearing (IH-C-230)		1	1	
48092 D	37	Power Take-off Shaft Bearing Spacer		1	1	
ST 213	38	Power Take-off Shaft Bearing (IH-C-230)		1	1	
351833 R1	39	Power Take-off Gear, 44 Teeth (Will Work for 48090 D)		1	1	
43262 DA	40	Power Take-off Shaft Washer		1	1	

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQUIRED A	B	C
		BELT PULLEY AND POWER TAKE-OFF (Special)—Continued				
66984 D	41	Power Take-Off Gear Key (Woodruff No. 126, 3/16 x 2-1/8")				
		(Will Work for 13552 D)		1	1	
61265 D	41A	Belt Pulley Guard with Bracket		1		1
179837		Cap Screw, 3/8 X 3/4" N.C. Hex Head		2		
103321		Lockwasher, 3/8"		2		
47284 D	42	Belt Pulley Shaft Bearing Cage Shim, Light		X		X
47285 D	43	Belt Pulley Shaft Bearing Cage Shim, Medium		X		X
47286 D	44	Belt Pulley Shaft Bearing Cage Shim, Heavy		X		X
47281 D	45	Belt Pulley Shaft Bearing Cage		1		1
ST 213	46	Belt Pulley Shaft Bearing, Outer (1H-C-230)				
		(Will Work for ST 212)				1
47283 D	47	Belt Pulley Shaft Bearing Cage Gasket		1		1
48085 DBX	48	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D				
		(Optional with 365003 R11)				1
365003 R11	48	Belt Pulley Shaft Bearing Retainer with Oil Seal, 48954 D				
		(Optional with 48085 DBX)		1		1
48954 D	49	Belt Pulley Shaft Oil Seal		1		1
43630 D	50	Belt Pulley Shaft Spacer		1		1
48087 D	51	Belt Pulley Spacer		1		1
54001 DX	52	Belt Pulley Shaft Guard with Clamp		1		1
43262 DA	53	Belt Pulley Shaft Washer		1		1
8257 D	54	Belt Pulley (8-1/2" Dia. - 6" Face)		1		1
58517 D	54	Belt Pulley (10-1/2" Dia. - 6-1/2" Face)				
		(Optional with 358392 R91)		1		1
358392 R91	54	Belt Pulley (10-1/2" Dia.-6-1/2" Face) (Optional with 58517 D)		1		1
63755 D		Belt Pulley Drive Housing Gasket (Order 63781 D)	70206 to 82578	1		
63781 D		Belt Pulley Housing Oil Sealing Field Change Package - Special	66671 to 82578	1		
66185 D		Drawbar Extension (Illustration with Drawbar)		1	1	
103326		Lockwasher, 3/4"		2	2	
114821		Hex Nut, 3/4" N.C.		2	2	
179954		Cap Screw, 3/4 x 2-1/2" N.C. Hex Head		2	2	
66191 D		Power Take-off Standardization Field Change Package				
		(To Convert Tractors with 1-1/8" P.T.O. Spline Shaft to				
		1-3/8" Spline Shaft)	501 to 96389	1		1
353329 R91		Belt Pulley Shaft and Drive Bevel Pinion Service Package				
		Consists of Pinion, 351626 R1 and Shaft, 351627 R1				
		(Will Work for 43631 D and 52632 D)		1		1
103363		Pipe Plug, 1/2" (In Belt Pulley Drive Housing)		1		
103872		Pipe Plug, 1" Countersunk Head (Cast Iron) (Optional with 144000)				
		(In Belt Pulley Drive Housing)		1		
144000		Pipe Plug, 1" Countersunk Head (Steel) (Optional with 103872)				
		(In Belt Pulley Drive Housing)		1		
				X - As Required		

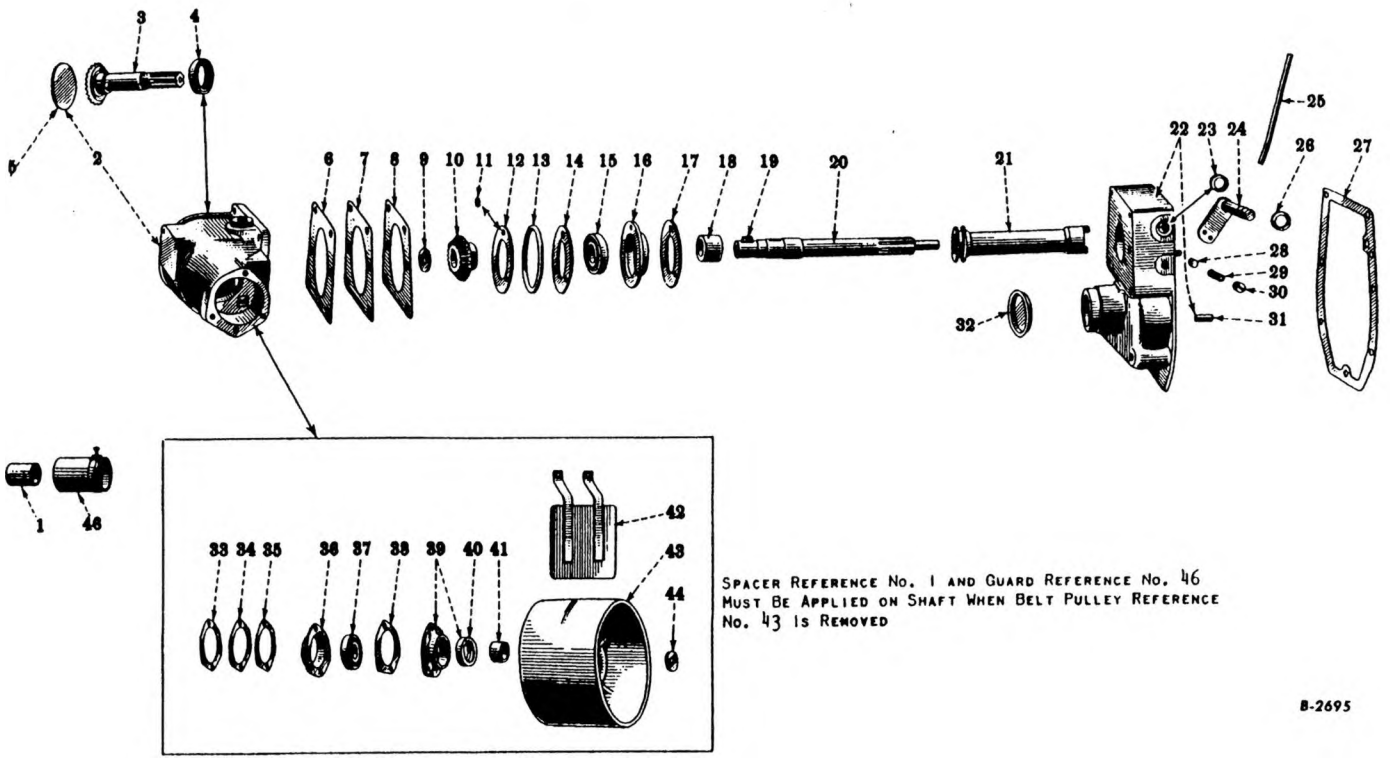

SPACER REFERENCE No. 1 AND GUARD REFERENCE No. 46 MUST BE APPLIED ON SHAFT WHEN BELT PULLEY REFERENCE No. 43 IS REMOVED

B-2695

BELT PULLEY (Special)
Tractors Numbered 66671 up

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY (Special)		
60602 D		Belt Pulley Attachment	66671 up	1
48087 D	1	Belt Pulley Spacer		1
909C DX	2	Belt Pulley Drive Housing with Plugs, 43670 D, 103865 and 144000		
		or 103876		1
186292		Cap Screw, 7/16 x 4-1/4" N.C. Hex Head		4
103322		Lockwasher, 7/16"		4
52632 D	3	Belt Pulley Shaft, 23 Teeth (Order 353329 R91)	501 to	1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
351627 R1	3	Belt Pulley Shaft, 23 Teeth	up	1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
63441 H	4	Belt Pulley Shaft Bearing, Inner (Hyatt 1207-TS)		
		(Optional with 350500 R91)		1
350500 R91	4	Belt Pulley Shaft Bearing, Inner (Bower M-1207-EL)		
		(Optional with 63441 H)		1
43670 D	5	Belt Pulley Drive Housing End Plug		1
355143 R1	6	Belt Pulley Drive Housing Shim, Extra Light		X
60582 D	6	Belt Pulley Drive Housing Shim, Light		X
60583 D	7	Belt Pulley Drive Housing Shim, Medium		X
60584 D	8	Belt Pulley Drive Housing Shim, Heavy		X
43262 DA	9	Power Take-off Drive Shaft Washer		1
43631 D	10	Belt Pulley Drive Bevel Pinion, 19 Teeth (Order 353329 R91)	501 to	1
351626 R1	10	Belt Pulley Drive Bevel Pinion, 19 Teeth	up	1
21491 H	11	Power Take-off Drive Shaft Bearing Retainer Bolt Washer		
		(Shakeproof 1120)	82579 up	3
63780 D	12	Belt Pulley Drive Housing Sealing Ring Retainer		1
358208 R1	13	Belt Pulley Drive Housing Sealing Ring (Will work for 58419 D)	82579 up	1
63778 D	14	Power Take-off Drive Shaft Bearing Retainer	82579 up	1
179837		Cap Screw, 3/8 x 3/4" N.C. Hex Head		3
ST 212	15	Power Take-off Drive Shaft Bearing (1H-L-230)		1
60588 D	16	Power Take-off Drive Shaft Bearing Cage		1
63779 D	17	Power Take-off Drive Shaft Bearing Cage Gasket	82579 up	1
60587 D	18	Power Take-off Drive Pinion Spacer		1
7225 T	19	Belt Pulley Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
52666 D	20	Power Take-off Drive Shaft		1
181395		Cap Screw, 7/16 x 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
52668 D	21	Power Take-off Shifter		1
9091 DCX	22	Power Take-off Drive Housing with Two Dowels, 357215 R1 and Plug, 103884		1
179860		Cap Screw, 7/16 x 1-1/4" N.C. Hex Head		1
179872		Cap Screw, 7/16 x 3-1/2" N.C. Hex Head		2
103322		Lockwasher, 7/16"		3
				X - As Required

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY (Special)—Continued		
43645 D	23	POWER TAKE-OFF SHIFTER LEVER FELT WASHER		1
53517 DA	24	POWER TAKE-OFF SHIFTER LEVER SHAFT		1
53515 D	25	POWER TAKE-OFF SHIFTER LEVER		1
C 3478	26	WASHER, 25/32" I.D. X 1-1/4" O.D. X No. 14 GAUGE		1
103397		COTTER PIN, 5/32 X 1-1/4"		1
46061 DA	27	POWER TAKE-OFF DRIVE HOUSING GASKET (OPTIONAL WITH 60589 D)	501 TO 39021	1
60589 D	27	POWER TAKE-OFF DRIVE HOUSING GASKET (WILL WORK FOR 46061 DA)	39022 UP	1
48102 D	28	POWER TAKE-OFF SHIFTER POPPET		1
48103 D	29	POWER TAKE-OFF SHIFTER POPPET SPRING		1
103884	30	PIPE PLUG, 1/4" SLOTTED HEAD		1
357215 R1	31	POWER TAKE-OFF DRIVE HOUSING DOWEL PIN (WILL WORK FOR 17581 D)		2
60586 D	32	POWER TAKE-OFF DRIVE HOUSING PLUG		1
47284 D	33	BELT PULLEY SHAFT BEARING CAGE SHIM, LIGHT		X
47285 D	34	BELT PULLEY SHAFT BEARING CAGE SHIM, MEDIUM		X
47286 D	35	BELT PULLEY SHAFT BEARING CAGE SHIM, HEAVY		X
47281 D	36	BELT PULLEY SHAFT BEARING CAGE		1
ST 213	37	BELT PULLEY SHAFT BEARING, OUTER (IH-C-230)		
		(WILL WORK FOR ST 212)		1
47283 D	38	BELT PULLEY SHAFT BEARING CAGE GASKET		1
48085 DBX	39	BELT PULLEY SHAFT BEARING RETAINER WITH OIL SEAL, 48954 D		
		(OPTIONAL WITH 365003 R11)		1
365003 R11	39	BELT PULLEY SHAFT BEARING RETAINER WITH OIL SEAL, 48954 D		
		(OPTIONAL WITH 48085 DBX)		1
48954 D	40	BELT PULLEY SHAFT OIL SEAL		1
43630 D	41	BELT PULLEY SHAFT SPACER		1
61265 D	42	BELT PULLEY GUARD WITH BRACKET		1
179837		CAP SCREW, 3/8 X 3/4" N.C. HEX HEAD		2
103321		LOCKWASHER, 3/8"		2
8257 D	43	BELT PULLEY (8-1/2" DIA. - 6" FACE)		1
58517 D	43	BELT PULLEY (10-1/2" DIA. - 6-1/2" FACE)		
		(OPTIONAL WITH 358392 R91)		1
358392 R91	43	BELT PULLEY (10-1/2" DIA.-6-1/2" FACE)		
		(OPTIONAL WITH 58517 D)		1
43262 DA	44	BELT PULLEY SHAFT WASHER		1
54001 DX	46	BELT PULLEY SHAFT GUARD WITH CLAMP		1
				X - AS REQUIRED

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		BELT PULLEY (Special)—Continued		
63755 D		BELT PULLEY DRIVE HOUSING GASKET (ORDER 63781 D)	70206 TO 82578	1
63781 D		BELT PULLEY HOUSING OIL SEALING FIELD CHANGE PACKAGE - SPECIAL	66671 TO 82578	1
353329 R91		BELT PULLEY SHAFT AND DRIVE BEVEL PINION SERVICE PACKAGE CONSISTS OF PINION 351626 R1 AND SHAFT 351627 R1 (WILL WORK FOR 43631 D AND 52632 D)		1
103865		PIPE PLUG, 1/8" (IN BELT PULLEY DRIVE HOUSING)		1
103876		PIPE PLUG, 1" COUNTERSUNK HEAD (CAST IRON) (OPTIONAL WITH 144000) (IN BELT PULLEY DRIVE HOUSING)		1
144000		PIPE PLUG, 1" COUNTERSUNK HEAD (STEEL) (OPTIONAL WITH 103876) (IN BELT PULLEY DRIVE HOUSING)		1

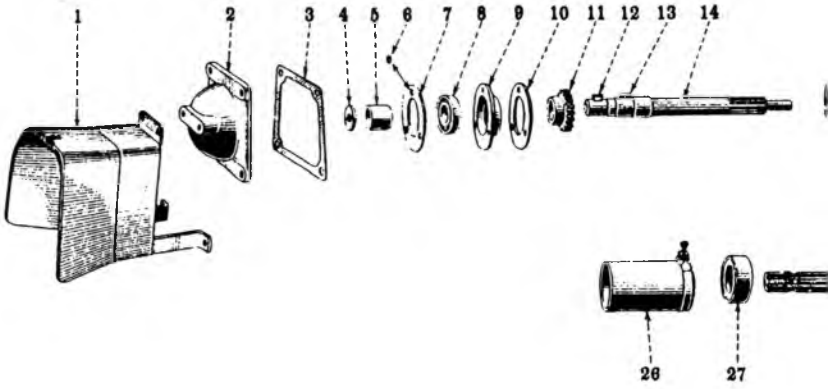

POWER TAKE-OFF (Special)
Tractors Numbered 66671 up

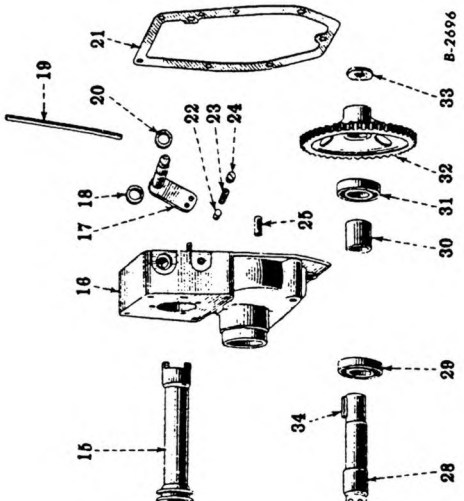
B-2696
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		POWER TAKE-OFF (Special)		
60601 D		Power Take-off Attachment (Order 66189 D)		1
66189 D		Power Take-off Attachment		
		(Will Work for 60601 D)	66671 up	1
		NOTE - When the complete attachment is ordered, 66189 D is furnished for tractors numbered 66671 up, whereas service parts with higher serial numbers are listed to cover previous field attachment 60601 D which is the same as attachment 66189 D except the power take-off shaft (reference no. 28).		
55403 DA	1	Power Take-off Safety Shield		1
179838		Cap Screw, 3/8 X 7/8" N.C. Hex Head		2
103321		Lockwasher, 3/8"		2
9092 D	2	Power Take-off Cover		1
186292		Cap Screw, 7/16 X 4-1/4" N.C. Hex Head		4
103322		Lockwasher, 7/16"		4
60581 D	3	Power Take-off Cover Gasket		1
43262 DA	4	Power Take-off Drive Shaft Washer		1
48152 D	5	Power Take-off Drive Shaft Spacer		1
114606	6	Power Take-off Drive Shaft Bearing Retainer Bolt Lockwasher	82579 up	
		(Shakeproof 1120) (Same as 21491 H)		3
63778 D	7	Power Take-off Drive Shaft Bearing Retainer	82579 up	1
179837		Cap Screw, 3/8 X 3/4" N.C. Hex Head		3
ST 212	8	Power Take-off Drive Shaft Bearing (1H-L-230)		1
60588 D	9	Power Take-off Drive Shaft Bearing Cage		1
63779 D	10	Power Take-off Drive Shaft Bearing Cage Gasket	82579 up	1
351975 R1	11	Power Take-off Drive Pinion, 17 Teeth		1
7225 T	12	Belt Pulley Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
7225 T	13	Power Take-off Drive Pinion Key (Woodruff No. 11, 3/16 x 7/8")		1
52666 D	14	Power Take-off Drive Shaft		1
181395		Cap Screw, 7/16 X 1" N.F. Hex Head		1
103322		Lockwasher, 7/16"		1
52668 D	15	Power Take-off Shifter		1
9091 DCX	16	Power Take-off Drive Housing with Two Dowel Pins, 357215 R1		
		and Plug, 103884		1
179860		Cap Screw, 7/16 X 1-1/4" N.C. Hex Head		1
179873		Cap Screw, 7/16 X 3-3/4" N.C. Hex Head		2
103322		Lockwasher, 7/16"		3

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		POWER TAKE-OFF (Special)—Continued		
53517 DA	17	Power Take-off Shifter Lever Shaft		1
Q 3472		Washer, 25/32" I.D. X 1-1/4" O.D. X No 14 Gauge		1
103395		Cotter Pin, 5/32 X 1-1/4"		1
43645 D	18	Power Take-off Shifter Lever Felt Washer		1
53515 D	19	Power Take-off Shifter Lever		1
C 347[illegible]	2[illegible]	Follows Reference No. 17		
[illegible]061 DA	[illegible]	Power Take-off Drive Housing Gasket (Optional with 60589 D)	501 to 39021	1
60589 D	21	Power Take-off Drive Housing Gasket (Will Work for 46061 DA)	39022 up	1
48102 D	22	Power Take-off Shifter Poppet		1
48103 D	23	Power Take-off Shifter Poppet Spring		1
10[illegible]	24	Pipe Plug, 1/4" Slotted Head		1
35[illegible]15 R1	25	Power Take-off Drive Housing Dowel Pin (Will Work for 17581 D)		2
1[illegible] DX	26	Power Take-off Shaft Guard with Clamp		1
48114 D	27	Power Take-off Shaft Oil Seal		1
48091 D	28	Power Take-off Shaft (1-1/8" Spline) (Used with Attachment 60601 D)		1
66184 D	28	Power Take-off Shaft (1-3/8" Spline) (Used with Attachment 66189 D)		1
1[illegible]39		Cap Screw, 7/16 X 1" N.F. Hex Head		1
10[illegible]22		Lockwasher, 7/16"		1
ST 213	29	Power Take-off Shaft Bearing (IH-C-230)		1
48092 D	30	Power Take-off Shaft Bearing Spacer		1
ST 213	31	Power Take-off Shaft Bearing (IH-C-230)		1
35[illegible]22 R1	32	Power Take-off Gear, 44 Teeth		1
43262 DA	33	Power Take-off Shaft Washer		1
66934 D	34	Power Take-Off Gear Key (Woodruff No. 126, 3/16 x 2-1/8")		
		(Will Work for 13[illegible] D)		1
66191 D		Power Take-off Standardization Field Change Package		
		(To Convert Tractors with 1-1/8" Power Take-off Spline		
		Shaft to 1-3/8" Spline Shaft)	501 to 96389	1

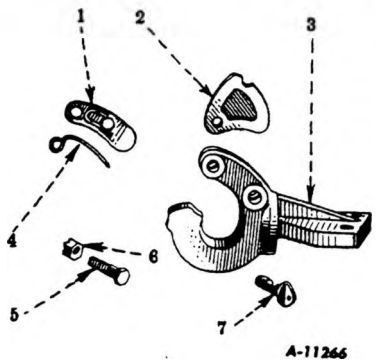

DRAWBAR PINTLE HOOK

65463 D		Drawbar Pintle Hook Attachment	1
18397 D	1	Pintle Hook Latch Cover	1
179812		Cap Screw, 5/16 x 1/2" N.C. Hex Head	1
103320		Lockwasher, 5/16"	1
18398 D	2	Pintle Hook Latch	1
9529 D	3	Drawbar Pintle Hook	1
181515		Cap Screw, 3/4 x 3" N.F. Hex Head	2
103031		Hex Nut, 3/4" N.F.	2
103326		Lockwasher, 3/4"	2
18395 D	4	Pintle Hook Latch Spring	1
18393 D	5	Pintle Hook Latch Bolt	1
103385		Cotter Pin, 1/8 x 1"	1
70119 D	6	Pintle Hook Latch Bolt Nut	1
18392 D	7	Pintle Hook Latch Pin	1

ATTACHMENTS

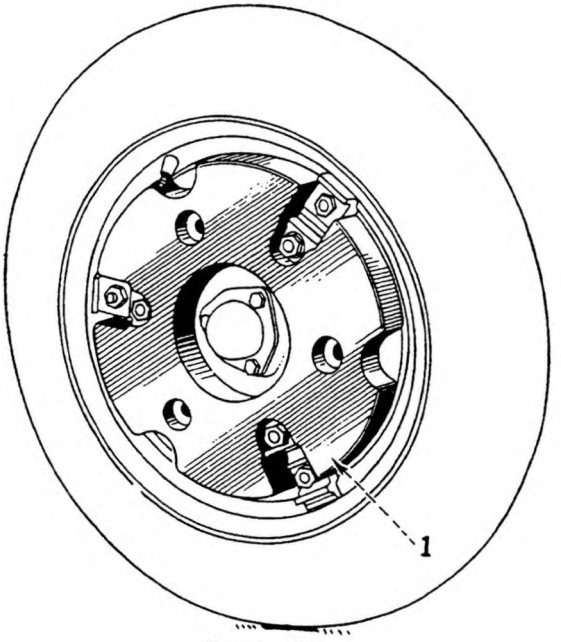

Showing First
Front Wheel Weight Assembled

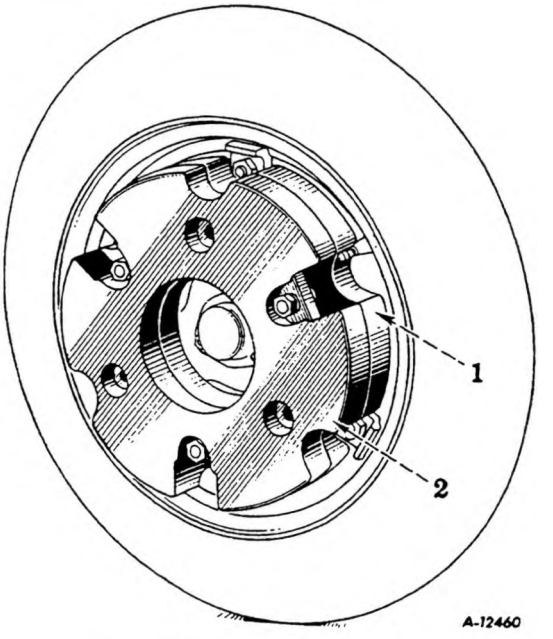

Showing First and Second
Front Wheel Weights Assembled

FRONT WHEEL WEIGHTS (Special)

(Not "B" or "BN" Single Front Wheel)

48600 D		Front Wheel Weight Attachment, Inner	1
48602 D		Front Wheel Weight Attachment, Outer	1
6788 D	1	Front Wheel Weight, Inner (Each 42-1/2 Lbs.)	2
13338 R1		Machine Bolts, 1/2 x 2" N.C.	6
114774		Hex Nut, 1/2" N.C.	6
103323		Lockwasher, 1/2"	6
6788 D	2	Front Wheel Weight, Outer (Each 42-1/2 Lbs.)	2
13416 R1		Machine Bolts, 1/2 x 3" N.C.	6
114774		Hex Nuts, 1/2" N.C.	6
103323		Lockwasher, 1/2"	6

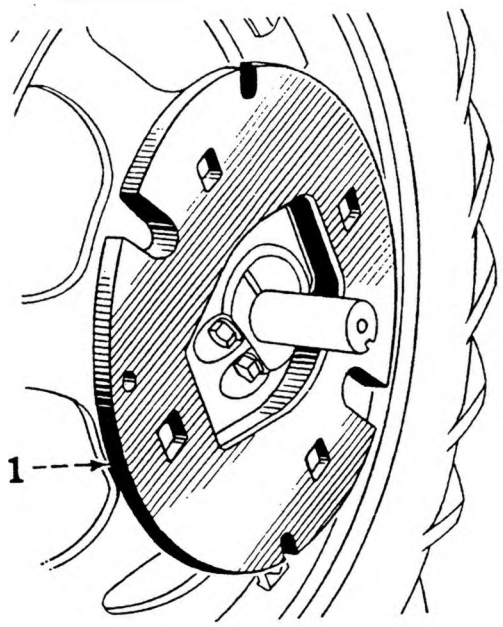

Showing First
Rear Wheel Weight Assembled

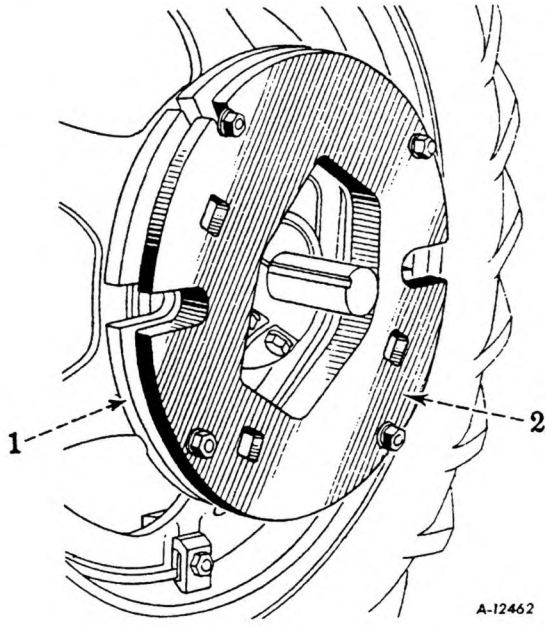

Showing First and Second
Rear Wheel Weights Assembled

REAR WHEEL WEIGHTS (Special)

(AV—Only)

49330 D		Rear Wheel Weight Attachment, Second Weight	1
49331 D		Rear Wheel Weight Attachment, Third Weight	1
61719 D		Rear Wheel Weight Attachment, First Weight	1
6818 D	1	Rear Wheel Weight (First)	2
13472 R1		Machine Bolt, 3/4 X 3-3/4" N.C.	8
114821		Hex Nuts, 3/4" N.C.	8
103326		Lockwasher, 3/4"	8
6818 D	2	Rear Wheel Weight (Second)	2
13472 R1		Machine Bolt, 3/4 X 3-3/4" N.C.	8
114821		Hex Nut, 3/4" N.C.	8
103326		Lockwasher, 3/4"	3
Q 1552		Washer, 25/32" I.D. X 1-1/4" O.D. X No. 10 Gauge	8
6818 D		Rear Wheel Weight (Third) (not illustrated)	2
		To Assemble Third Weight, Remove Two of the Bolts which Hold the Second Weight to the First Weight and Attach the Third Weight to the Second Weight	

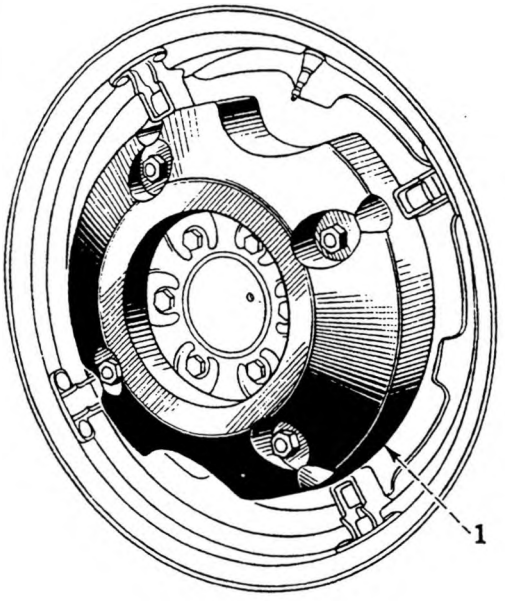

Showing First
Rear Wheel Weight Assembled

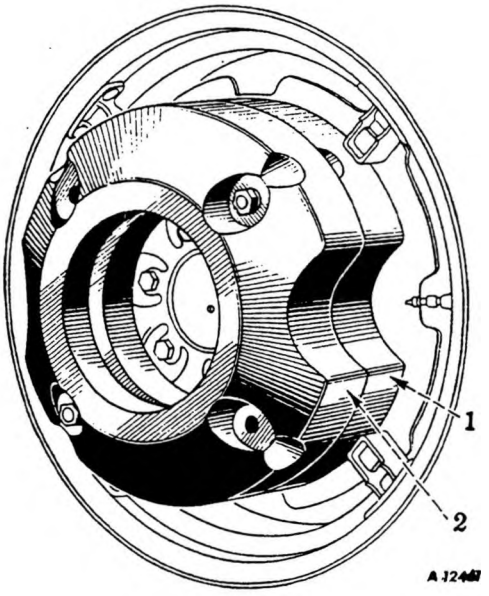

Showing First and Second
Rear Wheel Weights Assembled

REAR WHEEL WEIGHTS (Special)

50476 D		Rear Wheel Weight Attachment, First	501 to 5563	1
50477 D		Rear Wheel Weight Attachment, Second	501 to 5563	1
		For "A", "B" and "BN" Tractors with Standard Disc Wheel		
6701 DA	1	Rear Wheel Weight, First (Approximately 140 Lbs.)		2
15176 R1		Carriage Bolt, 5/8 x 3-1/2"		8
114820		Hex Nut, 5/8" N.C.		8
103325		Lockwasher, 5/8"		8
6701 DA	2	Rear Wheel Weight, Second (Approximately 140 Lbs.)		2
15348 R1		Carriage Bolt, 5/8 x 6-3/4"		4
114820		Hex Nut, 5/8" N.C.		4
103325		Lockwasher, 5/8"		4

ATTACHMENTS

PART NUMBER	REF. NO.	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
		REAR WHEEL WEIGHTS (Special)—Continued		
54142 D		Rear Wheel Weight Attachment, First	5564 up	1
54143 D		Rear Wheel Weight Attachment, Second	5564 up	1
		For "A" Tractors Equipped With		
		Heavy Rear Wheel, 8529 DA, R.H.		
6701 DA	1	Rear Wheel Weight, First, L.H.		1
15176 R1		Carriage Bolt, 5/8 x 3-1/2"		4
114820		Hex Nut, 5/8" N.C.		4
103325		Lockwasher, 5/8"		4
6701 DA	1	Rear Wheel Weight, First, R.H.		1
15314 R1		Carriage Bolt, 5/8 x 5-3/4" (Order 16149 R1)		4
16149 R1		Cap Screw, 5/8 x 5-3/4" N.C. Hex Head		4
114820		Hex Nut, 5/8" N.C.		4
103325		Lockwasher, 5/8"		4
6701 DA	2	Rear Wheel Weight, Second, L.H.		1
15348 R1		Carriage Bolt, 5/8 x 6-3/4"		2
114820		Hex Nut, 5/8" N.C.		2
103325		Lockwasher, 5/8"		2
6701 DA	2	Rear Wheel Weight, Second, R.H.		1
16157 R1		Cap Screw, 5/8 x 9" N.C. Hex Head		2
220080		Hex Nut, 5/8" N.C.		2
103325		Lockwasher, 5/8"		2
6701 DA		Rear Wheel Weight, First		2
15314 R1		Carriage Bolt, 5/8 x 5-3/4" (Order 16149 R1)		8
16149 R1		Cap Screw, 5/8 x 5-3/4" N.C. Hex Head		8
114820		Hex Nut, 5/8" N.C.		8
103325		Lockwasher, 5/8"		8
6701 DA		Rear Wheel Weight, Second		2
16157 R1		Cap Screw, 5/8 x 9" N.C. Hex Head		4
220080		Hex Nut, 5/8" N.C.		4
103325		Lockwasher, 5/8"		4
57152 D		Rear Wheel Weight Attachment, First	5564 up	1
57153 D		Rear Wheel Weight Attachment, Second	5564 up	1
		For "B" and "BN" Tractors Equipped with		
		Heavy Rear Wheels, 8529 DA		

MEMORANDA

DETAILS OF ASSEMBLY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
6096 DY	LUBRICATING OIL PUMP BODY, COMPLETE	
[illegible] DX	LUBRICATING OIL PUMP BODY WITH IDLER SHAFT AND PLUG, [illegible]	1
16112 DB	LUBRICATING OIL PUMP DRIVE PINION	1
43412 DE	LUBRICATING OIL PUMP DRIVE SHAFT	1
[illegible]	LUBRICATING OIL PUMP SPIRAL GEAR PIN	1
27999 H	LUBRICATING OIL PUMP BODY GEAR RETAINER	1
35630 H	LUBRICATING OIL PUMP BODY GEAR	1
[illegible] H	LUBRICATING OIL PUMP DRIVE PINION	1
7699 TM	LUBRICATING OIL PUMP BODY GEAR KEY	1
7699 TM	LUBRICATING OIL PUMP SPIRAL GEAR KEY	1
6340 DAX	GOVERNOR HOUSING, COMPLETE	
§ 6340 DA	GOVERNOR HOUSING	1
[illegible]	GOVERNOR HOUSING EXPANSION PLUG, 3/4"	1
45733 D	GOVERNOR ROCKSHAFT BEARING	2
46939 D	GOVERNOR ROCKSHAFT BUSHING	1
46942 D	GOVERNOR ROCKSHAFT LEVER RETAINER PIN	1
49220 D	GOVERNOR SHAFT STOP PIN	1
6482 DAY	FRAME, COMPLETE	
§ 6482 DAX	FRAME, COMPLETE	1
47434 D	FELT RETAINER, INNER	1
§ 47435 D	BREAKER ARM POST	1
48472 D	CONDENSER HOLE COVER GASKET	1
[illegible] D	CONDENSER HOLE COVER	1
E4 226	BEARING FELT	1
E4A 352	ROTOR SHAFT BALL BEARING OUTER RACE	1
121632	SCREW, NO. 8-32 X 3/8" ROUND HEAD SLOTTED (CADMIUM PLATED)	2
121641	LOCKWASHER, NO. 8 (CADMIUM PLATED)	2
6483 DAY	DISTRIBUTOR BODY, COMPLETE	
§ 6483 DA	DISTRIBUTOR BODY	1
47408 D	DISTRIBUTOR BODY GASKET	1
47424 D	DISTRIBUTOR CAP LOCATING PIN	1
§ 47486 D	DISTRIBUTOR SHAFT	1
49423 D	DISTRIBUTOR BODY FELT SEAL	1
49424 D	DISTRIBUTOR BODY FELT RETAINER	1
[illegible]1666 D	DISTRIBUTOR CAP SPRING	2
[illegible]1667 D	DISTRIBUTOR CAP SPRING PIN	2
E4 216	OIL WELL FELT	1
E4 295	OILER	1
6[illegible]15 DAX	MOUNTING FLANGE, COMPLETE	
§ 6[illegible]15 DA	MOUNTING FLANGE	1
37311 D	IMPULSE COUPLING OILER	1
47488 DA	IMPULSE COUPLING STOP PIN	1
[illegible] R1	OIL SEAL	1
[illegible] R1	OIL RETAINER WASHER, OUTER	1
[illegible] R1	OIL RETAINER WASHER, INNER	1
ST [illegible]01	ROTOR SHAFT BALL BEARING OUTER RACE (IH-NO.-15-C)	1

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
6332 DEX	STEERING GEAR HOUSING, COMPLETE	
§ 6332 DE	STEERING GEAR HOUSING	1
35088 DA	STEERING GEAR HOUSING DOWEL	2
41096 DBR	STEERING WORM BUSHING	1
48956 D	STEERING WORM SHAFT OIL SEAL	1
[illegible] RI	STEERING GEAR HOUSING VENT PLUG	1
103865	PIPE PLUG, 1/8" SQUARE HEAD	1
[illegible]	PIPE PLUG, [illegible]" SQUARE HEAD	
6332 DEY	STEERING GEAR HOUSING, COMPLETE	
[illegible] DEX	STEERING GEAR HOUSING	1
181413	CAP SCREW, 7/16 X 3-1/2" N.F. HEX HEAD	2
103027	HEX NUT, 7/16" N.F.	2
103322	LOCKWASHER, 7/16"	2
6614 DAX	BELT PULLEY DRIVE HOUSING, COMPLETE	
§ 6614 DA	BELT PULLEY DRIVE HOUSING	1
43670 D	BELT PULLEY DRIVE HOUSING END PLUG	1
103865	PIPE PLUG, 1/8" SQUARE HEAD	1
144000	PIPE PLUG, 1" COUNTERSUNK HEAD (STEEL)	1
OR		
[illegible]	PIPE PLUG, 1" COUNTERSUNK HEAD (CAST IRON)	1
6615 DX	POWER TAKE-OFF DRIVE HOUSING, COMPLETE	
§ 6615 D	POWER TAKE-OFF DRIVE HOUSING	1
17581 D	POWER TAKE-OFF DRIVE HOUSING DOWEL	2
103884	PIPE PLUG, 1/4" SLOTTED HEAD	1
6744 DDX	EXHAUST AND INTAKE MANIFOLD, COMPLETE	
§ 6744 DD	EXHAUST AND INTAKE MANIFOLD	1
13090 D	EXHAUST AND INTAKE MANIFOLD PLUG	2
46102 D	MANIFOLD HEAT SHIELD STUD	3
G 3243	EXHAUST PIPE STUD	2
G 8603	CARBURETOR STUD	2
103865	PIPE PLUG, 1/8" SQUARE HEAD	1
6744 DDY	MANIFOLD, COMPLETE WITH HEAT VALVE	
6744 DDX	EXHAUST AND INTAKE MANIFOLD, COMPLETE	1
6866 DA	MANIFOLD HEAT VALVE	1
§ 48674 DA	MANIFOLD HEAT VALVE SHAFT COLLAR	1
52521 DA	MANIFOLD HEAT VALVE SHAFT	1
37389 D	MANIFOLD HEAT VALVE PIN	1
6787 DEX	FRONT WHEEL, COMPLETE	
§ 6787 DE	FRONT WHEEL	1
[illegible] D	FRONT WHEEL BEARING CUP, OUTER (OPTIONAL WITH 352355 R1 OR 353526 R1)	1
49117 D	FRONT WHEEL OIL SEAL WEAR RING	1
[illegible]	FRONT WHEEL BEARING CUP, INNER (OPTIONAL WITH 352354 R1 OR 353525 R1)	1
351555 R1	FRONT WHEEL RIM BOLT	3
120371	LIGHT HEX NUT, 1/2" N.F. (CADMIUM PLATED)	3

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
6823 DDY	DIFFERENTIAL SHAFT HOUSING WITH BOLTS	
6823 DDX	DIFFERENTIAL SHAFT HOUSING	1
179862	CAP SCREW, 7/16 X 1-1/2" N.C. HEX HEAD	4
181406	CAP SCREW, 7/16 X 2" N.F. HEX HEAD	6
103027	HEX NUT, 7/16" N.F.	6
103322	LOCKWASHER, 7/16"	10
6866 DAX	MANIFOLD HEAT VALVE, SHAFT AND COLLAR REPAIR PACKAGE	
6866 DA	MANIFOLD HEAT VALVE	1
§ 48674 DA	MANIFOLD HEAT VALVE SHAFT COLLAR	1
52521 DA	MANIFOLD HEAT VALVE SHAFT	1
57389 D	MANIFOLD HEAT VALVE PIN	1
8106 DCX	DIFFERENTIAL SHAFT HOUSING WITH BOLTS	
8106 DC	DIFFERENTIAL SHAFT HOUSING	1
179862	CAP SCREW, 7/16 X 1-1/2" N.C. HEX HEAD	6
181406	CAP SCREW, 7/16 X 2" N.F. HEX HEAD	6
103027	HEX NUT, 7/16" N.F.	6
103322	LOCKWASHER, 7/16"	12
8330 DCX	STEERING GEAR HOUSING, COMPLETE	
§ 8330 DC	STEERING GEAR HOUSING	1
41096 DB	STEERING WORM BUSHING	1
43800 DA	STEERING WORM SHAFT OIL SEAL	1
OR		
359257 R91	STEERING WORM SHAFT OIL SEAL	1
356[illegible]E R1	STEERING GEAR HOUSING VENT PLUG	1
103866	PIPE PLUG, 1/4" SQUARE HEAD	1
103867	PIPE PLUG, 3/8" SQUARE HEAD	1
8529 DAX	REAR WHEEL, R. H. COMPLETE	
8529 DA	REAR WHEEL	1
PO 16481	MACHINE BOLT, 5/8 X 2-3/4"	4
220080	HEX NUT, 5/8" N.C.	4
103325	LOCKWASHER, 5/8"	4
8734 DX	FRONT WHEEL, COMPLETE	
§ 8734 D	FRONT WHEEL	1
43440 D	FRONT WHEEL OUTER BEARING CUP (OPTIONAL WITH 352395 R1 OR 353526 R1)	1
49117 D	FRONT WHEEL OIL SEAL WEAR RING	1
54630 H	FRONT WHEEL INNER BEARING CUP (OPTIONAL WITH 352394 R1 OR 353525 R1)	1

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
8846 DBX	TRANSMISSION CASE, COMPLETE	
§ 8846 DB	TRANSMISSION CASE	1
172558	TRANSMISSION CASE IDLER SHAFT HOLE PLUG	1
357232 R1	TRANSMISSION CASE CLUTCH HOUSING DOWEL	2
24550 D	REAR AXLE AND DIFFERENTIAL HOUSING DOWEL	4
61082 D	REVERSE IDLER SHAFT LOCK SCREW	1
7210 T	TRANSMISSION COUNTERSHAFT BEARING CAGE STUD	1
103320	LOCKWASHER, 5/16"	1
[illegible]	CORK, NO. 4 TAPERED	2
103867	PIPE PLUG, 3/8" SQUARE HEAD	1
144000	PIPE PLUG, 1" COUNTERSUNK HEAD (STEEL)	1
OR		
103874	PIPE PLUG, 1" COUNTERSUNK HEAD (CAST IRON)	1
357390 R1	REAR AXLE HOUSING, LEFT HAND, MOUNTING STUD	5
8846 DBY	TRANSMISSION CASE, COMPLETE	
8846 DBX	TRANSMISSION CASE	1
58337 DX	FIRST SPEED GEAR WITH SPACER, 58338 D	1
58339 D	REVERSE IDLER SHAFT	1
354643 R11	TRANSMISSION OILER GEAR	1
103827	HEX NUT, 7/16" N.F.	6
103822	LOCKWASHER, 7/16"	6
9052 DXA	CYLINDER HEAD, COMPLETE WITH STUDS AND VALVE GUIDES.	
§ 9052 D	CYLINDER HEAD	1
24537 DA	VALVE LEVER SHAFT OILER STUD	1
45223 DA	CYLINDER HEAD TO MANIFOLD STUD	6
45574 D	VALVE COVER STUD	2
[illegible] R1	VALVE GUIDE	8
[illegible] R1	VALVE SPRING LOWER SEAT	8
103506	PIPE PLUG, 1/2" SQUARE HEAD	1
9350 DX	FRONT WHEEL, COMPLETE	
§ 9350 D	FRONT WHEEL	1
43440 D	FRONT WHEEL OUTER BEARING CUP (OPTIONAL WITH 352395 R1 OR 353525 R1)	1
49117 D	FRONT WHEEL OIL SEAL WEAR RING	1
54630 H	FRONT WHEEL INNER BEARING CUP (OPTIONAL WITH 352394 R1 OR 353525 R1)	1
40833 D	SINGLE FRONT WHEEL, COMPLETE	
5630 DX	FRONT WHEEL, MALE HALF	1
5631 DX	FRONT WHEEL, FEMALE HALF	1
16154 R1	CAP SCREW, 5/8 x 7" N.C. HEX HEAD	4
220080	HEX NUT 5/8" N.C.	4
103325	LOCKWASHER, 5/8"	4

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
43287 DA	CYLINDER SLEEVE WITH PISTON	
§ 6074 DB	PISTON	1
§ 6075 D	CYLINDER SLEEVE	1
24414 DB	PISTON PIN	1
OP		
365043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
43276 D	PISTON RING, 1/4" (OIL REGULATING)	1
35651 H	PISTON PIN RETAINER RING	2
43525 DAXA	DRAWBAR, COMPLETE	
§ 43525 DA	DRAWBAR	1
§ 55240 D	DRAWBAR PLATE, L.H.	1
§ 55241 D	DRAWBAR PLATE, R.H.	1
10620 P	WASHER, 21/32" I.D. x 1-1/2" O.D. x NO. 16 GAUGE	1
352440 R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x NO. 18 GAUGE	1
352441 R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x NO. 14 GAUGE	1
46385 DA	DIFFERENTIAL CASE WITH DRIVE GEAR	
6579 DBX	DIFFERENTIAL CASE	1
46371 DX	DIFFERENTIAL DRIVE GEAR	1
95022 H	DIFFERENTIAL PINION SHAFT LOCK PIN (LOOSE)	1
53972 VA	DIFFERENTIAL DRIVE GEAR RIVET	10
47293 DY	MAGNETO MEMBER WITH PAWLS, COMPLETE	
47293 DX	MAGNETO MEMBER	1
47461 D	PAWL PIN WASHER	1
47462 D	PAWL PIN SNAP RING	2
51303 D	PAWL SPRING	2
51304 D	PAWL	1
47293 DZ	ROTATING UNIT, COMPLETE	
47292 DX	DRIVE MEMBER	1
47293 DY	MAGNETO MEMBER WITH PAWLS, COMPLETE	1
47465 D	SPRING END BUTTON	2
47822 D	MAGNETO COUPLING SPRING	1
47413 DX	DISTRIBUTOR CAP WITH INSERTS	
§ 47413 D	DISTRIBUTOR CAP	1
§ 47415 D	DISTRIBUTOR CAP OUTER INSERT	4
§ 51467 D	DISTRIBUTOR CAP CENTER INSERT	1
47425 DY	DISTRIBUTOR ROTOR, COMPLETE	
47425 DX	DISTRIBUTOR ROTOR	1
47427 D	DISTRIBUTOR ROTOR NUT	1
47428 D	DISTRIBUTOR ARM	1
131181	LOCKWASHER, NO. 6 (CADMIUM PLATED)	1
47433 DX	PRIMARY LEADOUT, COMPLETE	
§ 47433 D	PRIMARY LEADOUT WIRE	1
§ 49445 D	PRIMARY LEADOUT INSULATING TUBE	1
§ 49446 D	PRIMARY LEADOUT GROMMET	1
§ 49447 D	PRIMARY LEADOUT TERMINAL	1
§ 49448 D	PRIMARY TO CONDENSER LEADOUT TERMINAL	1

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
47439 DAX	Coil and Core, Complete	
21314 D	Coil Core	1
57926 DX	Coil, Complete with 2 End Insulators, 49593 D	1
100617	Screw, No. 8-32 x 5/8" Flat Head (Slotted)	2
47449 DAY	Coil Cover with Secondary Leadout, Complete	
§ 47449 DAX	Coil Cover	1
47452 D	Secondary Leadout	1
436652	Slotted Screw, No. 4 - 48 x 5/16" Pan Head	1
131043	Lockwasher, No. 4 (Cadmium Plated)	1
47455 DAR	Rotor, Complete	
§ 47457 DAX	Rotor	1
60094 D	Breaker Cam	1
106745	Impulse Coupling Key	1
E4 212	Rotor Shim, Medium	2
E4A 305	Rotor Shim, Light	2
E4A 324	Oil Flinger	2
ST 600	Rotor Shaft Ball Bearing Inner Race	2
ST 602	Rotor Shaft Ball Bearing Retainer with Balls	2
E4A 372	Rotor Shim, Heavy	2
57314 D	Magnet Keeper	1
48290 DC	Adjustable Front Axle Attachment	
43488 D	Tie Rod Ball Seat	2
43747 D	Tie Rod Clamp	2
48280 DB	Tie Rod End	2
48286 DAXA	Front Axle Extension (Horizontal), Complete	2
48628 D	Front Axle Extension Clamp Bolt	4
57139 DA	Tie Rod	2
57869 DA	Tie Rod Tube	2
57875 D	Tie Rod Adjustable Ball Seat	2
59279 D	Front Axle Extension Clamp	4
59280 D	Front Axle Extension Clamp Pin	2
70120 D	Steering Worm Wheel Shaft Nut	1
354800 R92	Front Axle Center	1
356749 R1	Steering Worm Wheel Shaft	1
356554 R1	Steering Gear Arm	1
356609 R1	Steering Knuckle Post Bushing	4
103027	Hex Nut, 7/16" N.F.	2
103030	Hex Nut, 5/8" N.F.	4
103322	Lockwasher, 7/16"	2
103325	Lockwasher, 5/8"	4
103368	Cotter Pin, 1/8 x 1-3/4"	1
103389	Cotter Pin, 1/8 x 2"	2
108630	Cotter Pin, 1/8 x 7/8"	2
109454		
OR	Front Axle Pivot Lubricator	5
110347		
114499	Hex Jam Nut	2
124553	Steering Worm Wheel Shaft Key	1
181403	Cap Screw, 7/16 x 1-3/4" N.F. Hex Head	2

§ - Not Supplied Separately

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
[illegible] DBX	DRAWBAR, COMPLETE	
[illegible] DB	DRAWBAR	1
[illegible] D	DRAWBAR PLATE, L.H.	1
[illegible] D	DRAWBAR PLATE, R.H.	1
10220 P	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 16 GAUGE	1
[illegible] R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 18 GAUGE	1
[illegible] R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 14 GAUGE	1
49-1[illegible] DX	DISTRIBUTOR GEAR COVER, COMPLETE	
§ 49-1[illegible] D	DISTRIBUTOR GEAR COVER	1
49417 D	DISTRIBUTOR GEAR COVER FELT RETAINER	1
49418 D	DISTRIBUTOR GEAR COVER FELT SEAL	1
49-19 D	DISTRIBUTOR GEAR COVER GASKET	1
[illegible] DB	SEAT SPRING, L.H. COMPLETE	
§ [illegible]773 DB	SEAT SPRING	1
§ [illegible]777 D	SEAT SPRING CLAMP PLATE, L.H.	1
§ 50379 D	SEAT SPRING SUPPORT PLATE	1
10-102	RIVET, 5/16 X 1-3/8" ROUND HEAD	2
[illegible] DB	SEAT SPRING, R.H. COMPLETE	
§ [illegible] DB	SEAT SPRING	1
§ [illegible]78 D	SEAT SPRING CLAMP PLATE, R.H.	1
§ 50479 D	SEAT SPRING SUPPORT PLATE	1
10-102	RIVET, 5/16 X 1-3/8" ROUND HEAD	2
50619 DX	DIST ILLATE-GASOLINE BURNING ATTACHMENT	
	(SAME AS 58375 DC EXCEPT-)	
[illegible]1148 DX	HOOD WITH BRACKET (INSTEAD OF 58145 DX)	1
[illegible]2892 DX	FUEL PIPE WITH TWO NUTS, 29899 D (INSTEAD OF 58138 DX)	1
[illegible]0943 DX	BATTERY BOX WITH COVER, COMPLETE	
50937 DX	BATTERY BOX COVER WITH CLIP AND RETAINER	1
50939 DX	BATTERY BOX COVER HOLD-DOWN SCREW WITH HEAD	2
50943 D	BATTERY BOX	1
[illegible]1690 D	BATTERY HOLD-DOWN RUBBER	4
[illegible]5127	WING NUT, 1/4" N.C.	2
[illegible] 591	WASHER, 9/32" I.D. X 5/8" O.D. X No. 18 GAUGE	2
[illegible]1005 DX	STARTING CRANK BRACKET	
[illegible]098 D	RADIATOR GRILLE FASTENER SPRING	1
§ 51004 D	RADIATOR GRILLE LOWER FASTENER PLATE	1
§ [illegible]005 D	STARTING CRANK BRACKET	1
104051	RIVET, 1/8 X 1/4" ROUND HEAD	2

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
51110 DX	RADIATOR GRILLE, COMPLETE	
§ 43654 D	RADIATOR GRILLE STIFFENER	2
§ 48973 D	RADIATOR GRILLE SCREEN	1
30937 D	RADIATOR GRILLE FASTENER	3
§ 51110 D	RADIATOR GRILLE	1
§ 51113 D	STARTING CRANK HOLE REINFORCEMENT	1
§ 51237 D	GRILLE SCREEN STIFFENER STRIP CLIP	14
§ 51264 D	GRILLE SCREEN CENTER CLIP	3
51149 DBX	RADIATOR, COMPLETE	
43983 D	RADIATOR CAP	1
47232 DA	MOUNTING STUD	2
47240 D	RADIATOR PAD	2
§ 51149 DB	RADIATOR, COMPLETE, LESS CAP AND STUDS	1
103027	HEX NUT, 7/16" N.F. (CADMIUM PLATED)	2
103322	LOCKWASHER, 7/16"	2
51361 D	CYLINDER SLEEVE WITH PISTON	
§ 6075 D	CYLINDER SLEEVE	1
§ 8123 DA	PISTON	1
§ 24414 DB	PISTON PIN	1
OR		
365043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
43276 D	PISTON RING, 1/4" (OIL CONTROL)	1
35651 H	PISTON PIN RETAINER RING	2
51362 D	CYLINDER SLEEVE WITH PISTON	
§ 6075 D	CYLINDER SLEEVE	1
§ 8122 DA	PISTON	1
§ 24414 DB	PISTON PIN	1
OR		
365043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
43276 D	PISTON RING, 1/4" (OIL CONTROL)	1
35651 H	PISTON PIN RETAINER RING	2
51582 DBX	BRAKE BAND, COMPLETE	
47851 DA	BRAKE BAND LINING	1
§ 51582 DB	BRAKE BAND	1
§ 51583 D	BRAKE BAND ROD	1
355775 R1	BRAKE BAND LINING RIVET	12

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
51777 DA	CYLINDER SLEEVE WITH PISTON	
§ 6075 D	CYLINDER SLEEVE	1
§ 6742 DB	PISTON	1
§ 24414 DB	PISTON PIN	1
OR		
365043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
32030 DA	PISTON RING, 1/4" (OIL CONTROL)	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
35651 H	PISTON PIN RETAINER RING	2
51999 DX	BATTERY TO AMMETER CABLE, COMPLETE WITH LOOM	
27377 D	BATTERY TO AMMETER CABLE LOOM	1
27618 D	CABLE LOOM CLAMP RING	1
38433 D	BATTERY CABLE TERMINAL	1
38777 D	BATTERY CABLE TERMINAL WITH BOLT AND NUT (NEGATIVE)	1
§ 51999 1/2 D	BATTERY TO AMMETER CABLE	1
52963 DX	RADIATOR GRILLE, COMPLETE	
§ 43654 D	RADIATOR GRILLE STIFFENER	2
§ 48975 D	RADIATOR GRILLE SCREEN	1
50957 D	RADIATOR GRILLE FASTENER	3
§ 51113 D	STARTING CRANK HOLE REINFORCEMENT	1
§ 51237 D	RADIATOR GRILLE SCREEN STIFFENER STRIP CLIP	14
§ 51264 D	RADIATOR GRILLE SCREEN CENTER CLIP	3
§ 52963 D	RADIATOR GRILLE	1
52980 DX	STARTING CRANK BRACKET	
50958 D	RADIATOR GRILLE FASTENER SPRING	1
§ 52980 D	STARTING CRANK BRACKET	1
§ 52981 D	RADIATOR GRILLE LOWER FASTENER SPRING BRACKET	1
104051	RIVET, 1/8 X 1/4" ROUND HEAD	2
53276 D	BATTERY STRAP SPACER, COMPLETE	
53274 D	BATTERY STRAP SPACER CLIP	2
53275 D	BATTERY STRAP SPACER BLOCK	2
	SCREW, NO. 7 X 3/8" SELF-TAPPING (FLAT HEAD)	2
53517 DAX	POWER TAKE-OFF SHIFTER LEVER SHAFT, COMPLETE	
53515 D	POWER TAKE-OFF SHIFTER LEVER	1
53517 DA	POWER TAKE-OFF SHIFTER LEVER SHAFT	1
103397	COTTER PIN, 5/32 x 1-1/4"	1
Q 3478	WASHER, 25/32" I.D. X 1-1/4" O.D. X NO. 14 GAUGE	1

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
54141 D	FIELD CHANGE PACKAGE FOR REAR WHEEL, R.H. AND REAR AXLE SHAFT	
8329 DA	REAR WHEEL, R.H.	1
54128 D	REAR AXLE SHAFT, R.H.	1
161421	CAP SCREW, 9/16 X 2-1/2" N.F. HEX HEAD	2
161477	CAP SCREW, 5/8 x 1-1/4" N.F. HEX HEAD	1
FS 161451	MACHINE BOLT, 5/8 X 2-3/4"	4
220080	HEX NUT, 5/8" N.C.	4
103324	LOCKWASHER, 9/16"	2
103325	LOCKWASHER, 5/8"	4
54281 D	CYLINDER SLEEVE WITH PISTON	
§ 6075 D	CYLINDER SLEEVE	1
§ 8327 DA	PISTON	1
§ 24414 DB	PISTON PIN	1
OR		
36043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
32030 DA	PISTON RING, 1/4" (OIL CONTROL)	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
35651 H	PISTON PIN RETAINER RING	2
54282 D	CYLINDER SLEEVE WITH PISTON	
§ 6075 D	CYLINDER SLEEVE	1
§ 8326 DA	PISTON	1
§ 24414 DB	PISTON PIN	1
OR		
36043 R1	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
24434 D	CYLINDER SLEEVE PACKING RING	1
32030 DA	PISTON RING, 1/4" (OIL CONTROL)	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
35651 H	PISTON PIN RETAINER RING	2
55408 D	POWER TAKE-OFF SAFETY SHIELD ATTACHMENT	
6614 DAX	BELT PULLEY DRIVE HOUSING, COMPLETE	1
43670 D	BELT PULLEY DRIVE HOUSING END PLUG	1
48084 D	BELT PULLEY DRIVE HOUSING GASKET	1
55398 DA	POWER TAKE-OFF SAFETY SHIELD, COMPLETE	1
55402 D	POWER TAKE-OFF DRIVE HOUSING STUD	2
79830	CAP SCREW, 3/8 X 7/8" N.C. HEX HEAD	2
220067	HEX NUT, 7/16"	4
103321	LOCKWASHER, 3/8"	2
103322	LOCKWASHER, 7/16"	4
55409 D	POWER TAKE-OFF SAFETY SHIELD ATTACHMENT	
6629 DA	POWER TAKE-OFF COVER	1
48084 D	BELT PULLEY DRIVE HOUSING GASKET	1
55402 D	POWER TAKE-OFF DRIVE HOUSING STUD	2
55403 DA	POWER TAKE-OFF SAFETY SHIELD, COMPLETE	1
220067	HEX NUT, 7/16" N.C.	4
103322	LOCKWASHER, 7/16"	4

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
55460 DC	Double Front Wheel Attachment	
6787 DEX	Front Wheel, Complete	2
43463 D	Front Wheel Oil Seal	2
48976 DA	Front Wheel Rim Clamp	6
49115 D	Front Wheel Hub Cap	2
49116 D	Front Wheel Hub Cap Gasket	2
55453 D	Front Axle Felt Washer	2
55461 DD	Front Axle with Bolster, Complete	1
[illegible]31 H	Front Wheel Inner Bearing Cone (Optional with 352387 R91 or 353517 R91)	2
351556 R92	Front Wheel Rim (3.00 D-15 D.C. Rim)	2
13823 V	Front Wheel Outer Bearing Cone (Optional with 352388 R91 or 353518 R91)	2
179814	Cap Screw, 5/16 x 5/8" N.C. Hex Head	6
102649	Hex Nut, 5/8" N.F. Slotted	2
103320	Lockwasher, 5/16"	6
Q 1538	Steel Washer, 21/32" I.D. x 1-1/4" O.D. x No. 12 Gauge	2
103387	Cotter Pin, 1/8 x 1-1/2"	2
55461 DD	Front Axle with Bolster, Complete	
§ 8624 DC	Front Wheel Bolster	1
§ 55452 DA	Front Axle	1
55454 D	Front Axle Dust Deflector	2
	Rivet, 1/2 x 1-7/8" Round Head	4
55781 D	Battery Strap Spacer, Complete	
51772 D	Battery Strap Spacer Clip	2
53275 D	Battery Strap Spacer Block	2
	Screw, No. 7 X 3/8" Self-tapping (Flat Head)	2
56066 DA	Distributor, Complete	
6483 DAY	Distributor Body, Complete	
47417 DX	Rotor Pinion with Plug	1
49416 DX	Distributor Gear Cover, Complete	1
49420 DX	Distributor Spindle Core with Distributor Gear (24 Teeth)	1
132760	Screw, No. 8-32 X 1/2" Round Head Slotted (Cadmium Plated)	2
121841	Lockwasher, No. 8 (Cadmium Plated)	2
56618 DA	Flywheel Ring Gear Attachment	
8638 DEX	Clutch Housing	1
48554 D	Starter Pad Cover	1
351217 R12	Flywheel with Ring Gear	1
103323	Lockwasher, 1/2" N.C.	2
179877	Cap Screw, 1/2 x 5/8" N.C.	2
56631 DA	Driven Member, Complete	
§ 56632 D	Spring Retainer, Inner	1
§ 56635 D	Silencer Spring	5
§ 56636 D	Spacer	3
§ 56637 D	Spring Washer	1
§ 56638 D	Clutch Plate	1
§ 57065 D	Splined Center	1
§ 65824 HA	Spring Retainer, Outer	1
72209 H	Rivet	3
§ 72210 H	Friction Washer	1
§ 20096 V	Facing	4
§ 20097 V	Facing	4
53795 V	Tubular Rivet	22

§ - Not Supplied Separately

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
57097 DD	ADJUSTABLE DOUBLE FRONT WHEEL ATTACHMENT	
9350 DX	ADJUSTABLE FRONT WHEEL	2
43463 D	FRONT WHEEL OIL SEAL	2
49115 D	FRONT WHEEL HUB CAP	2
49116 D	FRONT WHEEL HUB CAP GASKET	2
55453 D	FRONT AXLE FELT WASHER	2
55461 DD	FRONT AXLE AND BOLSTER COMPLETE	1
57095 D	FRONT WHEEL RIM WITH CLAMPS (3.00 x 15)	2
54631 A	FRONT WHEEL INNER BEARING CONE (OPTIONAL WITH 353287 R91 OR 353517 R91)	2
Q 1533	WASHER, 21/32" I.D. x 1-1/4" O.D. x No. 12 GA.	2
13823 V	FRONT WHEEL OUTER BEARING CONE (OPTIONAL WITH 353285 R91 OR 353515 R91)	2
102649	HEX SLOTTED NUT, 5/8" N.F.	2
103320	LOCKWASHER, 5/16"	6
103323	LOCKWASHER, 1/2"	6
103387	COTTER PIN, 1/8 x 1-1/2"	2
120371	HEX NUT, 1/2" N.F. (CADMIUM PLATED)	6
179814	CAP SCREW, 5/16 x 5/8" N.C. HEX HEAD	6
181707	CAP SCREW, 1/2 x 2-1/4" N.F. HEX HEAD (CADMIUM PLATED)	6
57581 DA	FIELD CHANGE PACKAGE FOR CLUTCH HOUSING DUST SEALS	
57576 DX	CLUTCH HOUSING HAND HOLE COVER WITH FELT	1
57578 DX	CLUTCH HOUSING HAND HOLE COVER BAR WITH WELDING BOLT	1
57579 DX	CLUTCH HOUSING DUST COVER WITH SPRING	1
354909 R1	CLUTCH HOUSING COVER WITH FELT, 57575 D	1
179812	CAP SCREW, 5/16 x 1/2" N.C. HEX HEAD	2
179819	CAP SCREW, 5/16 X 1-1/8" N.C. HEX HEAD	2
103127	WING NUT, 1/4" N.C.	1
103320	LOCKWASHER, 5/16"	2
111891	TUBULAR RIVET, 1/8 X 5/32"	2
57868 DB	STEERING KNUCKLE WITH POST	
§ 43460 DC	STEERING KNUCKLE	1
43462 D	STEERING KNUCKLE DUST DEFLECTOR	1
43463 D	FRONT WHEEL OIL SEAL	1
49118 DA	FRONT WHEEL FELT WASHER	1
§ 57867 DA	STEERING KNUCKLE POST	1
57926 DX	COIL, COMPLETE WITH END INSULATORS	
§ 25977 D	PRIMARY LEADOUT TUBE	1
§ 27534 D	SECONDARY LEADOUT INSULATION STICKER	1
§ 47440 DA	COIL WINDING, COMPLETE	1
47442 D	PRIMARY TO CONDENSER LEADOUT TUBE	1
§ 47445 D	SECONDARY LEADOUT TERMINAL	1
§ 47446 D	SECONDARY LEADOUT TERMINAL INSULATOR	2
§ 47447 D	SECONDARY TERMINAL PATCH	1
§ 47448 D	TERMINAL ANCHORING STRIP	1
§ 49448 D	PRIMARY TO CONDENSER LEADOUT TERMINAL	1
49593 D	COIL END INSULATORS	2
§ 51465 D	COIL INSULATION REINFORCING PATCH	2
§ 51466 D	COIL BINDING TAPE	1
§ 57926 D	COIL, COMPLETE	1
133495	SCREW, NO. 8-32 X 5/8" FLAT HEAD (SLOTTED)	2
§ - NOT SUPPLIED SEPARATELY		

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
58124 DBX	RADIATOR, COMPLETE - LESS CAP	
§ 6561 D	RADIATOR TANK LOWER STUD BLOCK	2
§ 6562 D	RADIATOR INLET ELBOW	1
§ 6563 D	RADIATOR OUTLET ELBOW	1
§ 47223 DA	RADIATOR CORE, COMPLETE	1
47232 DA	RADIATOR MOUNTING STUD (NOT ASSEMBLED)	2
§ 47235 D	RADIATOR TOP TANK BAFFLE	1
§ 47239 DB	RADIATOR OVERFLOW PIPE	1
47240 D	RADIATOR PAD	2
§ 49095 D	RADIATOR FILLER NECK	1
§ 50796 D	RADIATOR TANK LOWER	1
§ 50797 D	RADIATOR TANK UPPER	1
§ 58125 D	RADIATOR SIDE CHANNEL, L.H.	1
§ 58126 D	RADIATOR SIDE CHANNEL, R.H.	1
§ 58127 D	RADIATOR SIDE CHANNEL BRACE	4
§ 58128 D	RADIATOR GUSSET PLATE	2
§ 61291 D	RADIATOR TOP TANK WEAR PLATE	1
350359 R1	RIVET, 9/64 x 13/32" TRUSS HEAD, COPPER	11
120370	HEX NUT, 7/16" N.F. (CADMIUM PLATED)	2
103322	LOCKWASHER, 7/16"	2
58139 DAX	RADIATOR GRILLE, COMPLETE	
§ 43654 D	RADIATOR GRILLE STIFFENER	2
§ 48975 D	RADIATOR GRILLE SCREEN	1
§ 51113 D	STARTING CRANK HOLE REINFORCEMENT	1
§ 51237 D	GRILLE SCREEN STIFFENER STRIP CLIP	14
§ 51264 D	GRILLE SCREEN CENTER CLIP	3
§ 58139 DA	RADIATOR GRILLE	1
58140 DAX	RADIATOR GRILLE, COMPLETE	
§ 43654 D	RADIATOR GRILLE STIFFENER	2
§ 48975 D	RADIATOR GRILLE SCREEN	1
§ 51113 D	STARTING CRANK HOLE REINFORCEMENT	1
§ 51237 D	GRILLE SCREEN STIFFENER STRIP CLIP	14
§ 51264 D	GRILLE SCREEN CENTER CLIP	3
§ 58140 DA	RADIATOR GRILLE	1
58275 DC	KEROSENE OR DISTILLATE BURNING ATTACHMENT	
6743 DA	EXHAUST PIPE	1
6744 DDX	EXHAUST AND INTAKE MANIFOLD, COMPLETE	1
6366 DA	MANIFOLD HEAT VALVE	1
48616 DC	CARBURETOR	1
48892 DB	MANIFOLD HEAT SHIELD	1
49230 DX	GASOLINE TANK WITH CAP, 23995 DB	1
51419 DB	RADIATOR SHUTTER ATTACHMENT	1
51495 DCX	FUEL STRAINER WITH TWO COUPLING NUTS, 29899 D	1
51496 DAX	GASOLINE TANK SHUT-OFF NEEDLE VALVE	1
51497 DAX	FUEL PIPE WITH TWO NUTS, 29899 D	1
51778 DA	SET OF FOUR CYLINDER SLEEVES WITH PISTONS	1
52521 DA	MANIFOLD HEAT VALVE SHAFT	1
57339 D	MANIFOLD HEAT VALVE PIN	1
58138 DX	FUEL PIPE WITH TWO NUTS, 29899 D	1
58145 DX	HOOD WITH BRACKET	1
60754 D	HOOD CLAMP, R.H., REAR WITH BRACKET	1
93032 H	MANIFOLD HEAT SHIELD STUD NUT	3

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
58846 DXA	DRAWBAR, COMPLETE	
§ 58846 D	DRAWBAR	1
§ 55240 D	DRAWBAR PLATE, L.H.	1
§ 55241 D	DRAWBAR PLATE, R.H.	1
10620 P	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 16 GAUGE	1
352440 R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 18 GAUGE	1
352441 R1	WASHER, 21/32" I.D. x 1-1/2" O.D. x No. 14 GAUGE	1
60321 D	FIELD CHANGE PACKAGE	
49605 DA	GOVERNOR CONTROL ROD GUIDE	1
55757 DA	CRANKING MOTOR PUSH ROD	1
55758 DA	CRANKING MOTOR PUSH ROD BRACKET	1
61340 D	HEAT INDICATOR ATTACHMENT	
6764 DAX	WATER INLET ELBOW WITH 1/2" PIPE PLUG	1
46871 D	WATER INLET ELBOW GASKET	1
51510 D	REDUCING BUSHING	1
53031 D	WASHER (SHAKEPROOF 1112)	2
53619 DB	HEAT INDICATOR GAUGE	1
53620 D	HEAT INDICATOR BRACKET	1
62585 D	MAGNETO GROUNDING SWITCH ATTACHMENT	
48340 DA	SHORT CIRCUITING TERMINAL	1
48342 DA	SHORT CIRCUITING TERMINAL LOCKWASHER	1
54207 D	MAGNETO IGNITION SWITCH	1
55679 D	MAGNETO IGNITION SWITCH CABLE WITH TERMINAL AND SLEEVE	1
56506 D	MAGNETO IGNITION SWITCH BRACKET	1
56507 D	MAGNETO IGNITION SWITCH BRACKET WASHER	1
58262 D	MAGNETO IGNITION SWITCH CABLE CLIP	1
132100	SCREW, NO. 10-32 X 5/16" N.F. SLOTTED (FILLISTER HEAD) (CADMIUM PLATED)	1
131183	LOCKWASHER, NO. 10 (CADMIUM PLATED)	1
62600 DA	CLUTCH, COMPLETE - LESS DRIVEN MEMBER	
63153 D	PRESSURE PLATE	1
63154 D	CLUTCH BRACKET	1
63156 D	RETURN SPRING STOP	3
63157 D	ADJUSTING SCREW WASHER	3
63160 D	PRESSURE SPRING	3
63161 D	PIVOT PIN	3
64771 D	RETURN SPRING	3
69904 D	CLUTCH LEVER	3
69905 D	ADJUSTING SCREW	3
114493	HEX JAM NUT, 5/16" N.F.	3

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
63059 DE	TRANSMISSION, COMPLETE WITH DIFFERENTIAL	
6578 DBX	DIFFERENTIAL BALL BEARING RETAINER WITH OIL SEAL, 46282 D	2
5846 DBX	TRANSMISSION CASE	1
§ 6425 D	SPLINE SHAFT BEARING RETAINER	1
OR		
§ 355000 R1	SPLINE SHAFT BEARING RETAINER	1
18507 D	DIFFERENTIAL BALL BEARING (OPTIONAL WITH ST 202)	2
30308 D	TRANSMISSION SPLINE SHAFT BALL BEARING, REAR (OPTIONAL WITH ST 205A)	1
23874 D	TRANSMISSION BALL BEARING (OPTIONAL WITH ST 212)	1
42177 D	TRANSMISSION SPLINE SHAFT OIL SEAL	1
43262 DA	COUNTERSHAFT WASHER	1
43262 DA	TRANSMISSION DRIVE FLANGE WASHER	1
43277 D	TRANSMISSION SPLINE SHAFT BALL BEARING, FRONT (OPTIONAL WITH ST 246)	1
43548 D	TRANSMISSION DRIVE FLANGE	1
46060 D	TRANSMISSION CASE REAR COVER PLATE	1
46062 D	DIFFERENTIAL BALL BEARING RETAINER SHIM, LIGHT	4
46063 D	DIFFERENTIAL BALL BEARING RETAINER SHIM, MEDIUM	2
46064 D	DIFFERENTIAL BALL BEARING RETAINER SHIM, HEAVY	2
46385 DA	DIFFERENTIAL CASE WITH GEAR AND RIVETS	1
46503 D	SPLINE SHAFT BEARING RETAINER GASKET	1
47279 DA	TRANSMISSION CASE COVER GASKET	1
47281 D	COUNTERSHAFT BEARING CAGE	1
47282 D	COUNTERSHAFT BEARING CAGE RETAINER	1
47283 D	COUNTERSHAFT BEARING CAGE GASKET	1
47284 D	COUNTERSHAFT BEARING CAGE SHIM, LIGHT	2
47285 D	COUNTERSHAFT BEARING CAGE SHIM, MEDIUM	1
47286 D	COUNTERSHAFT BEARING CAGE SHIM, HEAVY	1
49298 D	COUNTERSHAFT AND BEVEL PINION	1
49339 D	COUNTERSHAFT ROLLER BEARING (OPTIONAL WITH 355501 R1)	1
50492 D	DIFFERENTIAL BALL BEARING RETAINER SHIM, FINE	3
50493 D	COUNTERSHAFT BEARING CAGE SHIM, FINE	3
58338 D	FIRST SPEED GEAR SPACER	1
50815 R1	DIFFERENTIAL GEAR	2
50817 R1	DIFFERENTIAL PINION	2
60589 D	TRANSMISSION CASE REAR COVER PLATE GASKET	1
49297 DBX	TRANSMISSION SPLINE SHAFT WITH BUSHING, 43268 D	1
60984 D	TRANSMISSION DRIVE FLANGE KEY	1
95022 H	DIFFERENTIAL PINION SHAFT LOCK PIN	1
351058 R11	REVERSE IDLER GEAR, WITH BUSHING, 51177 DR	1
351059 R1	FIRST SPEED GEAR	1
351060 R1	SECOND SPEED GEAR	1
351061 R1	THIRD SPEED GEAR	1
351062 R1	FOURTH SPEED GEAR	1
351063 R11	REVERSE SPLINE GEAR WITH OIL RETAINER	1
351064 R1	1ST AND 2ND SPEED SLIDING GEAR	1
351065 R1	3RD AND 4TH SPEED SLIDING GEAR	1
351816 R1	REVERSE IDLER SHAFT	1
354643 R11	TRANSMISSION OILER GEAR	1
1094 Y	DIFFERENTIAL PINION SHAFT	1
179839	CAP SCREW, 3/8 X 1" N.C. HEX HEAD	2
179841	CAP SCREW, 3/8 X 1-1/4" N.C. HEX HEAD	3
181395	CAP SCREW, 7/16 X 1" N.F. HEX HEAD	1
179858	CAP SCREW, 7/16 X 1" N.C. HEX HEAD	13
181397	CAP SCREW, 7/16 X 1-1/4" N.F. HEX HEAD	1
103026	HEX NUT, 3/8" N.F.	1
103027	HEX NUT, 7/16" N.F.	6
103321	LOCKWASHER, 3/8"	6
103322	LOCKWASHER, 7/16"	21
§ - NOT SUPPLIED SEPARATELY		

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
63781 D	FIELD CHANGE PACKAGE FOR PULLEY HOUSING OIL SEALING	
58419 D	BELT PULLEY DRIVE HOUSING SEALING RING	1
60582 D	BELT PULLEY DRIVE HOUSING SHIM, LIGHT	2
63778 D	POWER TAKE-OFF DRIVE SHAFT BEARING RETAINER	1
63779 D	POWER TAKE-OFF DRIVE SHAFT BEARING CAGE GASKET	1
63780 D	BELT PULLEY DRIVE HOUSING SEALING RING RETAINER	1
114606	POWER TAKE-OFF DRIVE SHAFT BEARING RETAINER BOLT WASHER	3
66191 D	P.T.O. STANDARDIZATION PACKAGE	
66184 D	P.T.O. SHAFT	1
66185 D	DRAWBAR EXTENSION	1
179954	CAP SCREW, 3/4 x 2-1/2" N.C. HEX HEAD	2
114821	HEX NUT, 3/4" N.C.	2
103326	LOCKWASHER, 3/4"	2
60417 D	HEADLIGHT AND REAR LIGHT TERMINAL PLATE, COMPLETE	
75407 H	HEADLIGHT AND REAR LIGHT TERMINAL PLATE	1
75406 H	HEADLIGHT AND REAR LIGHT TERMINAL PLATE SPRING	1
121749	SLOTTED SCREW, No. 8-32 x 5/16" ROUND HEAD (CADMIUM PLATED)	2
136530	LOCKWASHER, No. 8 INTERNAL TOOTH (CADMIUM PLATED)	2
69904 DX	CLUTCH LEVER PACKAGE	
69904 D	CLUTCH LEVER	3
69905 D	ADJUSTING SCREW	3
114493	HEX JAM NUT, 5/16" N.F.	3
69961 D	CARBURETOR REPAIR KIT PACKAGE (MARVEL SCHEBLER)	
69920 D	FLOAT LEVER SHAFT	1
69922 D	THROTTLE SHAFT STOP AND LEVER ASSEMBLY	1
69923 D	IDLE ADJUSTING NEEDLE	1
69924 D	THROTTLE SHAFT PACKING	1
69924 D	CHOKER SHAFT PACKING	2
69926 D	ECONOMIZER JET	1
69928 D	POWER JET	1
69929 D	IDLE JET	1
69930 D	THROTTLE SHAFT CUP	1
69931 D	CHOKER SHAFT PACKING RETAINER	1
69931 D	THROTTLE SHAFT PACKING RETAINER	1
69954 D	IDLE NEEDLE SPRING	1
69955 D	CHOKER LEVER SPRING	1
69956 D	FLOAT VALVE, SEAT AND GASKET ASSEMBLY	1
69957 D	GASKET ASSORTMENT	1
69959 D	POWER JET	1
69964 D	GASKET ASSORTMENT	1
69969 D	ECONOMIZER JET	1
352701 R1	CHOKER BUTTERFLY SCREW	2
352701 R1	THROTTLE BUTTERFLY SCREW	2
352705 R1	POWER JET	1
353507 R1	POWER JET	1

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
[illegible] DB	HEAVY DUTY FRONT AXLE ATTACHMENT (SPECIAL) ("A" ONLY)	
[illegible] DAX	FRONT AXLE CENTER, COMPLETE	1
[illegible] DAX	STEERING GEAR HOUSING BASE, COMPLETE	1
9143 DAX	FRONT AXLE EXTENSION, L.H., COMPLETE	1
9142 DAX	FRONT AXLE EXTENSION, R.H., COMPLETE	1
[illegible]0 DCXA	STEERING KNUCKLE, COMPLETE	2
[illegible] D	STEERING KNUCKLE DUST DEFLECTOR	2
[illegible] D	FRONT WHEEL OIL SEAL	2
[illegible] DC	STEERING KNUCKLE ARM, L.H.	1
[illegible] DC	STEERING KNUCKLE ARM, R.H.	1
[illegible] DB	STEERING KNUCKLE ARM SET SCREW	2
[illegible] D	TIE ROD BALL SEAT	2
[illegible] D	TIE ROD CLAMP	2
[illegible] DR	STEERING WORM WHEEL SHAFT BUSHING	x
[illegible] D	STEERING WORM WHEEL OIL SEAL	1
[illegible] DA	TIE ROD END, COMPLETE	2
[illegible] DA	FRONT WHEEL FELT WASHER	2
[illegible] DA	TIE ROD	2
[illegible] DA	TIE ROD TUBE, COMPLETE	2
[illegible] D	TIE ROD ADJUSTABLE BALL SEAT	2
[illegible] D	FRONT AXLE STOP SPRING	2
[illegible]-DR	FRONT AXLE PIVOT BUSHING	x
[illegible] D	FRONT AXLE CLAMP BOLT	4
[illegible] DX	FRONT AXLE PIVOT SHAFT, COMPLETE	1
[illegible] DA	FRONT AXLE STOP SPRING RETAINER	2
[illegible] D	STEERING GEAR ARM	1
[illegible] H	FRONT WHEEL INNER BEARING CONE	2
[illegible] H	FRONT WHEEL BEARING INNER, COMPLETE	2
109454		
OR	STEERING KNUCKLE POST LUBRICATOR FITTING	4
110347		
109454		
OR	FRONT AXLE PIVOT LUBRICATOR FITTING, FRONT	1
110347		
109454		
OR	TIE ROD LUBRICATOR FITTING	2
110347		
[illegible]		
OR	FRONT AXLE PIVOT LUBRICATOR FITTING, REAR	1
110309		
350609 R1	STEERING KNUCKLE POST BUSHING	x
181403	CAP SCREW, 7/16 x 1-3/4" N.F. HEX HEAD	2
181407	CAP SCREW, 7/16 x 2-1/4" N.F. HEX HEAD	1
175885	CAP SCREW, 1/2 x 1-1/2" N.C. HEX HEAD	6
175891	CAP SCREW, 1/2 x 2-1/2" N.C. HEX HEAD	2
117310	SLOTTED SCREW, 3/8 x 1-1/2" N.C. FILLISTER HEAD	2
103027	HEX NUT, 7/16" N.F.	3
103030	HEX NUT, 5/8" N.F.	4
114498	HEX JAM NUT, 5/8" N.F.	2
114499	HEX JAM NUT, 3/4" N.F.	2
102649	HEX SLOTTED NUT, 5/8" N.F.	2
103322	LOCKWASHER, 7/16"	3
103323	LOCKWASHER, 1/2"	6
103325	LOCKWASHER, 5/8"	4
Q 1535	STEEL WASHER, 1-1/4" O.D. x 21/32" I.D. x No. 12 GA.	2
103386	COTTER PIN, 1/8 x 1-1/4"	2
103389	COTTER PIN, 1/8 x 2"	2
		X - AS REQUIRED

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
15350 EX	MANIFOLD SEALS IMPROVEMENT PACKAGE	
15351 E	PACKING CLAMP	1
15352 E	HEAT SHAFT GASKET CLAMP	1
15353 E	HEAT SHAFT GASKET CAP	1
15354 E	PACKING WASHER	1
15355 E	HEAT SHAFT GASKET	1
71913 H	REGULATOR SCREW, 3/8 x 1-3/4"	1
13000 R1	HEX NUT, 1/4" N.C.	1
353076 R1	BRAIDED ASBESTOS YARN, 1/16 x 21" LONG (GARLOCK NO. 1700)	1
102874	SET SCREW, 1/4 x 1" N.C. (CUP POINT)	1
251587 R92	CRANKSHAFT (STANDARD)	
6502 DA	FAN DRIVE PULLEY	1
24[illegible]0 D	FLYWHEEL DOWEL PIN	1
43291 D	CLUTCH PILOT BUSHING	1
§ 35[illegible]8 R1	CRANKSHAFT	1
127559	CRANKSHAFT DRIVE PINION KEY (1/4 x 3/4")	1
127559	FAN DRIVE PULLEY KEY (1/4 x 3/4")	1
251589 R91	FAN DRIVE PULLEY, COMPLETE	
6502 DA	FAN DRIVE PULLEY	1
139797	FAN DRIVE PULLEY SET SCREW (3/8" - 16 x 1" N.C. SOCKET HEAD DOG POINT)	1
218438	FAN DRIVE PULLEY SET SCREW JAM NUT (3/8" - 16" N.C.)	1
251645 R91	FAN HUB AND PLUG, COMPLETE	
70200 D	FAN BEARING GASKET	1
70206 D	OIL RETAINING SCREW	1
70207 D	FAN HUB GASKET	1
70208 D	OIL RETAINING SCREW GASKET	1
251647 R91	SPINDLE AND BEARING, COMPLETE	
70200 D	FAN BEARING GASKET	1
70204 D	FAN BEARING CAP	1
70207 D	FAN HUB GASKET	1
70209 D	LOCK NUT	1

§ - NOT SUPPLIED SEPARATELY

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
350603 R91	STEERING KNUCKLE, COMPLETE	
§ 43460 DC	STEERING KNUCKLE	1
43462 D	STEERING KNUCKLE DUST DEFLECTOR	1
43463 D	FRONT WHEEL OIL SEAL	1
49118 DA	FRONT WHEEL FELT WASHER	1
§ 350605 R1	STEERING KNUCKLE POST	1
350604 R91	STEERING KNUCKLE, COMPLETE	
§ 43460 DC	STEERING KNUCKLE	1
43462 D	STEERING KNUCKLE DUST DEFLECTOR	1
43463 D	FRONT WHEEL OIL SEAL	1
49118 DA	FRONT WHEEL FELT WASHER	1
§ 350606 R1	STEERING KNUCKLE POST	1
351655 R11	EXHAUST AND INTAKE MANIFOLD, COMPLETE	
G 8603	CARBURETOR STUD	2
46102 D	MANIFOLD HEAT SHIELD AND STUD	3
46202 D	EXHAUST PIPE STUD	2
103865	PIPE PLUG, 1/8" SQUARE HEAD	1
107317	DRAIN HOLE PLUG (USED WITH MUFFLER ATTACHMENT)	2
172540	EXHAUST AND INTAKE MANIFOLD PLUG	2
§ 351655 R1	EXHAUST AND INTAKE MANIFOLD	1
351808 R91	REAR AXLE DRIVE GEAR AND HUB ASSEMBLY	
§ 351809 R1	REAR AXLE DRIVE GEAR	1
§ 351810 R1	REAR AXLE DRIVE GEAR HUB	1
16257 R1	RIVET, 5/16 x 1-1/8" ROUND HEAD	6
352036 R91	LUBRICATING OIL PUMP BODY, COMPLETE	
6096 DX	OIL PUMP BODY, COMPLETE	1
§ 43412 D	OIL PUMP DRIVE SHAFT	1
G 1123	OIL PUMP SHAFT SPIRAL GEAR PIN	1
27999 H	OIL PUMP BODY GEAR RETAINER	1
358615 R1	OIL PUMP BODY GEAR	1
352057 R1	OIL PUMP SHAFT SPIRAL GEAR	1
103905	OIL PUMP BODY GEAR KEY	1
103905	OIL PUMP SHAFT SPIRAL GEAR KEY	1
352085 R92	LUBRICATING OIL PUMP, COMPLETE	
6098 D	OIL PUMP COVER	1
43414 D	OIL PRESSURE SPRING	1
43415 D	OIL PUMP BODY COVER GASKET	X
56108 D	OIL PUMP SCREEN ASSEMBLY	1
35631 H	OIL PUMP IDLER GEAR	1
357648 R1	OIL PRESSURE VALVE	1
179816	CAP SCREW, 5/16 x 3/4" N.C.	4
103320	LOCKWASHER, 5/16"	4
103386	COTTER PIN, 1/8 x 1-1/4"	1

§ – NOT SUPPLIED SEPARATELY — X – AS REQUIRED

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
352715 R94	CRANKCASE, COMPLETE	
§ 8073 DA	CRANKSHAFT BEARING CAP - FRONT AND CENTER	2
§ 8074 DA	CRANKSHAFT BEARING CAP - REAR	1
15545 D	CLUTCH HOUSING DOWEL	2
357937 R1	CRANKSHAFT BEARING CAP BOLT	6
24433 D	CYLINDER HEAD STUD	9
30638 D	CRANKSHAFT BEARING CAP BOLT LOCK	6
43439 DBR	DISTRIBUTOR GEAR BUSHING	1
50410 DA	OIL HEADER PLUG	3
251066 R1	CRANKCASE FRONT COVER STUD	1
251067 R1	HYDRAULIC PUMP PAD COVER	1
350708 R1	HYDRAULIC PUMP PAD COVER GASKET	1
§ 354858 R2	CRANKCASE	1
356315 R1	SET OF FOUR CYLINDER SLEEVES WITH PISTONS	1
12456 R1	PIPE PLUG, 1/4" COUNTERSUNK (CRANKCASE OIL HEADER)	2
103321	LOCKWASHER, 3/8"	2
103866	PIPE PLUG, 1/4" SQUARE HEAD (OIL DRAIN PLUG FOR FILTER)	1
172576	EXPANSION PLUG, 1-5/8"	1
172592	EXPANSION PLUG, 2"	1
179837	CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD	2
352757 R92	.030 UNDERSIZE CRANKSHAFT AND BEARING FIELD PACKAGE	
6502 DA	FAN DRIVE PULLEY	1
24550 D	FLYWHEEL DOWEL PIN	1
356305 R11	CONNECTING ROD BEARING (TWO HALVES)	4
43291 D	CLUTCH PILOT BUSHING	1
§ 356309 R1	CRANKSHAFT	1
50861 DB	CRANKSHAFT BEARING, REAR (TWO HALVES)	1
50862 DB	CRANKSHAFT BEARING, FRONT AND CENTER (TWO HALVES)	2
127559	FAN DRIVE PULLEY KEY (1/4 x 3/4")	1
353051 R91	OIL SEAL SERVICE PACKAGE	
§ 353050 R1	OIL SEAL	1
§ 353052 R1	OIL SEAL RETAINER WASHER, OUTER	1
§ 353053 R1	OIL SEAL RETAINER WASHER, INNER	1
§ 353054 R1	FLANGE ADAPTER SHIM	1
E4A305	ARMATURE SHIM, LIGHT	2
E4212	ARMATURE SHIM, MEDIUM	2
E4A372	ARMATURE SHIM, HEAVY	2
353077 R91	CLUTCH LEVER, COMPLETE	
51457 D	CLUTCH LEVER WITH ADJUSTING SCREW, 51459 D AND HEX JAM NUT, 114494	3
51460 D	CLUTCH LEVER PIN	3
51461 D	CLUTCH LEVER SPRING	3
103372	COTTER PIN, 3/32 x 1/2"	3
§ - NOT SUPPLIED SEPARATELY		

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
353197 R91	INSTRUMENT PANEL, COMPLETE	
27383 D	CABLE CLAMP	1
30711 DX	SWITCH TO REAR LIGHT CABLE LOOM	1
358562 R91	AMMETER TO CRANKING MOTOR CABLE COMPLETE WITH LOOM	1
50929 DCX	INSTRUMENT PANEL WITH TRANSFER	1
50930 DX	INSTRUMENT PANEL COVER WITH BOLT	1
51063 DA	INSTRUMENT PANEL SCREW	1
51998 D	CABLE HARNESS	1
52062 D	INSTRUMENT PANEL GROMMET	1
1994019	LIGHTING SWITCH	1
57312 D	LIGHTING SWITCH MOUNTING NUT	1
57313 D	LIGHTING SWITCH KNOB	1
358575 R91	AMMETER TO SWITCH CABLE WITH TWO INSULATORS, 28500 H	1
64022 H	LIGHTING SWITCH KNOB SCREW	1
§ 250366 R92	AMMETER (AC)	1
OR		
§ 354472 R91	AMMETER (ROCHESTER)	1
106653	FUSE (20 AMPS.)	1
103092	HEX NUT, NO. 8-32	2
103025	HEX NUT, 5/16" N.F.	1
106496	LOCKWASHER, NO. 8	3
103320	LOCKWASHER, 5/16"	1
141706	LOCKWASHER, 11/16" INTERNAL TOOTH	1
353198 R91	INSTRUMENT PANEL, COMPLETE	
30711 DX	SWITCH TO REAR LIGHT CABLE	1
50930 DX	INSTRUMENT PANEL COVER	1
51063 DA	INSTRUMENT PANEL SCREW	2
51998 D	CABLE HARNESS	1
52062 D	INSTRUMENT PANEL GROMMET	1
57312 D	LIGHTING SWITCH MOUNTING NUT	1
57313 D	LIGHTING SWITCH KNOB	1
358575 R91	SWITCH TO FUSE BLOCK CABLE	1
51262 DX	INSTRUMENT PANEL WITH TRANSFER	1
1994027	LIGHTING SWITCH	1
7472 H	FUSE BLOCK	1
64022 H	LIGHTING SWITCH KNOB SCREW	1
10815 V	FUSE	2
100751	SLOTTED SCREW, NO. 8-32 x 1/2" N.C.	1
103092	HEX NUT, NO. 8-32 TYPE "F"	1
103092	HEX NUT, NO. 8-32 TYPE "F"	2
103025	HEX NUT, 5/16" N.F.	1
106496	LOCKWASHER, NO. 8	4
103320	LOCKWASHER, 5/16"	1
141706	LOCKWASHER, 11/16" INTERNAL TOOTH	1
353246 R91	CLUTCH LEVER, COMPLETE	
51460 D	CLUTCH LEVER PIN	3
51461 D	CLUTCH LEVER SPRING	3
[illegible] R91	CLUTCH LEVER WITH ADJUSTING SCREW, 353745 R1 AND HEX JAM NUT, 11-454	3
103372	COTTER PIN, 3/32 x 1/2"	3
§ - NOT SUPPLIED SEPARATELY		

DETAILS OF ASSEMBLY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
353744 R91	STANDARD SIZE CRANKSHAFT WITH BEARINGS, COMPLETE	
24550 D	FLYWHEEL DOWEL PIN	1
35578 DBX	CONNECTING ROD BEARING (2 HALVES)	4
43291 D	CLUTCH PILOT BUSHING	1
§ 46402 DC	CRANKSHAFT	1
50859 DA	CRANKSHAFT BEARING, REAR (2 HALVES)	1
50860 DB	CRANKSHAFT BEARING, FRONT AND CENTER (2 HALVES) (STANDARD)	2
353938 R91	BATTERY IGNITION PACKAGE	
16868 D	DISTRIBUTOR MOUNTING CLIP	1
46168 DB	DISTRIBUTOR DRIVE HOUSING GASKET	1
56683 D	SWITCH TO AMMETER CABLE	1
62801 DA	BATTERY IGNITION SWITCH	1
251553 R1	SPARK PLUG CABLE NIPPLE	4
353870 R91	BATTERY IGNITION UNIT	1
179840	CAP SCREW, 3/8 x 1-1/8" (CADMIUM PLATED)	2
179846	CAP SCREW, 3/8 x 1-7/8" (CADMIUM PLATED)	1
103321	LOCKWASHER, 3/8" (CADMIUM PLATED)	2
354474 R91	VALVE GRINDING GASKET PACKAGE	
24520 D	CARBURETOR GASKET	1
43294 D	FAN BRACKET GASKET	1
43353 DD	CYLINDER HEAD GASKET	1
43378 DB	VALVE COVER GASKET	1
62866 D	VALVE COVER STUD NUT WASHER	2
352014 R1	INTAKE AND EXHAUST MANIFOLD GASKET	2
354763 R91	CARBURETOR OVERHAUL PACKAGE	
12433 D	LOWER PLUG WASHER (GASOLINE)	1
12433 D	MAIN JET ADJUSTMENT WASHER (KEROSENE OR DISTILLATE)	1
12435 D	MAIN JET WASHER	1
12455 D	THROTTLE STOP SCREW	1
12469 D	DRIP PLUG INNER WASHER	1
21210 D	AIR SHUTTER AND THROTTLE SHAFT PACKING WASHER	3
24520 D	CARBURETOR GASKET	1
30593 D	IDLE ADJUSTING SCREW	1
30594 D	IDLE ADJUSTING SCREW SPRING	1
31847 D	MAIN DISCHARGE JET WASHER (FOR MODEL 161)	1
31858 D	PLATE SCREW	4
40534 D	DRIP PLUG FELT	1
40535 D	DRIP PLUG OUTER WASHER	1
42191 D	AIR SHUTTER AND THROTTLE SHAFT PACKING RETAINER	3
53782 D	FUEL VALVE, COMPLETE (NO. 25)	1
53788 DA	BOWL TO BODY GASKET	1
53792 D	FUEL VALVE WASHER	1
53794 D	MAIN DISCHARGE JET WASHER (FOR MODEL 61)	1
53796 D	FILTER SCREEN	1
53797 D	THROTTLE SHAFT HOLE PLUG	1
62170 D	THROTTLE SHAFT WITH LEVER	1
62174 D	FLOAT AXLE	1
106497	BOWL TO BODY SCREW LOCKWASHER, NO. 10	4
132119	BOWL TO BODY SCREW, NO. 10-32 x 5/8" (CADMIUM PLATED)	4
426217	PLATE SCREW LOCKWASHER, NO. 5	4

§ - NOT SUPPLIED SEPARATELY

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
354895 R92	CRANKCASE, COMPLETE	
§ 8073 DA	CRANKSHAFT BEARING CAP - FRONT AND CENTER	2
§ 8074 DA	CRANKSHAFT BEARING CAP - REAR	1
357232 R1	CLUTCH HOUSING DOWEL	2
357937 R1	CRANKSHAFT BEARING CAP BOLT	6
24433 D	CYLINDER HEAD STUD	9
30638 D	CRANKSHAFT BEARING CAP BOLT LOCK	6
43439 DBR	DISTRIBUTOR GEAR BUSHING	1
50410 DA	OIL HEADER PLUG	3
351066 R1	CRANKCASE FRONT COVER STUD	1
351067 R1	HYDRAULIC PUMP PAD COVER	1
350708 R1	HYDRAULIC PUMP PAD COVER GASKET	1
§ 354898 R2	CRANKCASE	1
12486 R1	PIPE PLUG, 1/4", COUNTERSUNK (CRANKCASE OIL HEADER)	2
103321	LOCKWASHER, 3/8"	2
103866	PIPE PLUG, 1/4" SQUARE HEAD (OIL DRAIN PLUG FOR FILTER)	1
172576	EXPANSION PLUG, 1-5/8"	1
172552	EXPANSION PLUG, 2"	1
179837	CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD	2
355931 R91	AIR CLEANER, COMPLETE	
52871 D	OIL CUP	1
52872 D	OIL CUP RETAINING CLAMP	1
355934 R91	BODY	1
356311 R91	STANDARD SIZE CRANKSHAFT WITH BEARINGS, COMPLETE	
50859 DA	CRANKSHAFT MAIN BEARING, REAR	1
50860 DB	CRANKSHAFT MAIN BEARING, FRONT AND CENTER	2
356304 R11	CONNECTING ROD BEARING	4
§ 356308 R11	CRANKSHAFT	1
356316 R91	CYLINDER SLEEVE WITH PISTON, COMPLETE (GASOLINE OR DISTILLATE)	
§ 6074 DB	PISTON	1
24414 DB	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
43276 DA	PISTON RING, 1/4" (OIL REGULATING)	1
35651 H	PISTON PIN RETAINER RING	2
§ 356317 R1	CYLINDER SLEEVE	1
354881 R1	CYLINDER SLEEVE PACKING RING	1
§ - NOT SUPPLIED SEPARATELY		

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
356552 R91	Steering Gear Arm and Shaft Service Package	
7x120 C	Steering Worm Wheel Shaft Nut	1
356549 R1	Steering Worm Wheel Shaft	1
356554 R1	Steering Gear Arm	1
103388	Cotter Pin, 1/8 x 1-3/4"	1
134553	Steering Worm Wheel Shaft Key	1
356553 R91	Steering Gear Arm and Shaft Service Package (Same as 356552 R91 Except -)	
356555 R1	Steering Gear Arm (Instead of 356554 R1)	1
356642 R91	Cylinder Sleeve with Piston, Complete (Same as 356316 R91 Except -)	
§ 351524 R1	Piston (Instead of § 6074 DB)	1
356643 R91	Cylinder Sleeve with Piston, Complete (Same as 356316 R91 Except -)	
§ 351597 R1	Piston (Instead of § 6074 DB)	1
356647 R91	Cylinder Sleeve with Piston, Complete (Same as 359037 R91 Except -)	
§ 351598 R1	Piston (Instead of § 6742 DC)	1
356654 R91	Cylinder Sleeve with Piston, Complete (Same as 356316 R91 Except -)	
§ 351528 R1	Piston (Instead of § 6074 DB)	1
356655 R91	Cylinder Sleeve with Piston, Complete (Same as 356316 R91 Except -)	
§ 351609 R1	Piston (Instead of § 6074 DB)	1
356656 R91	Cylinder Sleeve with Piston, Complete (Same as 359037 R91 Except -)	
§ 351610 R1	Piston (Instead of § 6742 DC)	1
356692 R92	Ignition Cable Service Package	
251553 R1	Distributor Cap Terminal Nipple	4
356686 R92	Coil to Distributor Cable (Secondary)	1
§ 356692 R92	Set of Spark Plug Cables	1
§ - Not Supplied Separately		

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
356745 R91	GOVERNOR ASSEMBLY PACKAGE	
6339 DAX	MAGNETO AND GOVERNOR PINION WITH PIN (33 TEETH)	1
6340 DAX	GOVERNOR HOUSING, COMPLETE	1
6507 DA	GOVERNOR ROCKSHAFT ARM	1
12736 D	GOVERNOR SEAL	1
28078 D	GOVERNOR BUMPER SPRING	1
31804 D	GOVERNOR BUMPER SPRING BODY	1
357432 R1	GOVERNOR SPEED CHANGE LEVER STOP	1
43481 D	GOVERNOR THRUST BALL BEARING (AETNA ED-2293)	1
OR		
55314 D	GOVERNOR THRUST BALL BEARING (NICE 5971)	1
43482 D	GOVERNOR ROCKSHAFT SEAL	1
43483 D	GOVERNOR ROCKSHAFT SEAL RETAINER	1
45875 D	GOVERNOR HOUSING GASKET	1
46924 D	GOVERNOR WEIGHT PIN	2
46943 DA	GOVERNOR ROCKSHAFT	1
46944 DA	GOVERNOR SPRING	1
46947 DAX	GOVERNOR SPEED CHANGE LEVER WITH SHAFT	1
46949 D	GOVERNOR SPEED CHANGE LEVER SHAFT SEAL	1
46950 D	GOVERNOR SPEED CHANGE LEVER SHAFT SEAL RETAINER	1
49218 DA	GOVERNOR SHAFT BUMPER SPRING	1
49219 DA	GOVERNOR SHAFT BUMPER PIN	1
49325 D	GOVERNOR THRUST SLEEVE	1
50046 D	GOVERNOR BUMPER SPRING BODY CAP	1
51491 DA	GOVERNOR SPRING LEVER	1
54041 D	GOVERNOR HOUSING BOLT	1
351778 R1	GOVERNOR WEIGHT	2
352522 R1	GOVERNOR ROCKSHAFT LEVER	1
355476 R1	GOVERNOR SPRING LEVER WASHER	1
103319	LOCKWASHER, 1/4"	1
103320	LOCKWASHER, 5/16"	5
106958	GOVERNOR ROCKSHAFT ARM KEY (WOODRUFF NO. 1, 1/16 x 1/2")	1
108628	COTTER PIN, 1/16 x 7/8"	2
114494	HEX JAM NUT, 3/8" N.F.	1
114495	HEX JAM NUT, 7/16" N.F.	1
114606	LOCKWASHER, 3/8" (EXTERNAL TOOTH)	1
142485	GOVERNOR ROCKSHAFT LEVER PIN (GROOVE PIN, 1/8 x 5/8")	1
179796	CAP SCREW, 1/4 x 7/8" N.C. HEX HEAD	1
179821	CAP SCREW, 5/16 x 1-3/8" N.C. HEX HEAD	2
179829	CAP SCREW, 5/16 x 2-3/4" N.C. HEX HEAD	2
218438	HEX NUT, 3/8" N.C.	1
356936 R91	GENERATOR, COMPLETE	
46412 D	GENERATOR RELAY	1
356937 R91	GENERATOR	1
356938 R91	CABLE, GENERATOR "A" TERMINAL TO GROUND	1
356939 R91	CABLE, GENERATOR "F" TERMINAL TO RELAY "F" TERMINAL	1
120391	WASHER, 7/32" I.D. x 1/2" O.D. x No. 18 GA. (CADMIUM PLATED)	2
132900	SLOTTED SCREW, NO. 10-32 x 3/8" ROUND HEAD (CADMIUM PLATED)	2
138479	LOCKWASHER, NO. 10 (EXTERNAL TOOTH) (CADMIUM PLATED)	2

PART NUMBER	DESCRIPTION	NO. USED PER ASSEMBLY
359035 R91	CRANKCASE, COMPLETE	
§ 8073 DA	CRANKSHAFT BEARING CAP - FRONT AND CENTER	2
§ 8074 DA	CRANKSHAFT BEARING CAP - REAR	1
357232 R1	CLUTCH HOUSING DOWEL	2
357937 R1	CRANKSHAFT BEARING CAP BOLT	6
24433 D	CYLINDER HEAD STUD	9
30638 D	CRANKSHAFT BEARING CAP BOLT LOCK	6
43439 DBR	DISTRIBUTOR GEAR BUSHING	1
50410 DA	OIL HEADER PLUG	3
251066 R1	CRANKCASE FRONT COVER STUD	1
251067 R1	HYDRAULIC PUMP PAD COVER	1
350708 R1	HYDRAULIC PUMP PAD COVER GASKET	1
§ 354898 R2	CRANKCASE	1
359036 R91	SET OF FOUR CYLINDER SLEEVES WITH PISTONS	1
12456 R1	PIPE PLUG, 1/4" COUNTERSUNK (CRANKCASE OIL HEADER)	2
103321	LOCKWASHER, 3/8"	2
103866	PIPE PLUG, 1/4" SQUARE HEAD (OIL DRAIN PLUG FOR FILTER)	1
172576	EXPANSION PLUG, 1-5/8"	1
172592	EXPANSION PLUG, 2"	1
175837	CAP SCREW, 3/8 x 3/4" N.C. HEX HEAD	2
359037 R91	CYLINDER SLEEVE WITH PISTON, COMPLETE (KEROSENE)	
	(FOR CRANKCASE, § 354898 R2)	
24414 DB	PISTON PIN	1
24416 DA	PISTON RING, 1/8" (PLAIN COMPRESSION)	2
32030 DA	PISTON RING, 3/16" (OIL REGULATING)	1
35493 D	PISTON RING, 1/8" (TAPER COMPRESSION)	1
35651 H	PISTON PIN RETAINER RING	2
§ 6742 DC	PISTON	1
354881 R1	CYLINDER SLEEVE PACKING RING	1
§ 356317 R1	CYLINDER SLEEVE	1
§ - NOT SUPPLIED SEPARATELY		

MEMORANDA

NUMERICAL INDEX

NUMERICAL INDEX

PART NUMBER	PAGE
No.	
1 222	54
1 230	54
1 538	105
43 375	9
57 097	191
100 660	23
100 661	64
100 751	60
100 765	149
100 767	149
102 649	105
102 649	106
102 649	107
102 874	147
102 892	149
102 896	53
102 896	58
102 896	59
102 896	64
102 896	66
102 896	68
102 897	95
102 953	25
103 024	32
103 024	49
103 024	58
103 024	73
103 024	82
103 025	59
103 025	66
103 025	73
103 025	79
103 025	100
103 025	118
103 025	120
103 025	121
103 025	149
103 026	10
103 026	49
103 026	58
103 026	77
103 026	85
103 026	91
103 026	118
103 026	119
103 026	120
103 026	121
103 026	149
103 027	85
103 027	91
103 027	93
103 027	94
103 027	98
103 027	99
103 027	105
103 028	101
103 028	104
103 028	112
103 028	145
103 030	98
103 030	100
103 030	105
103 030	106
103 030	122
103 030	123
103 030	125
103 030	126
103 031	173
103 032	106
103 032	110
103 047	50
103 047	65
103 088	149
103 092	59
103 092	60
103 092	67
103 101	23
103 127	66
103 127	84
103 319	13
103 319	33
103 319	49
103 319	58
103 319	60
103 319	73
103 319	88
103 319	137
103 319	145
103 319	149
103 320	13
103 320	14
103 320	20
103 320	21
103 320	27
103 320	29
103 320	33
103 320	49
103 320	50
103 320	53
103 320	58
103 320	59
103 320	60
103 320	64
103 320	65
103 320	66
103 320	73
103 320	79
103 320	81
103 320	82
103 320	84
103 320	88
103 320	95
103 320	97
103 320	98
103 320	100
103 320	109
103 320	112
103 320	118
103 320	120
103 320	121
103 320	137
103 320	139
103 320	142
103 320	145
103 320	149
103 320	173
103 321	10
103 321	13
103 321	14
103 321	22
103 321	39
103 321	45
103 321	49
103 321	50
103 321	58
103 321	60
103 321	66
103 321	67
103 321	73
103 321	75
103 321	77
103 321	85
103 321	87
103 321	88
103 321	89
103 321	90
103 321	91
103 321	94
103 321	97
103 321	101
103 321	112
103 321	119
103 321	120
103 321	121
103 321	127
103 321	137
103 321	139
103 321	142
103 321	149
103 321	153
103 321	154
103 321	155
103 321	156
103 321	157
103 321	159
103 321	163
103 321	165
103 321	168
103 321	171
103 322	74
103 322	87
103 322	88
103 322	90
103 322	91
103 322	93
103 322	94
103 322	98
103 322	99
103 322	101
103 322	105
103 322	153
103 322	154
103 322	155
103 322	156
103 322	157
103 322	159
103 322	160
103 322	163
103 322	164
103 322	167
103 322	171
103 322	172
103 323	53
103 323	58
103 323	65
103 323	68
103 323	69
103 323	83
103 323	84
103 323	98
103 323	99
103 323	101
103 323	104
103 323	106
103 323	110
103 323	112
103 323	119
103 323	123
103 323	125
103 323	145
103 323	174
103 324	115

NUMERICAL INDEX

PART NUMBER	PAGE
103 324	116
103 325	83
103 325	84
103 325	95
103 325	97
103 325	98
103 325	100
103 325	105
103 325	106
103 325	113
103 325	115
103 325	116
103 325	117
103 325	122
103 325	123
103 325	125
103 325	126
103 325	176
103 325	177
103 326	123
103 326	125
103 326	126
103 326	165
103 326	173
103 326	175
103 329	51
103 340	14
103 340	49
103 340	60
103 340	66
103 340	67
103 340	73
103 341	25
103 345	115
103 345	116
103 345	117
103 372	74
103 372	79
103 372	81
103 372	147
103 372	149
103 373	67
103 373	85
103 373	118
103 373	137
103 374	50
103 374	65
103 383	147
103 383	149
103 384	85
103 385	120
103 385	147
103 385	149
103 385	173
103 386	20
103 386	105
103 386	106
103 387	107
103 387	118
103 389	99
103 389	104
103 396	84
103 397	154
103 397	160
103 397	164
103 397	168
103 397	172
103 462	100
103 494	32
103 496	118
103 865	21
103 865	25
103 865	98
103 865	144
103 865	154
103 865	156
103 865	165
103 865	169
103 866	14
103 866	100
103 867	91
103 867	98
103 867	100
103 868	14
103 868	142
103 868	145
103 869	21
103 869	137
103 873	14
103 876	89
103 876	91
103 876	95
103 876	154
103 876	156
103 876	165
103 876	169
103 883	39
103 884	154
103 884	155
103 884	159
103 884	160
103 884	164
103 884	168
103 884	172
103 905	50
103 905	65
104 036	32
104 038	118
104 051	74
104 086	118
104 102	120
104 268	95
104 937	93
104 940	91
106 496	59
106 496	60
106 496	67
106 497	23
106 497	31
106 497	64
106 498	23
106 653	63
106 653	69
106 749	47
106 958	33
107 317	25
107 317	142
107 761	79
107 763	79
108 628	34
108 629	19
108 630	105
108 635	97
108 635	101
108 685	107
108 686	144
109 354	101
109 454	104
109 461	84
109 461	97
109 461	98
109 461	99
109 461	104
109 461	106
109 462	101
110 309	106
110 347	104
110 501	59
110 501	67
110 634	59
110 634	67
110 637	87
111 871	84
112 139	97
112 723	52
114 492	82
114 493	14
114 493	82
114 494	32
114 494	81
114 495	34
114 496	119
114 498	23
114 498	104
114 499	100
114 499	104
114 606	33
114 606	163
114 606	171
114 616	47
114 774	53
114 774	58
114 774	65
114 774	69
114 774	110
114 774	174
114 820	176
114 820	177
114 821	123
114 821	125
114 821	126
114 821	165
114 821	175
115 109	136
117 175	106
117 310	99
117 890	41
117 989	99
117 993	93
119 512	97
119 512	98
119 512	99
119 512	106
120 214	39
120 217	39
120 217	42
120 217	46
120 217	48
120 217	65
120 217	69
120 370	74
120 371	110
120 371	112
120 371	113
120 391	50
120 391	65
120 393	39
120 611	39
120 614	39
120 614	48
120 614	65
120 614	69
120 622	40
120 622	46
120 622	48
120 702	73
121 749	52
121 749	53
121 832	41

NUMERICAL INDEX

PART NUMBER	PAGE
121 832	46
121 841	40
121 841	41
121 841	42
121 841	43
121 841	45
121 841	46
121 841	47
121 841	48
121 841	54
121 841	68
122 403	97
124 060	136
125 750	137
125 947	41
127 559	14
127 559	18
127 800	85
127 800	118
131 043	46
131 181	46
131 183	43
131 395	136
131 949	40
131 949	41
131 954	48
131 979	48
131 992	47
131 997	45
132 100	43
132 119	31
132 760	45
132 900	50
132 900	65
132 926	39
133 482	46
133 495	48
137 130	32
137 130	68
138 479	50
138 479	65
138 530	51
138 530	52
138 530	53
138 553	42
138 553	43
139 797	19
140 707	67
142 309	52
142 309	60
142 309	69
142 485	33
142 485	137
142 494	25
144 000	89
144 000	91
144 000	95
144 000	154
144 000	156
144 000	165
144 000	169
172 528	9
172 531	33
172 540	25
172 558	91
172 576	13
172 592	13
173 464	47
179 791	149
179 793	137
179 793	145
179 795	13
179 796	33
179 803	88
179 812	84
179 812	121
179 812	137
179 812	173
179 814	14
179 814	95
179 814	98
179 814	100
179 814	109
179 814	112
179 816	20
179 816	50
179 816	66
179 816	81
179 816	82
179 816	87
179 816	139
179 817	13
179 817	21
179 817	27
179 817	29
179 817	49
179 817	53
179 817	58
179 817	60
179 817	64
179 818	50
179 818	65
179 818	139
179 819	84
179 821	33
179 821	142
179 822	21
179 822	49
179 822	58
179 829	33
179 833	60
179 837	14
179 837	60
179 837	67
179 837	73
179 837	75
179 837	77
179 837	93
179 837	94
179 837	97
179 837	121
179 837	127
179 837	137
179 837	144
179 837	154
179 837	159
179 837	163
179 837	165
179 837	167
179 837	168
179 837	171
179 838	50
179 838	66
179 838	119
179 838	153
179 838	156
179 838	159
179 838	163
179 838	171
179 839	87
179 839	89
179 839	94
179 839	121
179 840	22
179 840	39
179 841	49
179 841	58
179 841	87
179 841	88
179 841	155
179 841	157
179 842	45
179 845	21
179 846	39
179 847	144
179 848	22
179 849	101
179 849	112
179 858	90
179 858	91
179 860	154
179 860	159
179 860	164
179 860	167
179 860	171
179 861	93
179 862	93
179 862	101
179 866	93
179 872	167
179 873	164
179 873	171
179 877	84
179 883	68
179 883	98
179 885	83
179 885	84
179 885	99
179 885	123
179 885	125
179 887	83
179 887	84
179 891	106
179 893	110
179 925	97
179 932	85
179 933	83
179 933	84
179 935	100
179 954	123
179 954	126
179 954	165
179 971	60
180 073	39
180 078	39
181 326	49
181 326	58
181 331	73
181 333	79
181 336	121
181 339	118
181 341	118
181 345	97
181 345	100
181 360	77
181 360	119
181 360	121
181 361	120
181 364	67
181 364	68
181 364	119
181 364	139
181 364	149
181 370	119
181 374	142
181 395	87
181 395	153
181 395	154
181 395	156

NUMERICAL INDEX

PART NUMBER	PAGE
181 395	159
181 395	160
181 395	163
181 395	164
181 395	167
181 395	171
181 395	172
181 397	88
181 403	105
181 406	93
181 406	94
181 406	99
181 407	98
181 407	99
181 413	98
181 425	119
181 461	115
181 461	116
181 477	95
181 482	126
181 486	126
181 487	98
181 487	100
181 487	126
181 488	122
181 488	123
181 488	125
181 488	126
181 490	98
181 515	173
181 707	110
181 707	112
186 292	154
186 292	156
186 292	159
186 292	163
186 292	167
186 292	171
186 304	73
186 312	49
186 312	58
217 220	73
218 438	19
218 438	25
218 438	33
218 438	53
218 438	58
218 438	59
218 438	64
218 438	66
218 438	68
218 438	142
218 440	118
220 063	51
220 064	33
220 065	27
220 065	29
220 065	50
220 065	65
220 066	10
220 066	49
220 066	50
220 066	60
220 066	66
220 066	95
220 067	25
220 067	155
220 067	157
220 067	160
220 068	110
220 068	112
220 080	113
220 080	115
220 080	116
220 080	117
220 080	177
426 217	30
426 652	46
436 652	46
436 690	40
436 692	46
436 692	47
814 545	54
1 864 099	54
1 873 326	54
1 873 327	54
1 878 070	54
1 882 012	54
1 882 013	54
1 994 019	54
1 994 019	57
1 994 019	63
1 994 021	54
1 994 036	54
1 994 038	54

B

PART NUMBER	PAGE
B 92 1/2	85
29 821 B	110

D

PART NUMBER	PAGE
D 2 616	87
4 097 DA	13
5 125 D	142
5 630 DX	113
5 631 DX	113
6 075 D	15
6 088 DR	11
6 089 DA	10
6 096 DX	21
6 096 DY	180
6 098 D	20
6 100 D	13
6 101 D	13
6 102 D	13
6 116 D	84
6 339 DAX	33
6 340 DAX	33
6 340 DAX	180
6 400 DA	85
6 401 DAX	93
6 425 DX	88
6 432 DA	22
6 482 DAY	47
6 482 DAY	180
6 483 DAY	45
6 483 DAY	180
6 502 DA	19
6 507 DA	33
6 515 DAX	47
6 515 DAX	180
6 530 DDX	98
6 532 DAX	98
6 532 DEX	98
6 532 DEX	181
6 532 DEY	98
6 532 DEY	181
6 569 D	118
6 570 DX	118
6 578 DBX	91
6 579 DBX	91
6 579 DBY	91
6 594 DX	94
6 614 DAX	154
6 614 DAX	156
6 614 DAX	181
6 615 DX	154
6 615 DX	159
6 615 DX	181
6 629 DA	159
6 660 DA	97
6 660 DAX	97
6 674 D	48
6 701 DA	176
6 701 DA	177
6 716 DAX	10
6 743 DA	25
6 744 DDX	25
6 744 DDX	181
6 744 DDY	25
6 744 DDY	181
6 764 DAX	137
6 779 DA	14
6 787 DEX	109
6 787 DEX	181
6 788 D	174
6 812 D	50
6 812 D	64
6 813 D	53
6 813 D	58
6 813 D	64
6 816 DA	33
6 816 DB	33
6 816 DBX	33
6 818 D	175
6 823 DDX	93
6 823 DDY	93
6 823 DDY	182
6 827 DBX	93
6 830 DCX	83
6 830 DCY	84
6 832 DAX	87
6 852 DX	97
6 866 D	25
6 866 DA	25
6 866 DAX	25
6 866 DAX	132
6 866 DAX	182
8 105 DX	91
8 106 DCX	93
8 106 DCX	182
8 116 DC	118
8 161 D	137
8 257 D	155
8 257 D	157
8 257 D	165
8 257 D	168
8 324 D	101
8 325 DX	101
8 329 DX	100
8 330 DCX	100
8 330 DCX	182
8 331 D	110
8 333 D	110
8 529 D	115
8 529 DA	115
8 529 DAX	115
8 529 DAX	182
8 616 D	142
8 624 DCX	106
8 638 DEX	84
8 638 DEY	84
8 639 D	64

NUMERICAL INDEX

PART NUMBER	PAGE
8 732 D	42
8 732 D	43
8 734 D X	110
8 734 D X	112
8 734 D X	182
8 778 D A X	84
8 793 D	116
8 796 D	99
8 846 D B X	91
8 846 D B X	183
8 846 D B Y	91
8 846 D B Y	183
8 894 D A X	93
9 052 D X A	10
9 052 D X A	183
9 052 D Y A	10
9 057 D A X	106
9 058 D B X	106
9 059 D B X	106
9 061 D A X	99
9 090 D X	163
9 090 D X	167
9 091 D C X	164
9 091 D C X	167
9 091 D C X	171
9 092 D	171
9 189 D	49
9 189 D	58
9 190 D	49
9 190 D	58
9 191 D	49
9 191 D	58
9 350 D X	112
9 350 D X	183
9 442 D X	97
9 442 D X	100
9 529 D	173
9 637 D	87
9 800 D X	93
9 801 D X	94
9 855 D A X	19
12 428 D	31
12 433 D	31
12 435 D	31
12 455 D	31
12 469 D	30
12 795 D	28
13 047 D A	14
13 136 D	89
13 194 D	78
13 722 D	87
13 727 D	35
13 728 D	35
15 017 D	94
15 204 D	19
16 067 D A	10
16 825 D	31
17 564 D	78
17 565 D A	78
17 581 D	154
17 581 D	160
17 741 D	32
18 392 D	173
18 393 D	173
18 395 D	173
18 397 D	173
18 398 D	173
18 511 D	101
18 567 D	83
19 496 D	33
19 963 D	25
20 075 D	73
21 210 D	30

PART NUMBER	PAGE
21 210 D	31
21 314 D X	46
21 341 D	46
21 350 D X A	45
21 372 D	48
21 388 D B X	46
21 393 D	47
21 394 D	41
21 394 D	46
21 409 D B	47
21 526 D	25
22 063 D	64
23 740 D	106
23 740 D	110
23 742 D	106
23 743 D	106
23 760 D	110
23 762 D X	110
23 977 D A	77
23 995 D A	77
24 412 D X	18
24 413 D	18
24 414 D B	15
24 415 D	18
24 416 D A	15
24 425 D	13
24 430 D	14
24 433 D	13
24 434 D	15
24 520 D	28
24 520 D	30
24 523 D	25
24 523 D	48
24 523 D	77
24 523 D	119
24 529 D B	23
24 537 D A	10
24 541 D	10
24 544 D A	10
24 550 D	18
24 550 D	91
24 550 D	93
24 564 D A	9
24 603 D	48
24 630 D	22
25 086 D A	99
25 957 D A	22
26 080 D A	58
26 080 D B	49
26 086 D	58
26 480 D	85
27 311 D	47
27 383 D	63
27 383 D	64
27 385 D	64
27 387 D	57
27 387 D	58
27 387 D	64
27 618 D	58
27 618 D	64
28 078 D	34
28 309 D	49
28 309 D	58
28 318 D	22
28 318 D X	23
28 821 D A	23
29 205 D	58
29 205 D	64
29 888 D	31
29 899 D	77
29 899 D	78
29 951 D	18
30 593 D	30

PART NUMBER	PAGE
30 594 D	30
30 638 D	14
30 700 D	64
30 711 D X	57
30 711 D X	58
30 711 D X	63
30 711 D X	64
30 718 D X A	81
30 926 D F X	18
30 926 D F Y	18
31 453 D	109
31 804 D	34
31 847 D	30
31 858 D	30
32 030 D A	15
32 032 D X A	45
32 984 D A	23
35 493 D	15
35 514 D	31
37 063 D	52
37 064 D	52
37 067 D	52
37 072 D	52
37 075 D	52
37 730 D	136
37 886 D	150
37 890 D	150
37 891 D	150
37 892 D	150
37 893 D	150
37 895 D A	150
37 896 D A	150
38 609 D A	45
38 777 D	65
38 778 D	65
39 184 D	65
39 276 D	65
39 604 D A	150
39 622 D	151
39 625 D	151
39 626 D	151
39 627 D	151
39 652 D	128
39 653 D	128
39 656 D	129
39 656 D X	128
39 659 D	128
39 659 D	129
39 665 D	128
39 800 D	128
40 534 D	30
40 535 D	30
40 541 D A	128
40 542 D	128
40 546 D	128
40 553 D	128
40 555 D A	128
40 613 D	150
40 616 D	150
40 617 D A	150
40 833 D	113
40 833 D	183
41 058 D A	87
41 096 D B R	97
41 335 D	77
41 359 D	33
42 024 D	11
42 025 D A	11
42 026 D	10
42 040 D	10
42 098 D	10
42 099 D A	9
42 177 D	88

NUMERICAL INDEX

PART NUMBER	PAGE
42 183 D	110
42 191 D	30
42 191 D	31
42 383 DC	63
42 383 DC	65
42 800 D	151
42 802 D	151
42 806 D	151
42 807 D	151
42 808 D	151
42 809 D	151
42 810 D	151
42 811 D	151
42 812 D	151
42 813 D	151
43 233 D	93
43 240 D	94
43 244 D	95
43 245 D	95
43 249 D	14
43 262 DA	88
43 262 DA	89
43 262 DA	154
43 262 DA	155
43 262 DA	157
43 262 DA	159
43 262 DA	160
43 262 DA	163
43 262 DA	164
43 262 DA	165
43 262 DA	167
43 262 DA	168
43 262 DA	171
43 262 DA	172
43 268 D	87
43 272 DB	88
43 276 DA	15
43 283 D	94
43 286 DA	16
43 286 DA	132
43 287 DA	16
43 287 DA	184
43 291 D	18
43 293 D	23
43 294 D	22
43 353 DD	10
43 363 DBX	9
43 363 DBY	9
43 364 DBX	9
43 364 DBY	9
43 365 DBX	9
43 365 DBY	9
43 366 DBX	10
43 366 DBY	10
43 373 D	9
43 374 D	9
43 378 DB	9
43 379 DAXA	9
43 412 DR	21
43 414 D	20
43 415 D	20
43 417 DX	35
43 418 D	35
43 439 DBR	13
43 440 D	109
43 440 D	112
43 441 D	107
43 441 D	111
43 445 D	13
43 446 D	13
43 447 D	13
43 448 D	13
43 455 DR	104
43 457 DBXB	21
43 457 DCX	21
43 458 D	21
43 462 D	105
43 463 D	105
43 463 D	111
43 464 DC	104
43 465 DC	104
43 466 DB	104
43 468 D	104
43 470 D	99
43 470 D	104
43 481 D	33
43 482 D	33
43 483 D	33
43 500 D	98
43 503 D	97
43 514 D	119
43 525 DAXA	125
43 525 DAXA	184
43 527 DAX	127
43 528 D	118
43 533 DA	118
43 539 DA	118
43 546 D	84
43 548 D	88
43 549 D	85
43 550 D	85
43 551 D	85
43 552 DBX	85
43 578 D	87
43 579 D	87
43 580 D	87
43 617 DA	32
43 624 DA	159
43 630 D	155
43 630 D	157
43 630 D	165
43 630 D	168
43 631 D	154
43 631 D	156
43 631 D	163
43 631 D	167
43 642 D	154
43 642 D	160
43 645 D	154
43 645 D	159
43 645 D	164
43 645 D	168
43 645 D	172
43 650 D	79
43 651 DB	79
43 658 D	73
43 670 D	153
43 670 D	156
43 670 D	163
43 670 D	167
43 747 D	105
43 800 DA	100
43 919 DA	125
43 920 DAX	125
43 922 DAX	125
43 983 D	73
43 984 D	73
43 987 DB	13
45 097 D	25
45 223 DA	10
45 314 DC	14
45 488 D	65
45 569 D	53
45 569 D	58
45 569 D	65
45 574 D	10
45 634 D	50
45 634 D	65
45 640 DB	53
45 640 DB	57
45 640 DB	58
45 640 DB	63
45 640 DB	65
45 753 D	33
45 875 D	34
46 060 D	90
46 061 DA	90
46 061 DA	155
46 061 DA	160
46 061 DA	164
46 061 DA	168
46 061 DA	172
46 062 D	91
46 063 D	91
46 064 D	91
46 102 D	25
46 122 DXA	14
46 168 DB	39
46 168 DB	48
46 179 D	14
46 190 DC	38
46 190 DC	127
46 202 D	25
46 278 DAR	84
46 282 D	91
46 346 D	99
46 347 D	99
46 349 D	18
46 371 DX	90
46 385 DA	91
46 385 DA	184
46 411 DDX	18
46 411 DEX	18
46 412 D	50
46 412 D	65
46 503 D	88
46 512 DA	97
46 629 D	21
46 868 D	39
46 868 D	47
46 869 D	23
46 870 DA	18
46 871 D	13
46 871 D	137
46 924 D	34
46 939 D	33
46 942 D	34
46 943 D	33
46 943 DA	33
46 944 DA	32
46 947 DAX	32
46 949 D	32
46 950 D	32
47 232 DA	74
47 240 D	74
47 279 DA	57
47 280 D	91
47 281 D	89
47 281 D	154
47 281 D	155
47 281 D	156
47 281 D	157
47 281 D	165
47 281 D	168
47 282 DA	89
47 283 D	89
47 283 D	155
47 283 D	157
47 283 D	165

NUMERICAL INDEX

PART NUMBER	PAGE
47 283 D	168
47 284 D	89
47 284 D	154
47 284 D	155
47 284 D	156
47 284 D	157
47 284 D	165
47 284 D	168
47 285 D	89
47 285 D	154
47 285 D	155
47 285 D	156
47 285 D	157
47 285 D	165
47 285 D	168
47 286 D	89
47 286 D	154
47 286 D	155
47 286 D	156
47 286 D	157
47 286 D	165
47 286 D	168
47 289 DA	87
47 292 DX	48
47 293 DX	47
47 293 DY	47
47 293 DY	184
47 293 DZ	48
47 293 DZ	184
47 384 D	13
47 386 D	13
47 408 D	45
47 409 D	46
47 413 DX	184
47 413 DXC	45
47 417 DX	45
47 424 D	45
47 425 DX	46
47 425 DY	46
47 425 DY	184
47 427 D	46
47 428 DA	46
47 431 DB	46
47 432 D	46
47 433 DX	47
47 433 DX	184
47 438 DA	47
47 439 DAX	46
47 439 DAX	185
47 442 D	46
47 449 DAY	45
47 449 DAY	185
47 452 D	46
47 453 D	45
47 454 D	46
47 455 DAR	46
47 455 DAR	185
47 461 D	47
47 462 D	47
47 468 DA	47
47 470 D	48
47 473 D	47
47 474 D	47
47 475 DA	47
47 675 D	98
47 676 DR	98
47 679 D	98
47 683 DB	98
47 684 DB	99
47 691 DBX	19
47 701 DB	25
47 703 D	99
47 714 DX	84
47 716 D	84
47 822 D	48
47 845 DA	85
47 845 DA	118
47 851 DA	118
47 859 DA	118
47 905 D	94
47 906 DX	94
47 907 D	94
47 946 D	94
47 954 D	94
47 956 DCX	97
48 009 D	93
48 010 D	93
48 084 D	153
48 084 D	156
48 084 D	159
48 085 DBX	155
48 085 DBX	157
48 085 DBX	165
48 085 DBX	168
48 086 DX	155
48 086 DX	157
48 087 D	155
48 087 D	157
48 087 D	165
48 087 D	167
48 089 DA	153
48 089 DA	156
48 091 D	172
48 091 DA	154
48 091 DA	160
48 091 DA	164
48 092 D	155
48 092 D	160
48 092 D	164
48 092 D	172
48 093 D	155
48 093 D	160
48 094 D	154
48 094 D	159
48 094 D	163
48 102 D	153
48 102 D	159
48 102 D	164
48 102 D	168
48 102 D	172
48 103 D	153
48 103 D	159
48 103 D	164
48 103 D	168
48 103 D	172
48 104 DA	153
48 114 D	154
48 114 D	160
48 114 D	164
48 114 D	172
48 152 D	159
48 152 D	171
48 153 DA	159
48 259 DX	79
48 260 DA	79
48 274 DB	104
48 278 D	104
48 279 DXB	104
48 280 DB	104
48 286 DAXA	106
48 287 DX	106
48 288 D	105
48 289 DXA	105
48 290 DC	107
48 290 DC	185
48 339 D	47
48 340 DA	47
48 341 D	47
48 342 DA	47
48 343 D	46
48 427 D	87
48 472 DA	46
48 472 DA	48
48 473 D	48
48 474 D	48
48 475 D	48
48 554 D	84
48 567 D	87
48 600 D	174
48 602 D	174
48 616 DC	29
48 628 D	105
48 674 DA	25
48 697 DB	121
48 699 DX	121
48 707 D	74
48 776 D	101
48 831 DB	142
48 832 DB	142
48 833 DBX	87
48 834 DBX	87
48 861 DB	75
48 889 DA	142
48 892 DB	25
48 954 D	155
48 954 D	157
48 954 D	165
48 954 D	168
48 956 D	97
48 976 DA	110
49 005 D	118
49 039 DB	137
49 049 DX	9
49 115 D	109
49 115 D	112
49 116 D	109
49 116 D	112
49 117 D	109
49 117 D	111
49 118 DA	105
49 177 D	14
49 218 D	34
49 218 DA	34
49 219 D	34
49 219 DA	34
49 220 D	34
49 230 DX	77
49 235 D	77
49 279 D	13
49 279 D	58
49 279 D	66
49 287 DC	50
49 287 DC	66
49 288 DA	50
49 288 DA	66
49 291 D	50
49 291 D	66
49 297 DBX	87
49 298 D	88
49 299 DB	89
49 310 DA	95
49 313 DA	94
49 325 D	33
49 330 D	175
49 331 D	175
49 339 D	88
49 366 DA	93
49 367 DA	93
49 369 D	121

NUMERICAL INDEX

PART NUMBER	PAGE
49 370 DAX	121
49 371 DA	121
49 372 DBXA	123
49 372 DBXA	186
49 393 D	53
49 393 D	59
49 393 D	66
49 394 D	53
49 394 D	59
49 394 D	66
49 401 D	85
49 402 D	85
49 416 DX	45
49 416 DX	186
49 417 D	45
49 418 D	45
49 419 D	45
49 420 DX	45
49 423 D	45
49 424 D	45
49 488 D	87
49 489 D	87
49 492 D	87
49 493 D	87
49 593 D	46
49 601 D	77
49 605 DA	79
49 606 DBX	77
49 631 D	48
49 642 D	43
49 791 D	45
49 901 DX	95
49 903 D	94
49 923 D	78
49 924 D	78
49 947 D	78
50 046 D	34
50 061 D	78
50 237 DAX	73
50 389 D	79
50 410 DA	14
50 476 D	176
50 477 D	176
50 492 D	91
50 493 D	89
50 495 D	137
50 570 DC	120
50 581 D	120
50 582 D	120
50 583 D	121
50 586 D	120
50 586 DB	120
50 586 DB	186
50 587 D	120
50 587 DB	120
50 587 DB	186
50 619 DA	11
50 619 DA	186
50 768 D	48
50 769 D	48
50 770 D	48
50 859 DA	18
50 860 DB	18
50 861 DB	18
50 862 DB	18
50 929 DCX	66
50 929 DCY	66
50 929 DX	66
50 930 DX	59
50 930 DX	66
50 937 DX	66
50 939 DX	66
50 943 D	67
50 943 DX	67
50 943 DX	186
50 957 D	74
50 958 D	74
51 003 D	73
51 005 DX	98
51 005 DX	186
51 006 D	43
51 007 D	43
51 008 D	43
51 063 DA	59
51 063 DA	67
51 066 DC	78
51 110 DX	73
51 110 DX	187
51 144 DX	74
51 148 DX	74
51 149 DBX	73
51 149 DBX	187
51 177 DR	88
51 178 DBX	87
51 179 DX	119
51 182 D	121
51 188 D	16
51 188 D	132
51 189 D	16
51 189 D	132
51 261 D	121
51 280 DA	115
51 281 DA	115
51 285 D	46
51 293 D	118
51 298 D	127
51 299 DA	79
51 300 D	79
51 303 D	47
51 304 D	47
51 361 D	16
51 361 D	187
51 362 D	16
51 362 D	187
51 419 DC	136
51 420 DA	136
51 421 D	137
51 422 D	137
51 423 D	137
51 424 DA	137
51 425 DX	118
51 427 D	137
51 452 D	81
51 453 D	81
51 455 D	81
51 456 D	81
51 457 D	81
51 459 D	81
51 460 D	81
51 461 D	81
51 462 D	81
51 484 DX	154
51 484 DX	160
51 484 DX	164
51 484 DX	172
51 485 D	115
51 491 DA	33
51 494 DA	93
51 495 DD	78
51 496 DA	78
51 496 DAX	78
51 497 DAX	77
51 498 DX	77
51 507 D	118
51 510 D	137
51 582 DBX	118
51 582 DBX	187
51 666 D	45
51 667 D	45
51 689 D	67
51 690 D	67
51 770 D	67
51 777 DA	17
51 777 DA	188
51 778 DA	17
51 778 DA	132
51 998 D	57
51 998 D	59
51 998 D	63
51 998 D	67
51 999 DX	67
51 999 DX	188
52 030 DX	67
52 034 DA	128
52 034 DA	129
52 062 D	57
52 062 D	59
52 062 D	63
52 062 D	67
52 063 D	67
52 116 D	57
52 116 D	59
52 116 D	67
52 118 D	63
52 118 D	67
52 318 DA	49
52 318 DA	59
52 499 DB	29
52 506 DAX	137
52 507 D	137
52 521 D	25
52 521 DA	25
52 630 D	115
52 632 D	153
52 632 D	156
52 632 D	163
52 632 D	167
52 666 D	153
52 666 D	159
52 666 D	164
52 666 D	167
52 666 D	171
52 668 D	153
52 668 D	159
52 668 D	164
52 668 D	167
52 668 D	171
52 784 D	63
52 855 D	78
52 856 D	78
52 871 D	75
52 872 D	75
52 873 DA	116
52 889 D	117
52 892 DX	77
52 949 D	106
52 950 DA	101
52 951 D	101
52 952 D	101
52 953 DX	101
52 961 D	118
52 963 DX	73
52 963 DX	188
52 964 D	14
52 965 D	121
52 976 D	100
52 977 D	100
52 977 DA	100
52 977 DAX	100

NUMERICAL INDEX

PART NUMBER	PAGE
52 978 DA	101
52 979 DB	101
52 980 DX	100
52 980 DX	188
52 984 D	110
52 989 DA	122
52 990 DX	123
52 992 DX	122
53 001 DX	101
53 002 D	101
53 004 D	136
53 005 D	136
53 006 D	136
53 007 D	137
53 008 DA	136
53 077 D	17
53 077 D	132
53 078 D	17
53 078 D	132
53 159 D	15
53 180 DA	45
53 218 DX	100
53 276 D	188
53 385 DBX	19
53 393 D	79
53 515 D	154
53 515 D	160
53 515 D	164
53 515 D	168
53 515 D	172
53 517 DA	154
53 517 DA	160
53 517 DA	164
53 517 DA	168
53 517 DA	172
53 517 DAX	154
53 517 DAX	160
53 517 DAX	188
53 522 DA	52
53 523 D	52
53 524 D	53
53 525 DA	52
53 526 D	51
53 526 D	53
53 527 D	52
53 617 D	133
53 618 D	130
53 618 D	133
53 619 DC	137
53 620 D	137
53 628 D	132
53 628 DA	130
53 717 DA	87
53 771 D	29
53 772 D	31
53 773 D	31
53 774 D	30
53 776 D	30
53 777 D	30
53 778 D	31
53 779 D	30
53 780 D	30
53 781 D	30
53 782 D	31
53 783 D	30
53 784 D	30
53 786 D	31
53 787 D	31
53 788 DA	30
53 789 D	31
53 791 D	31
53 792 D	31
53 794 D	30
53 796 D	30
53 797 D	29
53 798 D	31
53 799 D	30
53 800 D	30
53 801 D	30
53 802 D	31
53 961 D	100
53 972 D	79
54 001 DX	155
54 001 DX	157
54 001 DX	165
54 001 DX	168
54 041 D	33
54 060 D	30
54 061 D	29
54 062 D	31
54 063 D	31
54 126 D	95
54 141 D	117
54 141 D	133
54 141 D	189
54 142 D	177
54 143 D	177
54 207 DB	43
54 281 D	17
54 281 D	189
54 282 D	17
54 282 D	189
54 486 D	78
54 651 D	29
55 015 D	46
55 211 D	85
55 212 D	85
55 242 DX	123
55 242 DX	125
55 245 DX	122
55 246 DX	125
55 314 D	33
55 348 D	142
55 398 DA	153
55 398 DA	156
55 398 DA	163
55 402 D	155
55 402 D	157
55 402 D	160
55 403 DA	159
55 403 DA	171
55 408 D	153
55 408 D	156
55 408 D	189
55 409 D	159
55 409 D	189
55 417 D	121
55 452 DAX	107
55 453 D	107
55 454 D	107
55 460 DC	113
55 460 DC	190
55 461 DD	106
55 461 DD	190
55 594 D	31
55 728 D	31
55 755 DB	18
55 757 D	67
55 757 DA	67
55 758 D	67
55 758 DA	67
55 759 D	68
55 760 D	68
55 764 DB	64
55 781 D	68
55 781 D	190
55 784 D	68
55 788 DA	119
55 802 D	30
55 855 D	45
56 066 DA	46
56 066 DA	190
56 082 D	156
56 106 DA	117
56 108 D	20
56 164 D	128
56 173 D	128
56 203 D	117
56 204 D	117
56 205 DA	116
56 206 DA	116
56 278 D	63
56 278 D	68
56 356 D	75
56 506 D	43
56 507 D	43
56 517 D	43
56 517 DX	42
56 519 D	43
56 618 DA	19
56 618 DA	190
56 620 DC	81
56 631 DA	190
56 631 DB	81
57 095 D	112
57 097 DD	113
57 098 DB	113
57 109 D	95
57 110 D	95
57 139 DA	105
57 152 D	177
57 153 D	177
57 257 DA	63
57 257 DA	68
57 258 DA	63
57 258 DA	68
57 261 DX	68
57 314 D	48
57 468 DE	13
57 481 DB	10
57 482 DB	10
57 575 D	84
57 576 DX	84
57 578 DX	84
57 579 DX	84
57 581 DA	85
57 581 DA	133
57 581 DA	191
57 735 DX	98
57 755 D	48
57 868 DB	191
57 869 DA	105
57 871 D	106
57 873 D	99
57 874 D	99
57 875 D	99
57 875 D	104
57 877 D	126
57 882 D	110
57 885 DA	116
57 889 D	59
57 889 D	68
57 890 DX	126
57 891 DX	126
57 892 D	125
57 894 D	113
57 895 D	112
57 926 DX	46
57 926 DX	191

NUMERICAL INDEX

PART NUMBER	PAGE
58 124 DBX	73
58 124 DBX	192
58 130 D	73
58 132 DAX	77
58 137 DX	77
58 138 DX	77
58 139 DAX	73
58 139 DAX	192
58 140 DAX	73
58 140 DAX	192
58 141 D	73
58 142 DX	98
58 143 DX	100
58 144 DX	74
58 145 DX	74
58 146 D	74
58 147 D	74
58 262 D	43
58 275 DC	11
58 275 DC	192
58 282 D	113
58 337 DAX	89
58 338 D	88
58 341 D	90
58 342 D	90
58 517 D	155
58 517 D	157
58 517 D	165
58 517 D	168
58 574 D	99
58 587 D	117
58 588 D	117
58 589 DA	117
58 590 DA	117
58 591 DA	117
58 592 D	117
58 593 DA	117
58 747 D	84
58 844 DA	93
58 845 DX	121
58 846 DXA	123
58 846 DXA	193
58 847 DX	123
58 849 D	122
59 206 D	140
59 279 D	106
59 279 DX	106
59 280 D	105
59 423 D	140
59 462 D	57
59 462 D	59
59 462 D	68
59 867 D	78
59 870 D	78
59 871 D	78
59 872 D	78
59 876 D	78
59 876 DX	78
60 069 D	97
60 094 D	46
60 251 DX	97
60 321 D	68
60 321 D	133
60 321 D	193
60 386 DR	106
60 387 D	106
60 388 DX	106
60 391 DA	99
60 393 DX	53
60 393 DX	59
60 393 DX	68
60 394 DX	53
60 394 DX	59
60 394 DX	68
60 399 DA	99
60 423 D	126
60 424 D	126
60 581 D	171
60 582 D	163
60 582 D	167
60 583 D	163
60 583 D	167
60 584 D	163
60 584 D	167
60 586 D	168
60 587 D	167
60 588 D	164
60 588 D	167
60 588 D	171
60 589 D	90
60 589 D	155
60 589 D	160
60 589 D	164
60 589 D	168
60 589 D	172
60 596 D	137
60 600 D	163
60 601 D	171
60 602 D	167
60 603 D	163
60 604 D	163
60 754 D	74
60 938 D	57
60 938 D	60
60 938 D	63
60 938 D	68
61 032 D	57
61 032 D	60
61 082 D	88
61 086 DX	97
61 086 DY	97
61 257 D	57
61 257 D	60
61 257 D	63
61 257 D	68
61 262 DX	60
61 265 D	165
61 265 D	168
61 340 D	193
61 469 DA	49
61 469 DA	60
61 478 DA	68
61 513 D	58
61 514 D	58
61 560 D	150
61 563 D	150
61 564 D	150
61 566 D	150
61 567 D	150
61 719 D	175
61 813 D	57
61 813 D	60
61 813 D	63
61 813 D	68
61 875 D	49
61 875 D	57
61 875 D	60
62 167 D	29
62 168 D	31
62 169 D	30
62 170 D	31
62 171 D	30
62 172 D	30
62 173 D	30
62 174 D	31
62 181 D	29
62 493 D	77
62 585 D	43
62 585 D	193
62 600 DA	82
62 600 DA	193
62 60C DAA	82
62 601 D	82
62 602 D	151
62 801 DC	42
62 866 D	9
63 059 DE	87
63 059 DE	194
63 153 D	82
63 154 D	82
63 156 D	82
63 157 D	82
63 158 D	82
63 158 DX	82
63 159 D	82
63 160 D	82
63 161 D	82
63 258 D	139
63 259 D	139
63 260 D	139
63 261 D	139
63 262 D	139
63 263 D	139
63 264 D	139
63 755 D	165
63 755 D	169
63 764 D	57
63 764 D	60
63 764 D	63
63 764 D	68
63 778 D	163
63 778 D	167
63 778 D	171
63 779 D	164
63 779 D	167
63 779 D	171
63 780 D	163
63 780 D	167
63 781 D	133
63 781 D	165
63 781 D	169
63 781 D	195
63 855 D	35
63 856 D	35
63 857 D	35
63 858 D	35
63 972 D	63
63 972 D	68
63 973 DX	82
63 974 D	82
63 975 D	82
64 177 D	140
64 178 D	140
64 508 D	18
64 771 D	82
64 982 D	117
64 983 D	116
65 054 DA	69
65 064 DA	38
65 421 D	136
65 423 D	137
65 426 D	136
65 428 D	136
65 429 D	136
65 430 D	136
65 431 D	137
65 463 D	173
65 814 D	151
66 184 D	154

NUMERICAL INDEX

PART NUMBER	PAGE
66 184 D	160
66 184 D	164
66 184 D	172
66 185 D	123
66 185 D	126
66 185 D	165
66 186 D	153
66 187 D	159
66 188 D	163
66 189 D	171
66 190 D	163
66 191 D	133
66 191 D	153
66 191 D	159
66 191 D	165
66 191 D	172
66 191 D	195
66 584 D	85
66 774 D	140
66 984 D	88
66 984 D	153
66 984 D	160
66 984 D	165
66 984 D	172
68 417 D	53
68 417 D	195
68 431 D	69
68 925 D X A	118
68 927 D A	118
69 113 D	78
69 398 D	48
69 401 D	27
69 402 D	27
69 438 D	99
69 439 D	99
69 442 D	97
69 752 D A	120
69 791 D	19
69 791 D	132
69 792 D	19
69 792 D	132
69 904 D	82
69 904 D X	82
69 904 D X	133
69 904 D X	195
69 905 D	82
69 911 D	150
69 911 D X	150
69 912 D	150
69 917 D	28
69 919 D	27
69 920 D	27
69 921 D	27
69 922 D	27
69 923 D	27
69 924 D	27
69 924 D	28
69 925 D	28
69 926 D	28
69 928 D	28
69 929 D	28
69 930 D	28
69 931 D	27
69 931 D	28
69 932 D	27
69 933 D	27
69 936 D	27
69 936 D	28
69 937 D	28
69 938 D	28
69 939 D	28
69 940 D	27
69 942 D	28
69 943 D	28
69 944 D	27
69 945 D	27
69 946 D	27
69 947 D	28
69 948 D	28
69 949 D	28
69 950 D	27
69 951 D	28
69 952 D	28
69 953 D	27
69 954 D	27
69 955 D	28
69 956 D	27
69 957 D	28
69 957 D	132
69 961 D	28
69 961 D	132
69 961 D	195
69 962 D	132
69 962 D A	28
69 963 D	27
69 964 D	28
69 964 D	132
69 965 D	27
69 966 D	27
69 967 D	27
69 968 D	28
69 969 D	28
69 970 D	27
69 971 D	27
69 972 D	27
69 973 D	28
70 119 D	173
70 136 D	23
70 144 D	28
70 182 D	18
70 200 D	23
70 202 D	23
70 203 D	23
70 204 D	23
70 206 D	23
70 207 D	23
70 208 D	23
70 209 D	23
70 212 D	23
70 312 D	150
70 313 D	150
70 335 D B	107
70 335 D B	196
70 356 D	19
70 356 D	132
70 357 D	132
70 357 D A	19

E

PART NUMBER	PAGE
E 4 212	47
E 4 216	45
E 4 226	46
E 4 295	45
E 4 A 305	47
E 4 A 324	46
E 4 A 358	48
E 4 A 372	47
E 4 A 546	46
5 049 E	145
5 050 E	145
5 051 E	145
5 053 E A	144
5 054 E	144
5 055 E	144
5 056 E	149
5 057 E	149
5 058 E	149
5 059 E	149
5 060 E	147
5 061 E A	147
5 062 E A	147
5 063 E	147
5 064 E	147
5 065 E	149
5 072 E	149
15 180 E A X	143
15 180 E A X	145
15 181 E	145
15 182 E	145
15 183 E	145
15 184 E	145
15 185 E	145
15 186 E	145
15 187 E	145
15 188 E	145
15 189 E	145
15 190 E X	145
15 191 E	145
15 192 E	145
15 193 E	145
15 199 E	149
15 200 E C X	143
15 200 E C X	147
15 200 E C X	149
15 200 E X	143
15 200 E X	147
15 200 E X	149
15 203 E A X	149
15 204 E	149
15 205 E	147
15 206 E A	147
15 209 E X	149
15 210 E	147
15 211 E	147
15 212 E	144
15 213 E	144
15 214 E	144
15 215 E	144
15 216 E	144
15 217 E	144
15 218 E	149
15 219 E	144
15 220 E	149
15 221 E	149
15 222 E	149
15 223 E	149
15 224 E	149
15 225 E	149
15 228 E	149
15 229 E	149
15 230 E	144
15 231 E	147
15 234 E	147
15 236 E A X	147
15 237 E X	149
15 238 E X	144
15 239 E	144
15 241 E	147
15 243 E	147
15 245 E	145
15 250 E C X	149
15 250 E D X	143
15 250 E D X	147
15 250 E X	143
15 250 E X	147
15 250 E X	149

NUMERICAL INDEX

PART NUMBER	PAGE
15 263 EDX	143
15 264 EEX	143
15 266 EX	147
15 271 E	147
15 272 E	149
15 275 E	149
15 277 E	149
15 278 EX	149
15 280 E	149
15 281 EX	149
15 282 EAX	149
15 344 EX	149
15 350 EX	133
15 350 EX	147
15 350 EX	197
15 351 E	147
15 352 E	147
15 353 E	147
15 354 E	147
15 355 E	147
15 536 E	149
15 537 E	149
G	
G 1 123	21
G 3 243	25
G 8 603	25
H	
H 1 290	85
3 405 H	21
6 830 H	57
6 830 H	60
6 830 H	63
6 830 H	69
7 472 H	57
7 472 H	60
14 611 H	32
21 491 H	167
26 453 HX	69
27 485 H	144
27 999 H	21
32 606 H	23
34 745 H	69
35 631 H	21
35 647 H	21
35 651 H	15
37 762 H	38
38 763 H	9
39 142 H	139
41 300 HA	21
42 098 H	90
42 099 H	90
54 630 H	109
54 630 H	111
54 631 H	105
54 631 H	111
54 632 H	107
54 632 H	111
63 441 H	153
63 441 H	156
63 441 H	163
63 441 H	167
64 022 H	42
64 022 H	43
71 913 H	147
79 407 H	53
79 408 H	53
93 082 H	25
93 082 H	139
93 082 H	142
94 039 H	30
95 022 H	90
140 249 H	151
P	
PO 16 480	116
PO 16 480	117
PO 16 481	115
PO 16 481	116
Q	
Q 103	79
Q 103	147
Q 243	137
Q 391	66
Q 391	74
Q 397	50
Q 397	79
Q 1 329	149
Q 1 520	50
Q 1 520	65
Q 1 538	106
Q 1 538	107
Q 1 538	122
Q 1 538	123
Q 1 538	125
Q 1 552	175
Q 1 597	75
Q 3 478	154
Q 3 478	160
Q 3 478	164
Q 3 478	168
Q 3 478	172
Q 3 479	118
Q 3 673	100
Q 3 803	128
QA 3 803	129
Q 5 013	147
R	
12 282 R1	121
12 456 R1	14
12 876 R1	145
13 000 R1	60
13 000 R1	137
13 000 R1	147
13 001 R1	53
13 001 R1	58
13 001 R1	64
13 001 R1	121
13 001 R1	137
13 001 R1	139
13 001 R1	140
13 001 R1	142
13 001 R1	145
13 001 R1	147
13 002 R1	101
13 002 R1	112
13 002 R1	119
13 002 R1	121
13 002 R1	127
13 254 R1	142
13 254 R1	147
13 269 R1	140
13 296 R1	123
13 296 R1	125
13 296 R1	126
13 338 R1	174
13 400 R1	115
13 416 R1	174
13 472 R1	175
15 176 R1	176
15 176 R1	177
15 314 R1	177
15 348 R1	176
15 348 R1	177
16 149 R1	177
16 154 R1	113
16 157 R1	177
16 242 R1	73
16 257 R1	95
50 817 R1	90
50 818 R1	90
50 988 R91	133
250 466 R92	69
250 846 R91	34
251 066 R1	14
251 067 R1	14
251 175 R11	25
251 538 R1	41
251 553 R1	38
251 553 R1	39
251 553 R1	45
251 555 R1	48
251 587 R92	18
251 587 R92	197
251 589 R91	19
251 589 R91	197
251 591 R1	48
251 645 R91	23
251 645 R91	197
251 647 R91	23
251 647 R91	197
252 739 R1	41
259 402 R91	78
259 403 R91	78
350 007 R1	121
350 342 R91	151
350 478 R1	52
350 483 R91	151
350 484 R1	151
350 485 R1	151
350 486 R91	151
350 488 R1	151
350 489 R91	151
350 490 R1	151
350 491 R1	151
350 500 R91	153
350 500 R91	156
350 500 R91	163
350 500 R91	167
350 501 R91	88
350 515 R1	120
350 516 R1	73
350 522 R1	112
350 523 R1	115
350 523 R1	116
350 551 R1	60
350 596 R1	117
350 597 R1	117
350 603 R91	105
350 603 R91	198
350 604 R91	106

NUMERICAL INDEX

PART NUMBER	PAGE
350 604 R91	198
350 621 R1	77
350 639 R91	87
350 708 R1	14
350 750 R91	75
351 058 R11	88
351 059 R1	89
351 060 R1	89
351 061 R1	89
351 062 R1	89
351 063 R11	88
351 064 R1	88
351 065 R1	88
351 145 R91	69
351 217 R12	18
351 218 R91	45
351 297 R92	82
351 448 R1	81
351 467 R91	82
351 555 R1	113
351 556 R92	109
351 626 R1	154
351 626 R1	156
351 626 R1	163
351 626 R1	167
351 627 R1	153
351 627 R1	156
351 627 R1	163
351 627 R1	167
351 655 R11	25
351 655 R11	198
351 693 R91	40
351 778 R1	33
351 808 R91	198
351 808 R92	95
351 815 R1	98
351 816 R1	88
351 819 R1	95
351 820 R91	97
351 821 R1	104
351 822 R1	155
351 822 R1	160
351 822 R1	164
351 822 R1	172
351 823 R2	95
351 824 R2	95
351 825 R1	94
351 826 R1	93
351 852 R2	85
351 962 R11	14
351 975 R1	153
351 975 R1	164
351 975 R1	171
352 014 R1	25
352 014 R1	130
352 036 R91	21
352 036 R91	198
352 057 R1	21
352 085 R92	21
352 085 R92	198
352 154 R91	69
352 265 R1	69
352 277 R11	41
352 284 R2	40
352 293 R1	41
352 298 R1	41
352 301 R1	41
352 302 R1	41
352 380 R91	107
352 380 R91	111
352 381 R91	107
352 381 R91	111
352 387 R91	105
352 387 R91	111
352 388 R91	105
352 388 R91	112
352 394 R1	109
352 394 R1	111
352 395 R1	109
352 395 R1	112
352 521 R11	9
352 522 R1	33
352 526 R1	112
352 580 R1	73
352 581 R1	73
352 606 R93	118
352 701 R91	27
352 701 R91	28
352 719 R94	13
352 719 R94	199
352 744 R91	81
352 745 R1	81
352 747 R92	18
352 747 R92	199
353 051 R91	48
353 051 R91	199
353 076 R1	147
353 077 R91	81
353 077 R91	199
353 078 R91	81
353 149 R93	131
353 150 R93	131
353 155 R93	131
353 156 R93	131
353 171 R91	46
353 172 R91	40
353 197 R91	69
353 197 R91	200
353 198 R91	60
353 198 R91	200
353 242 R91	81
353 243 R91	81
353 244 R1	81
353 245 R91	81
353 246 R91	81
353 246 R91	200
353 329 R91	155
353 329 R91	157
353 329 R91	165
353 329 R91	169
353 409 R91	141
353 509 R92	107
353 509 R92	111
353 510 R92	107
353 510 R92	111
353 517 R92	105
353 517 R92	111
353 518 R92	105
353 518 R92	112
353 525 R1	109
353 525 R1	111
353 526 R1	109
353 576 R91	33
353 609 R1	14
353 632 R91	141
353 637 R91	141
353 639 R1	141
353 744 R91	201
353 758 R1	141
353 855 R1	129
353 858 R91	129
353 861 R91	129
353 862 R1	129
353 863 R1	129
353 864 R1	129
353 867 R1	129
353 870 R91	39
353 874 R91	39
353 889 R1	39
353 890 R91	39
353 890 R91	40
353 894 R1	41
353 895 R1	41
353 896 R91	40
353 898 R11	41
353 899 R1	41
353 900 R11	40
353 901 R2	40
353 902 R1	41
353 903 R2	40
353 905 R1	40
353 906 R1	40
353 907 R1	40
353 908 R91	41
353 915 R91	41
353 918 R1	41
353 928 R91	41
353 933 R11	39
353 934 R11	39
353 936 R2	39
353 937 R1	39
353 938 R91	39
353 938 R91	201
353 942 R11	39
353 976 R91	38
353 977 R91	38
353 978 R91	38
353 982 R91	38
353 983 R91	38
353 985 R91	38
353 986 R91	38
353 989 R91	38
353 990 R91	38
353 991 R91	38
353 992 R91	38
354 076 R92	7
354 079 R92	7
354 082 R92	7
354 143 R91	78
354 210 R91	63
354 210 R91	69
354 214 R91	63
354 214 R91	69
354 473 R91	63
354 473 R91	69
354 474 R91	132
354 474 R91	201
354 552 R1	41
354 643 R11	88
354 763 R91	31
354 763 R91	132
354 763 R91	201
354 800 R92	105
354 873 R92	115
354 874 R92	116
354 881 R1	15
354 895 R92	202
354 909 R1	84
354 910 R91	84
355 001 R1	133
355 001 R91	107
355 009 R91	35
355 079 R91	63
355 079 R91	69
355 141 R91	78
355 142 R92	78
355 143 R1	167
355 196 R91	69
355 196 R92	63

NUMERICAL INDEX

PART NUMBER	PAGE
355 261 R91	38
355 274 R11	18
355 275 R11	18
355 291 R11	18
355 292 R11	18
355 460 R1	41
355 476 R1	32
355 477 R91	32
355 724 R91	41
355 735 R91	21
355 740 R1	91
355 775 R1	118
355 782 R91	63
355 782 R91	69
355 790 R1	91
355 793 R91	91
355 888 R1	78
355 931 R91	75
355 931 R91	202
355 934 R91	75
356 004 R91	142
356 062 R91	69
356 248 R91	140
356 254 R91	140
356 304 R11	18
356 305 R11	18
356 306 R11	18
356 307 R11	18
356 311 R91	18
356 311 R91	202
356 315 R91	16
356 315 R91	132
356 316 R91	16
356 316 R91	202
356 317 R1	15
356 552 R91	101
356 552 R91	133
356 552 R91	203
356 553 R91	101
356 553 R91	133
356 553 R91	203
356 568 R1	100
356 569 R1	98
356 583 R1	11
356 583 R11	11
356 588 R1	11
356 609 R1	104
356 622 R11	45
356 637 R91	16
356 637 R91	132
356 639 R91	17
356 639 R91	132
356 641 R91	17
356 641 R91	132
356 642 R91	16
356 642 R91	203
356 643 R91	17
356 643 R91	203
356 647 R91	17
356 647 R91	203
356 649 R91	16
356 649 R91	133
356 651 R91	17
356 651 R91	133
356 653 R91	17
356 653 R91	133
356 654 R91	16
356 654 R91	203
356 655 R91	17
356 655 R91	133
356 655 R91	203
356 656 R91	17
356 656 R91	204
356 686 R91	45
356 686 R92	38
356 686 R92	39
356 694 R92	38
356 725 R93	13
356 745 R91	34
356 745 R91	133
356 745 R91	204
356 917 R91	63
356 936 R91	50
356 936 R91	69
356 936 R91	204
356 937 R91	50
356 937 R91	69
356 938 R91	50
356 938 R91	69
356 939 R91	50
356 939 R91	69
356 979 R1	13
357 215 R1	164
357 215 R1	168
357 215 R1	172
357 232 R1	14
357 232 R1	84
357 232 R1	91
357 289 R91	9
357 290 R91	9
357 290 R91	10
357 291 R91	9
357 292 R91	9
357 292 R91	10
357 374 R1	9
357 375 R91	150
357 432 R1	33
357 433 R91	33
357 470 R91	95
357 538 R91	87
357 548 R1	13
357 648 R1	21
357 676 R91	19
357 676 R91	132
357 677 R91	19
357 677 R91	132
357 844 R91	69
357 870 R91	73
357 884 R91	51
357 884 R91	63
357 937 R1	14
357 957 R1	78
357 958 R1	78
358 208 R1	163
358 208 R1	167
358 392 R91	155
358 392 R91	157
358 392 R91	165
358 392 R91	168
358 562 R91	63
358 562 R91	65
358 572 R91	43
358 615 R1	21
358 890 R91	51
358 891 R91	51
358 892 R91	51
358 894 R91	51
359 035 R91	13
359 035 R91	205
359 036 R91	13
359 036 R91	17
359 036 R91	132
359 037 R91	17
359 037 R91	205
359 170 R11	73
359 257 R91	100
359 320 R91	140
359 323 R91	65
365 000 R11	88
365 001 R11	94
365 002 R11	97
365 002 R11	100
365 003 R11	155
365 003 R11	157
365 003 R11	165
365 003 R11	168
365 043 R1	15
365 061 R1	15
365 109 R1	35

S

		PAGE
ST	202	91
ST	205 A	88
ST	205 A	94
ST	212	164
ST	212	167
ST	212	171
ST	213 T	89
ST	213	154
ST	213	155
ST	213	157
ST	213	159
ST	213	160
ST	213	164
ST	213	165
ST	213	168
ST	213	172
ST	225 BT	101
ST	239	93
ST	246	88
ST	278	94
ST	278	101
ST	287	97
ST	288	98
ST	307	47
ST	600	46
ST	601	46
ST	602	46

T

	PAGE
1 998 TA	21
4 376 T	100
5 526 T	100
7 210 T	91
7 225 T	153
7 225 T	159
7 225 T	164
7 225 T	171
7 255 T	167
7 699 TM	21
7 911 T	81

U

	PAGE
U 5 349	147

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
V					
10 430 V	18				
10 815 V	57				
10 815 V	60				
11 154 VA	22				
12 470 VA	22				
13 823 V	105				
13 823 V	112				
20 090 VB	81				
22 910 V	149				
53 795 V	81				
53 972 VA	91				
62 786 VX	23				
Y					
1 094 Y	90				
1 095 Y	90				
1 408 YC	69				

INTERNATIONAL HARVESTER